 


Guide

This manual was scanned by
and available FREE at www.Iconic-AV.co.uk

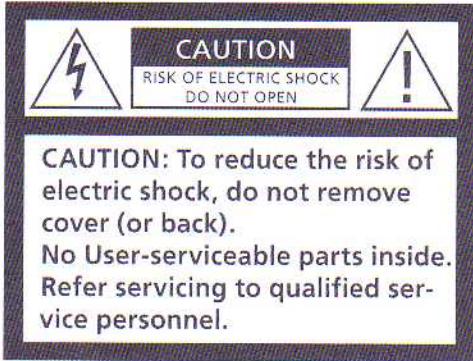

WARNING: To prevent fire or electric shock, do not expose this appliance to rain or moisture. Do not expose this equipment to dripping or splashing and ensure that no objects filled with liquids, such as vases, are placed on the equipment.

To completely disconnect this equipment from the AC Mains, disconnect the power supply cord plug from the AC receptacle.



This symbol indicates that a dangerous voltage constituting a risk of electric shock is present within this unit.



This symbol indicates that there are important operating and maintenance instructions in the literature accompanying this unit.

For the Canadian market only:

CAUTION: To prevent electric shock do not use the polarized plug, attached to this apparatus, with an extension cord, receptacle or other outlet unless the blades can be fully inserted to prevent blade exposure.

This class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Placing your music system, 4

Find out how to place your BeoCenter 2 and the Socket unit.

Connect the cables, 6

Find out how to connect all cables to the Socket unit.

Mounting the wall bracket, 8

Find out how mount the optional wall bracket for the Socket unit.

Audio/Video system, 10

Find out how set up your products to the correct option and operate different Audio/Video systems.

Looking after your music system, 12

Find out how to clean your system and your discs.

Index, 13

Placing your music system

Make sure that the music system is set up, placed and connected in accordance with the instructions in this guide.

We recommend that you follow this procedure when you set up your music system:

- 1 Connect the cable between the Master unit and the Socket unit
- 2 Connect all cables to the sockets in the Socket unit – remember not to connect it to the mains yet
- 3 Lead the cables through the opening at each end of the Socket unit
- 4 Mount the cover for the sockets on the Socket unit
- 5 Connect the products to the mains

If you wish to mount the Socket unit on a wall bracket, refer to the following pages.

Placing the Master unit and the Socket unit...

Place your music system on a firm surface, preferably on the table, sideboard or stand where you want it placed permanently.

Do not place any items on top of BeoCenter 2.

The music system is designed for indoor use in dry, domestic environments only, and for use within a temperature range of 10–40° C (50–105° F).

 
Avoid placing the system in direct sunlight, near radiators or other sources of heat.

Do not connect any of the products in your system to the mains, until you have connected all the cables (refer to page 6).


If the Socket unit is placed close to the floor, it is best to connect all the necessary cables to the Socket unit before you mount it on the wall bracket. Also make sure that there is room enough to detach the Socket unit from the wall bracket again.

Before mounting the wall bracket, ensure that all cables have the proper length.

The Socket unit can be placed vertically or horizontally, for example on the floor – however, the need for ventilation must be observed. If required, the Socket unit can be fastened to the wall with the enclosed wall bracket (refer to page 8).

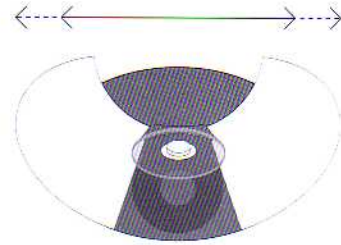

 Remember to leave enough space at the sides for the doors to open.

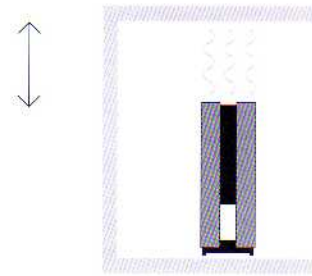

To ensure proper ventilation, allow for at least 5 centimetres (2") of space at the sides of the Socket unit and 10 centimetres (4") above the unit. The Socket unit must under no circumstances be covered by for example insulation material.

