

BeoCom 6000

Guide

This manual was scanned by
and available FREE at www.lconic-AV.co.uk

BANG & OLUFSEN



This Guide contains instructions in how to use the BeoCom 6000 handset with either a BeoLine ISDN, a BeoLine PSTN or a BeoCom 6000 base.




ISDN or PSTN?

ISDN and PSTN are two different telephone line networks. PSTN (Public Switched Telephone Network) is the most common network. ISDN (Integrated Services Digital Network) is a network which, for example, allows you to send and receive data digitally over the telephone line from an Internet service provider during a telephone call *on the same line*. BeoCom 6000 is compatible with both PSTN and ISDN.

 
How to use this Guide

Use this Key to identify what a button or status display looks like in an instruction sequence.

Keys on the handset:

-  The wheel
- OK** The key in the middle of the wheel
-  The phone key, which starts or ends a call
- 0 – 9** The digit keys
-  The standby key, which gives access to additional functions

The handset display:



SET CLOCK?
00:00 1.JAN

Contents

Get started with BeoCom 6000, 6

Find out how to register BeoCom 6000 to a base, name the handset, set the time and date, charge the handset battery, interpret the indicator lights on the handset and base, use the handset keys and navigate using the menu system and the handset display. The chapter also contains information about maintenance of BeoCom 6000 and accessories available from your Bang & Olufsen retailer.

Daily use, 18

Find out how to make and answer calls, adjust the handset volume, make calls from the Phonebook, Caller ID and Redial lists, store a number in the Phonebook after a call, lock the handset keypad, and use Call Waiting.

Advanced operations, 25

Find out how to enter, edit and delete names and numbers in the Phonebook, store numbers from the Redial and Caller ID lists, call and store extension numbers, and adjust the volume level of some Bang & Olufsen audio or video products.

System use with several handsets, 32

Find out how to make a handset personal or common, call another handset, forward external calls and make a three-party call.

If you have a BeoLine ISDN base..., 37

Find out about ISDN services and functions specific to the BeoLine ISDN base: Multiple Subscriber Numbers (MSN), Call Forwarding (CFU), Withheld Number (CLIR and COLR), Call Waiting, Terminal Portability (TP) and Three-party call.

**This manual was scanned by
and available FREE at www.lconic-AV.co.uk**

Preference settings, 48

Find out how to register a handset to a base manually, choose a base, change the PIN code for the base, and cancel the registration of a handset to a base. The chapter also includes an overview of the Handset/Base, Ringer and Setup menus.

For your information..., 54


This chapter contains technical data for the BeoCom 6000, an overview of display messages, a troubleshooting section, special information about your BeoCom 6000 and a description of the conditions under which the product guarantee applies.

Index, 61

Find the specific subject you want to know more about.

Get started with BeoCom 6000

Base indicator light

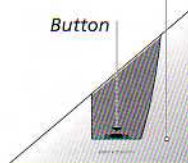

The BeoCom 6000 base. The PARK number identifying the base is visible on the bottom. Check this number against the number in the handset display.

First-time registration of the handset to a base

In order for the base and the handset to communicate, the handset must be registered to the base. Up to 6 handsets can be registered to one base, and each handset can be registered to up to 4 bases. To register a handset, follow the procedure corresponding to the type of base you have:

If you have a BeoCom 6000 base...

Press and hold the button on the base for two seconds. The indicator light flashes red, and the base is ready for registration for five minutes

- Press to switch on the handset

) Press to be able to register the handset.
 REGISTER BASE? REGISTER BASE? is shown in the display

- OK Press to continue. The handset searches for an open base

BASE 01/01 When a base is located, the PARK number identifying the base is shown. Check the number against the number on the bottom of the base
 36-000077123456

- If the numbers do not match, turn the wheel to view the available bases. If the desired base is not shown, open the base for registration once more and repeat the procedure. Otherwise...

- OK Press to register the handset to the base

- 0 - 9 If the base prompts you for a PIN code, enter the PIN code and press OK. The display tells you when registration is complete
- OK

**This manual was scanned by
 and available FREE at www.lconic-AV.co.uk**

