



Beocord

3300

This manual was scanned by
and available FREE at www.Iconic-AV.co.uk

Bang & Olufsen

  Beosystem 3300

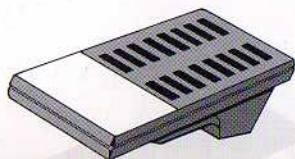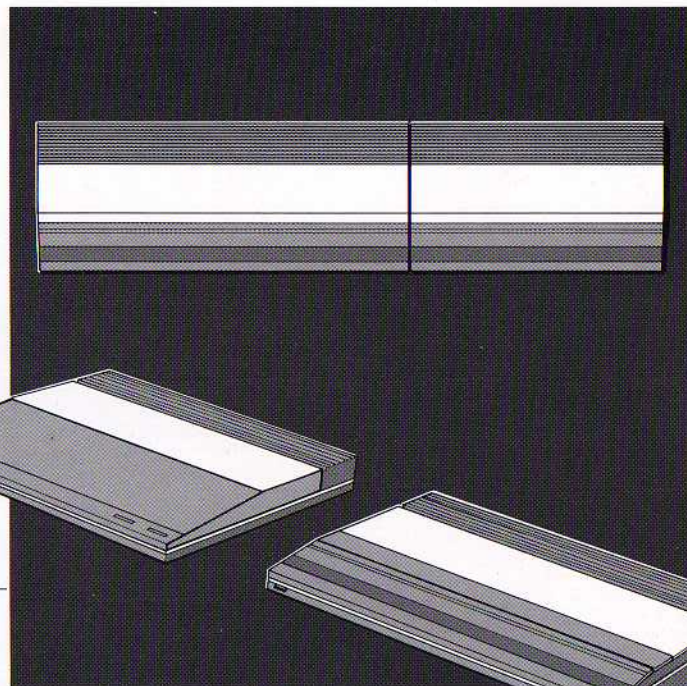

This manual was scanned by
and available FREE at www.Iconic-AV.co.uk

 
The Beocord 3300 is the tape recorder designed for the Beosystem 3300. The other units in the Beosystem 3300 are:

- the Beomaster 3300 tuner/amplifier*
- the Terminal 3300 remote control*
- the Beogram CD 3300 compact disc player*
- the Beogram 3300 record player*

The sloping sensi-touch panel on the front gives access to all the primary functions. All you have to do is touch the area below the appropriate text or symbol.

The cassette compartment is under the hinged aluminium lid, where you will also find the secondary functions. To open the lid press the extreme left-hand side of the narrow front strip. Close the lid again by pressing it down gently until you hear a 'click'.

If connected to the Beomaster 3300, the Beocord 3300 can be remote controlled using the Terminal 3300. For details about remote control, please refer to the Beomaster 3300 manual.

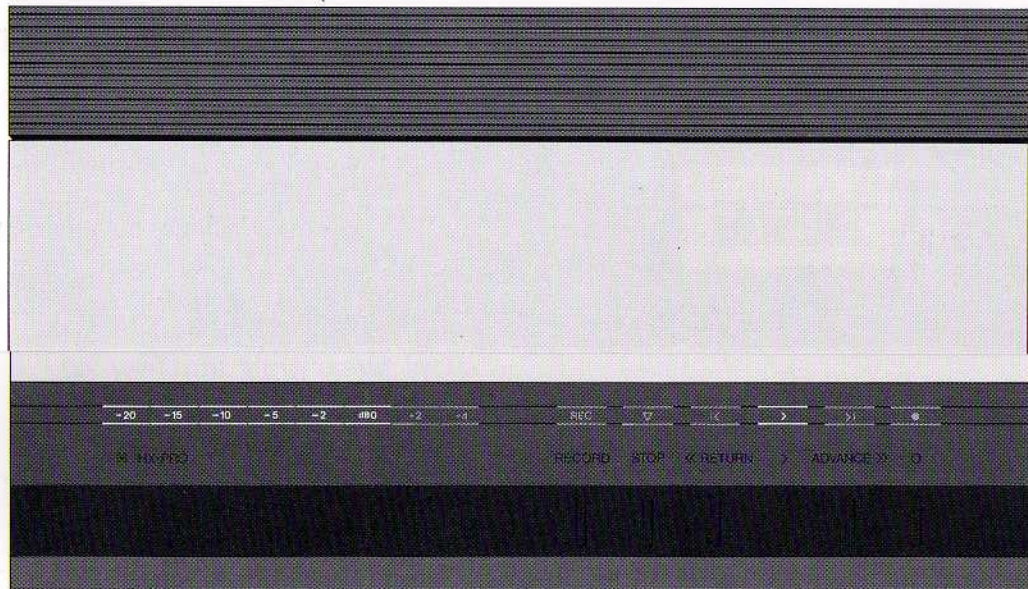

This manual was scanned by
and available FREE at www.Iconic-AV.co.uk

