

The BeoCord VX 7000 video tape recorder features all the Bang & Olufsen qualities: A carefully selected range of features, simple and straightforward operation, integration and interactive operation, and – of course – a design to match your BeoVision TV.

The BeoCord VX 7000 was designed to be used with the BeoVision MX 7000 / 6000 / 4000 and LX 6000 / 5000 TVs, but you may use it with other Bang & Olufsen TVs as well.

Operating the multiplicity of functions in the BeoCord VX 7000 is easy. All you need is to press a few buttons on your Beo4 remote control.

This guide explains how...

This guide explains how to operate your BeoCord VX 7000 video tape recorder using the Beo4 remote control.


Before you can start using the BeoCord VX 7000 as described in this guide, you must set it up in accordance with the instructions in the small Setting-up guide which is also enclosed with the video tape recorder. Beware of the section *Using other TVs* in the Setting-up guide, and of pages 30-31 in this guide. Then please refer to page 6, *Before you start*, in this guide.

Note: Maintenance instructions and instructions for using other video equipment with the video tape recorder are also found in the Setting-up guide.

- 4 BeoCord VX 7000 close-up**
- 5 Remote operation**
- 6 Starting out...**
 - 7 *Using the on-screen menus*
 - 8 *Fine tuning the VX 7000*
 - 9 *Setting the time*
 - 10 *Setting your preferences*
- 12 Daily operations**
- 15 Recording on video tape**
 - Instant recording*
 - 16 *Recording one – watching another*
 - 18 *Timer recording*
- 22 Using the tape list**
 - 23 *Naming your recordings*
- 24 Special video functions**
 - Adjusting the video picture*
 - 25 *Selecting sound track*
 - 26 *Adjusting the recording level*
 - Audio-only recording*
 - 27 *Using auxiliary video equipment*
 - Copying tapes*
- 28 On-screen status displays**
- 30 BeoCord and BeoVision TV**
- 31 *Tuning the VX 7000 – manually*

The two buttons on the front of the BeoCord VX 7000 allow you to unload tape cassettes and to start and stop playback of the tape you have loaded.

Each of the red display indications on the front gives you information about the video tape recorder...

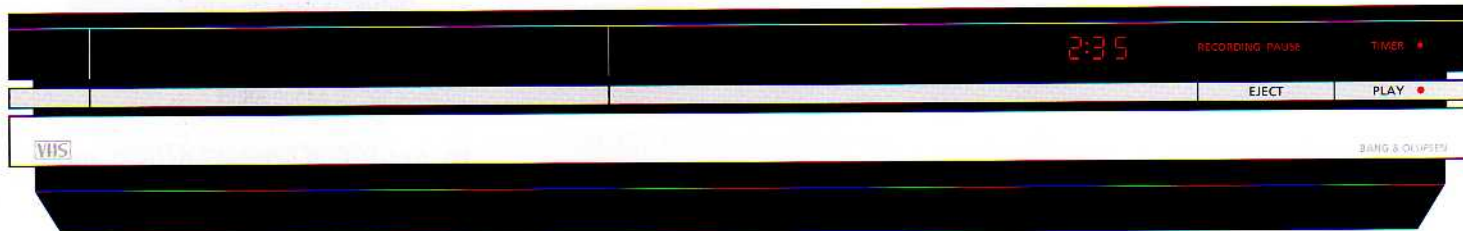

Displays

2:35

Indicates the counter position on the tape: *Track number, Time left or Time used* (see pages 10-11).

RECORDING PAUSE

Indicates that the VX 7000 is switched to recording pause.

The display changes to RECORDING when recording starts.

TIMER

Indicates that a timer recording has been programmed into the VX 7000.

TIMER blinks if a timer recording is prevented from being executed.

●

Stand-by indicator.

The red stand-by indicator also serves as a recording level indicator for external sources.

Buttons

EJECT

Unloads the video cassette you have loaded into the BeoCord VX 7000.

PLAY ●

Starts playing the tape. Stops the tape if it is already playing.

'Panic button'

If the button is held for more than a second, the video tape recorder switches off immediately, stopping any function in progress.

Loading a tape

Tapes must be loaded into the compartment in the left-hand side on the front of the BeoCord VX 7000.

Load the cassette with the small arrow on the cassette uppermost and pointing toward the compartment opening. Push the cassette through the door until you feel the mechanism drawing it all the way into the compartment.

This manual was scanned by
and available FREE at www.iconic-AV.co.uk

Note: See the Setting-up guide which is also enclosed with the BeoCord VX 7000 for details of switches and sockets on the rear panel.

