

 
 
# Beogram

## 3300

This manual was scanned by  
and available FREE at [www.Iconic-AV.co.uk](http://www.Iconic-AV.co.uk)

**Bang & Olufsen**

# Beosystem 3300

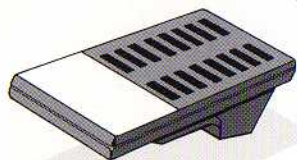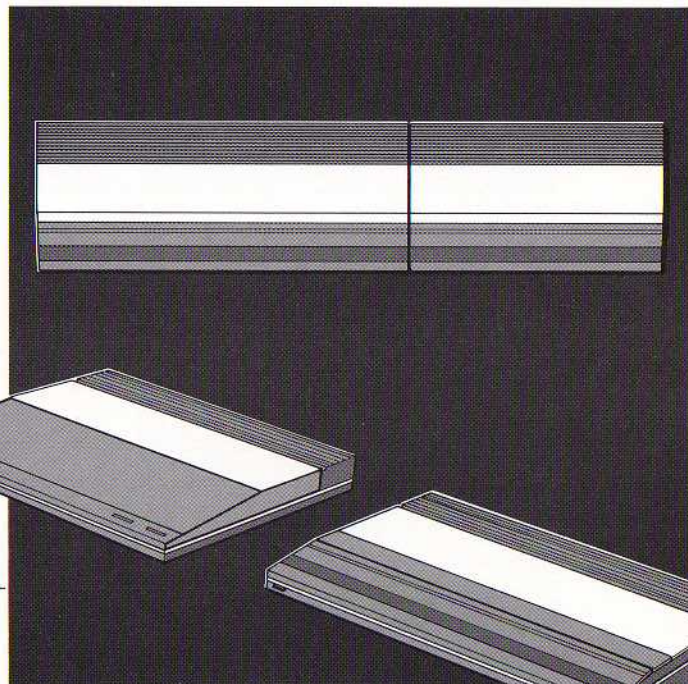


This manual was scanned by  
and available FREE at [www.Iconic-AV.co.uk](http://www.Iconic-AV.co.uk)

**T**he Beogram 3300 is the record player designed for the Beosystem 3300. The other units in the Beosystem 3300 are:

- the Beomaster 3300 tuner/amplifier
- the Terminal 3300 remote control
- the Beocord 3300 tape recorder
- the Beogram CD 3300 compact disc player

The controls on the Beogram 3300 are in the form of "rocker" buttons. The graphics immediately above the buttons indicate which end to press to carry out the corresponding function.

 If connected to the Beomaster 3300, the Beogram 3300 can be remote controlled using the Terminal 3300. For details about remote control, please refer to the Beomaster 3300 manual.

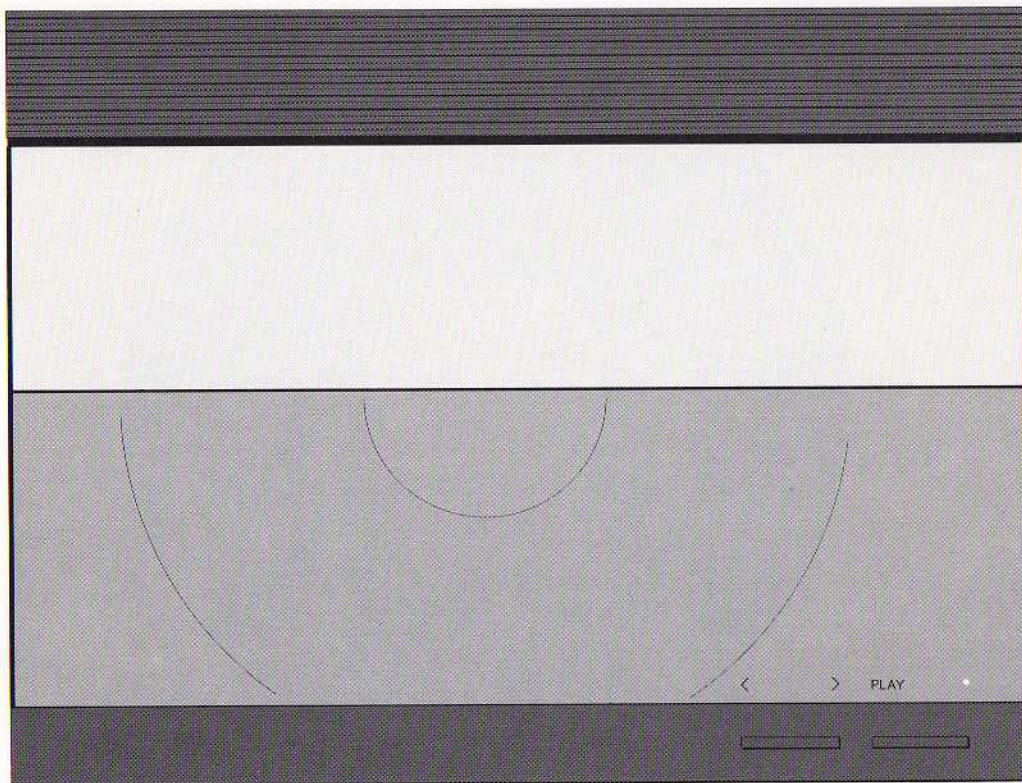

This manual was scanned by  
and available FREE at [www.Iconic-AV.co.uk](http://www.Iconic-AV.co.uk)

**Setting up, 4**

**Playing a record, 7**

**Maintenance, 10**

**Technical specifications, 11**



This manual was scanned by  
and available FREE at [www.lconic-AV.co.uk](http://www.lconic-AV.co.uk)

# How to use this manual

- This manual explains how to set up and operate the **Beogram 3300** record player.
- The instructions refer to the buttons under the dust cover. Each function is indicated by a small box with the appropriate text or symbol inside it.

## For the UK market only

### IMPORTANT

The wires in the mains lead supplied with this apparatus are coloured in accordance with the following code:

**Blue: Neutral**

**Brown: Live**

As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug proceed as follows:

The wire which is coloured blue must be connected to the terminal which is marked with the letter **N** or coloured **black**.

The wire which is coloured brown must be connected to the terminal which is marked with the letter **L** or coloured **red**.

Ensure that your equipment is connected correctly. If you are in any doubt, consult a qualified electrician.

 
# Table of contents

<b>Setting up</b>	4
Loosening the transport screws	4
Making the record player ready for play	4
Where to put the record player	5
Connection to the Beomaster	5
Stand-by mode	5
Adjusting stylus pressure	6
<b>Playing a record</b>	7
Start playing	7
Setting speed	7
Pausing	8
Stepping through the record	8
Stop playing	8
Repeating a record	9
Operating the record player with the dust cover closed	9
<b>Maintenance</b>	10
Stylus	10
Surfaces	10
<b>Technical specifications</b>	11



# Setting up

## Loosening the transport screws

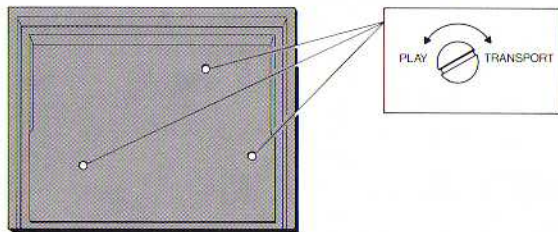

Before using the record player you must loosen the three transport screws underneath it.

Place the record player on a table, with its front protruding over the edge of the table. Hold the record player firmly and turn it carefully until you have located and loosened each screw. The screws cannot be removed from the holes but should be turned several times using a screw-driver or a coin.


If you ever have to move the record player again, we strongly recommend that you retighten the three transport screws.

## Making the record player ready for play

 When removing the foam rubber pieces protecting the tonearm, be careful not to touch the stylus.

Place the turntable platter on the turntable platform.

Check that the turntable can move freely with a kind of springy movement.

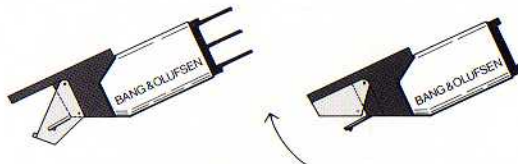

Raise the stylus guard on the cartridge.

