


BEOGRAM 4004

This manual was scanned by
and available FREE at www.Iconic-AV.co.uk

Bang & Olufsen

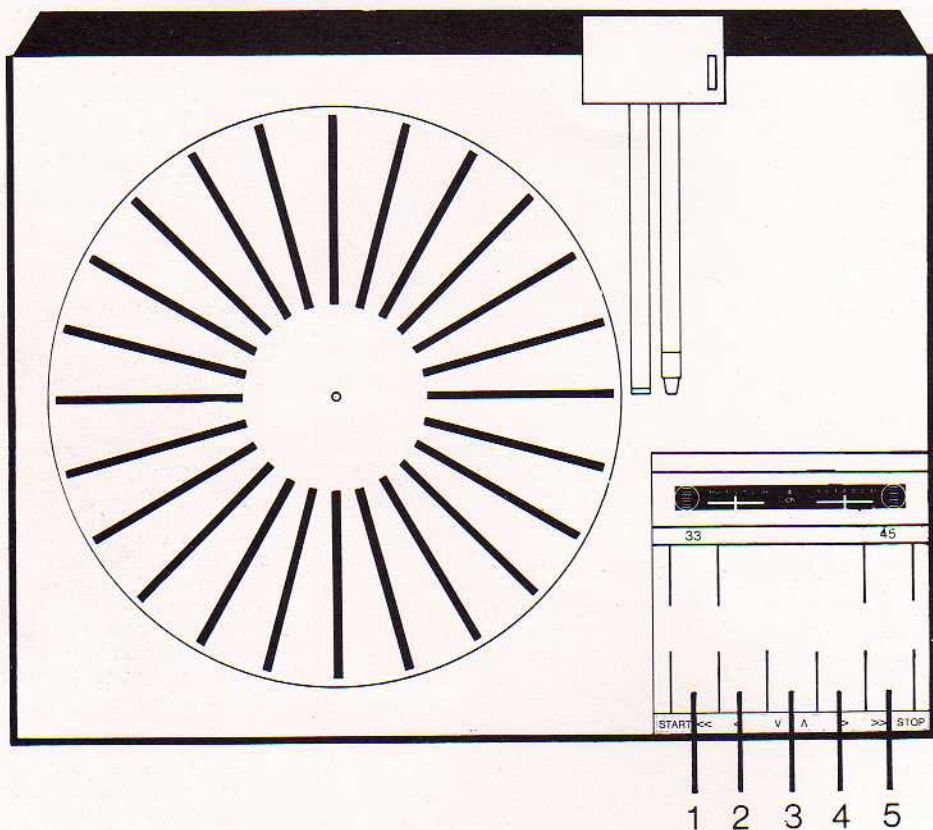

- 1 Start and rapid inward travel
- 2 Slow inward travel
- 3 LIFT
- 4 Slow outward travel
- 5 Stop and rapid outward travel

Stop

If you wish to stop playing before the disc has finished, press STOP. The pickup will then rise and travel sideways out, and the turntable will stop.

Pause

You can introduce a pause anywhere you want while playing a disc. A light pressure applied to LIFT-with this symbol - will lift the pickup, and the pickup will be relowered when you press a second time.

**This manual was scanned by
and available FREE at www.lconic-AV.co.uk**

Remote Control

In connection with a Beomaster 2400 you can have remote control of the major functions:

To start the record player: Press the P button on the remote control unit.

Pause: Press the P button again. To end the pause, once again press the P button: The tone arm will lower at the same place and continue playing.

Stop: Press an FM program or the STAND BY button on the remote control unit.

Arbitrary Lowering

If you do not wish to listen to a disc from the beginning, press START again. The pickup will now travel in across the disc until you lower the stylus into the groove by pressing LIFT (3). This movement across the disc is relatively quick. If you prefer slower scanning, press (2) instead. Movement will occur only as long as you press the button. To lower, press LIFT (3).

Repeat

When you wish to repeat a section you have already heard, you can do it in two ways:

Rapid scanning: By pressing STOP you can cause the pickup to travel out until you lower the stylus by pressing LIFT.

Slow scanning: Keep (4) depressed until the stylus is above the desired place and thereafter press LIFT.

Speed

Your Beogram automatically selects the proper speed, indicated by illumination of one of the scales, 33 or 45.


In the case of the special 17 cm disc to be played at 33 r.p.m. you can select the speed yourself:

First press START, and keep 33 depressed until the stylus has been lowered into the groove.



Fine Adjustment of Register

Your Beogram 4004 has two pointers and adjustment knobs for reading and (if required) adjusting the register. The 33 and 45 r.p.m. speeds can be adjusted individually, and correct adjustment is where the pointers are at 0. Towards + or - the speed is higher or lower, respectively, than the standard speed.

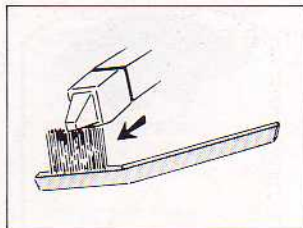

Cleaning the Pickup Stylus

Dust is practically certain to collect around the diamond stylus proper.

The cleaning brush supplied with your Beogram 4004 is specially designed for cleaning the stylus, and the sketch shows how to use it. Hold the brush up against the metal housing of the pickup cartridge, behind the stylus proper, and thereafter move it forwards in the direction of the transparent section of the pickup.

CAUTION: Brushing in the opposite direction will ruin the stylus assembly, thereby rendering the pickup cartridge unserviceable.

Warning:

Be aware of chemical detergents for records and still. They may contain solvents which damage parts of the pick-up unit.

The protective hood should only be put on the pickup during transport of the Beogram 4004, not every time you have finished using it.

This manual was scanned by
and available FREE at www.Iconic-AV.co.uk

