

Bang & Olufsen

This manual was scanned by
and available FREE at www.lconic-AV.co.uk

B
E
O
G
R
A
M
C
D
6
5
0
0

Contents

 
- 3 Removing the transport screws
- 3 Adjustment to room temperature
- 4 Placement
- 5 Connections
- 6 Removing the disc tray protection
- 7 Displayed cues and symbols
- 8 Using the controls
- 10 Maintenance

Removing the transport screws

Before using the compact disc player you must remove the two transport screws underneath it.

To gain access to the screws, carefully turn the Beogram CD upside down. Remove the two screws with a screwdriver and place them in their storage holes as indicated by the drawing on the base.

If you ever have to transport the Beogram CD, we strongly recommend that you reinsert the transport screws in the transport holes.

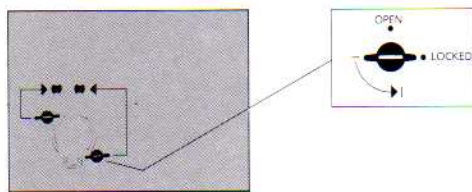

Adjustment to room temperature

If the compact disc player is exposed to low temperatures, for instance during transport, and is then placed in a warm room, condensation can occur within the mechanism.

If this happens, it will not play until the humidity falls to an acceptable level. Therefore, allow the compact disc player to acclimatise to normal room temperature for at least an hour or two before use.

See Beosystem 6500 user's guide for remote control operations from the Master Control Panel 6500.

 
This manual was scanned by
and available FREE at www.lconic-AV.co.uk

Placement

The compact disc player must be placed horizontally on a stable surface.

Make sure to put it in a place where ventilation cannot be impeded.

Leave a space of approximately 15 cm in the front of the compact disc player so that the disc compartment can open freely.




Connections


Once connected to the mains, the compact disc player will be in the stand-by mode and ready for operation.

The stand-by mode is indicated by a tiny red light on the front panel.

 Beomaster 6500

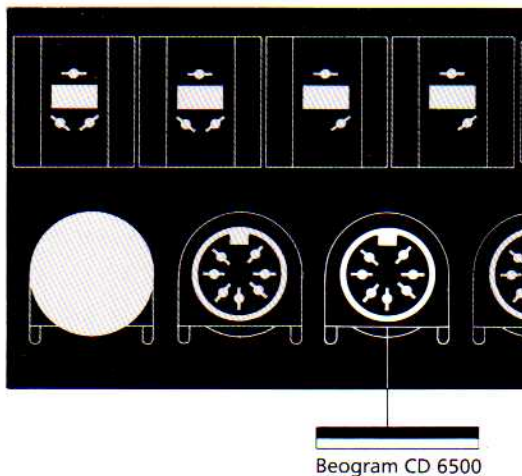

 The digital output on the rear panel is intended for possible future digital equipment.

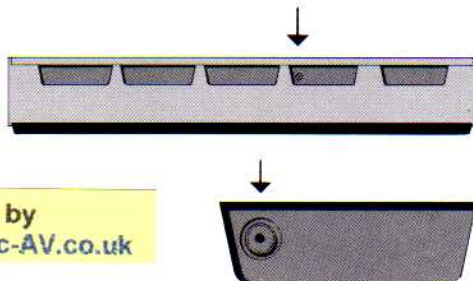

This manual was scanned by
and available FREE at www.lconic-AV.co.uk

Removing the disc tray protection

Press the left-hand side of the metal front panel to open the disc tray, then remove the cardboard. Keep the cardboard in a safe place for later use.



If you ever have to transport the compact disc player, we strongly recommend that you reinsert both the cardboard protecting the disc tray and the two transport screws.

This manual was scanned by
and available FREE at www.lconic-AV.co.uk

Displayed cues and symbols

 
The cues and symbols shown will not be displayed at the same time

Space function cut in

Track numbers
Current track blinks
'+' indicates any
number beyond 14

Compact disc player
pausing

Scanning in progress

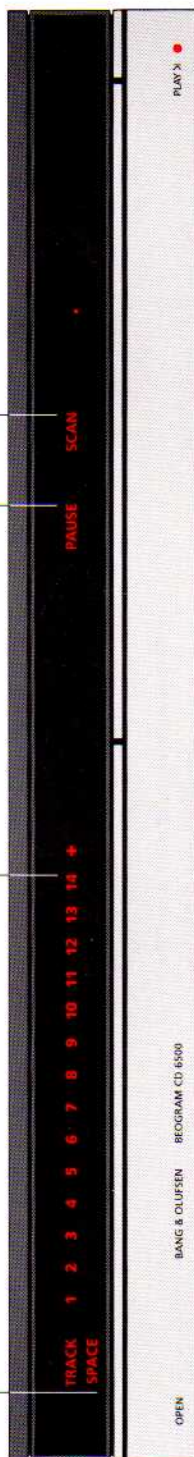


Using the controls


Press the left-hand side of the metal front panel to open the disc tray

Press again to close the disc tray

 Loading a compact disc
Place the CD with the text side facing up so you can read it

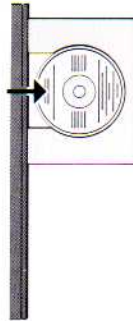

Unloading a compact disc!

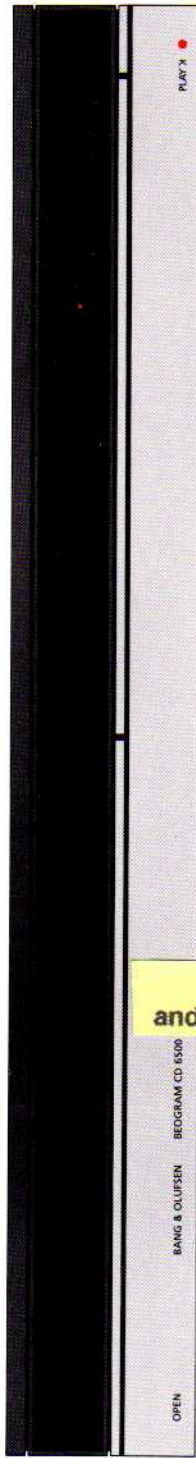 

You can also close the compartment and start playing directly by gently pressing the front edge of the disc tray or the right-hand side of the metal front panel

If left open for more than 3 minutes, the disc compartment will close automatically

This manual was scanned by
and available FREE at www.Iconic-AV.co.uk

Playing a compact disc

Gently tap the right-hand side of the metal front panel

The compact disc player will register all the tracks on the compact disc and playing will begin almost immediately

Press a second, third etc. time to step to the next tracks, or to step through all the tracks back to the first track

Switching off

Keep the right-hand side of the front panel depressed for 2 seconds. Playing will stop and the compact disc player will return to the stand-by mode

At the end of a compact disc, playing will stop automatically and the compact disc player will then revert to the stand-by mode

