

Bang & Olufsen

This manual was scanned by
and available FREE at www.lconic-AV.co.uk

 
B E O G R A M[®] C D 7 0 0 0

Placement

The compact disc player must be placed horizontally on a stable surface.

Make sure to put it in a place where ventilation cannot be impeded.

Leave a space of approximately 15 cm in the front of the compact disc player so that the disc compartment can open freely.




Connections

Once connected to the mains, the compact disc player will be in the stand-by mode and ready for operation.


The stand-by mode is indicated by a tiny red light on the front panel.

 Beomaster 7000

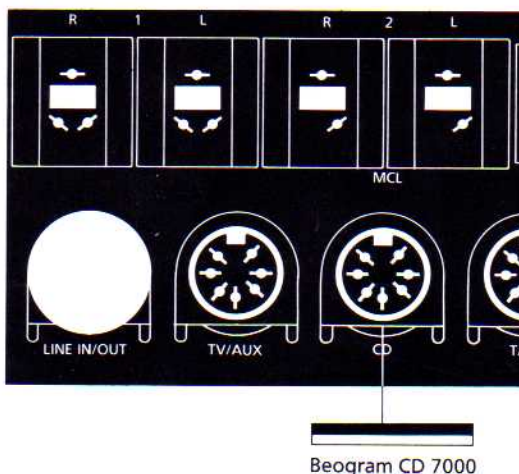

This manual was scanned by
and available FREE at www.Iconic-AV.co.uk

 The digital output on the rear panel is intended for possible future digital equipment.

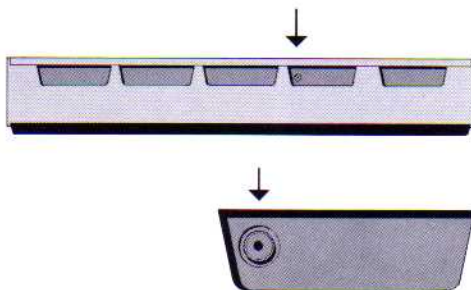

Removing the disc tray protection

Press the left-hand side of the metal front panel to open the disc tray, then remove the cardboard. Keep the cardboard in a safe place for later use.



If you ever have to transport the compact disc player, we strongly recommend that you reinsert both the cardboard protecting the disc tray and the two transport screws.

This manual was scanned by
and available FREE at www.lconic-AV.co.uk

Displayed cues and symbols

The cues and symbols shown will not be displayed at the same time

 
Space function cut in

Track numbers
Current track blinks

'+' indicates any number beyond 14

Compact disc player pausing

Scanning in progress

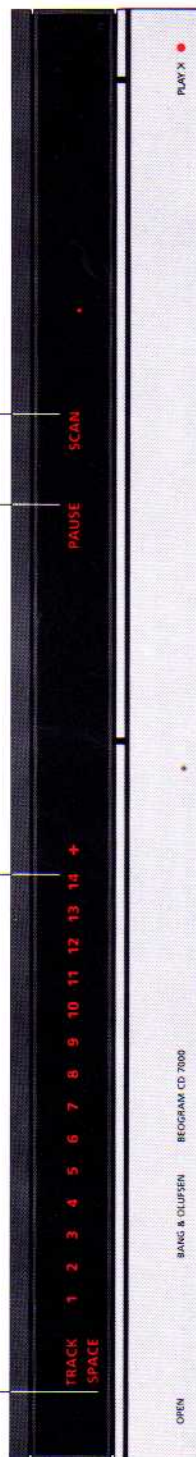


Using the controls

Press the left-hand side of the metal front panel to open the disc tray

Press again to close the disc tray

 Loading a compact disc
Place the CD with the text side facing up so you can read it

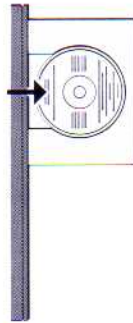

Unloading a compact disc!



You can also close the compartment and start playing directly by gently pressing the front edge of the disc tray or the right-hand side of the metal front panel

If left open for more than 3 minutes, the disc compartment will close automatically

Playing a compact disc

Gently tap the right-hand side of the metal front panel

The compact disc player will register all the tracks on the compact disc and playing will begin almost immediately

Press a second, third etc. time to step to the next tracks, or to step through all the tracks back to the first track

Switching off

Keep the right-hand side of the front panel depressed for 2 seconds. Playing will stop and the compact disc player will return to the stand-by mode

At the end of a compact disc, playing will stop automatically and the compact disc player will then revert to the stand-by mode

This manual was scanned by
and available FREE at www.Iconic-AV.co.uk

Maintenance

Use a soft, dry cloth to wipe dust off the compact disc player. Any dust in the disc compartment should be carefully removed.

 
Do not push down on the disc tray.

Do not use alcohol or other solvents to clean any part of the Beogram CD 7000 or other units in your Beosystem 7000.

This manual was scanned by
and available FREE at www.lconic-AV.co.uk

Caution

The use of any controls, adjustments or procedures other than those specified herein may result in hazardous radiation exposure.



COMPACT
disc
DIGITAL AUDIO

The black and yellow label on the compact disc player serves as a warning that the apparatus contains a laser system and is classified as a class 1 laser product. In case of any trouble with the compact disc player, please contact your Bang & Olufsen dealer. The apparatus must be opened by qualified servicemen only.

This Beogram CD fulfils the conditions stated in the EEC directive 82/499 concerning radio frequency interference.

**This manual was scanned by
and available FREE at www.lconic-AV.co.uk**