

BeoLab 4

Guide

This manual was scanned by
and available FREE at www.Iconic-AV.co.uk

BANG & OLUFSEN



**CAUTION**RISK OF ELECTRIC SHOCK
DO NOT OPEN

CAUTION: To reduce the risk of electric shock, do not remove cover (or back). No User-serviceable parts inside. Refer servicing to qualified service personnel.

WARNING: To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture. Do not expose this equipment to dripping or splashing and ensure that no objects filled with liquids, such as vases, are placed on the equipment.

To completely disconnect this equipment from the AC Mains, disconnect the power supply cord plug from the AC receptacle.



The lightning flash with arrowhead symbol within an equilateral triangle, is intended to alert the user to the presence of un-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

When you have finished setting up the loudspeakers as described on the following pages, connect the entire system to the mains. The indicator lights turn red, to indicate that the loudspeakers are in standby mode, ready for use. The loudspeakers are designed to be left in standby mode when not in use.

Cleaning the loudspeaker

The speaker panels may be cleaned with a vacuum cleaner set to the lowest suction level. Clean the other surfaces using a soft, lint-free cloth which you have dipped in luke-warm water and wrung firmly.

 
Never use alcohol or other solvents to clean any parts of the loudspeaker!

Switching on and off

When you switch on your system, the loudspeakers switch on simultaneously, and the indicator lights turn green.

When you switch off your audio (or video) system the indicator lights turn red.

However, if the loudspeakers are connected to a computer – via the LINE IN socket, and with the LINE IN switch set to PC – they will *not* switch to standby. Refer to 'Cable connections' (pp. 6–7).

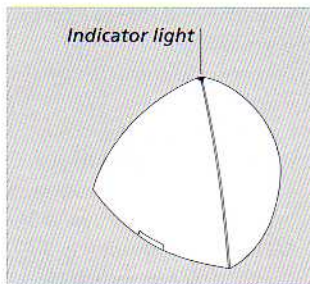

Indicator light: *In daily use the indicator light shines either red (standby) or green (playing).*

**This manual was scanned by
and available FREE at www.lconic-AV.co.uk**

 
NOTE! Prolonged listening at high volume levels may cause hearing damage.

Set up the loudspeakers

We recommend that you follow this procedure:

- Disconnect your system from the mains.
- Connect the loudspeakers and set the LINE IN-POWER LINK switch on each loudspeaker as explained in 'Cable connections' (pp. 6-7).
- Set the POSITION switch to the correct setting on each loudspeaker. This is explained in 'Adapt the loudspeaker to your room' (pp. 8-10).
- Connect the entire system to the mains again.

The loudspeaker must be placed standing upright on its base, or fastened to one of the optional accessories. Make the connections, and set both switches before you fasten the loudspeaker to one of the accessories.

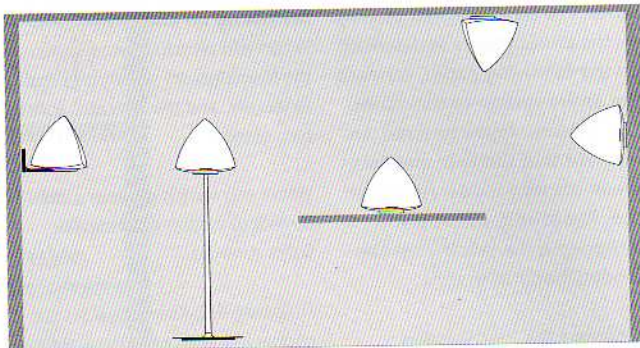

Cautions

- Make sure that the loudspeakers are placed and connected in accordance with the instructions in this Guide. To prevent injury, use Bang & Olufsen approved stands and wall brackets only!
- The loudspeaker can only be switched off completely by disconnecting it from the wall socket.
- Do not attempt to open the loudspeaker. Leave such operations to qualified service personnel! The speaker panels, however, may be removed for cleaning.
- The loudspeaker is designed for indoor use in dry, domestic environments only, and for use within a temperature range of 10-40° C (50-105° F).
- For optimum sound quality, do not place the loudspeaker enclosed in, for example, a small bookcase. Leave a minimum of 20 cm (8") free space at the sides, and never place anything directly in front of the loudspeaker.
- Do not block the sound emitting from the bass reflex port at the bottom of the loudspeaker.
- Place the loudspeaker with its front (the Bang & Olufsen name plate) facing your favourite listening position.

 
 
Loudspeaker front and side panels

With each loudspeaker you will get *one* front panel and *two* side panels. These panels must be fastened to the loudspeaker before use.

The front panel is marked with a Bang & Olufsen name plate. Each of the panels have three small pegs on the rear.

Fasten the panels by inserting the three pegs into the corresponding holes (A–B) in the front and the sides of the loudspeaker.

Note: The product identification and CE labels are placed on the loudspeaker body behind the side panels.

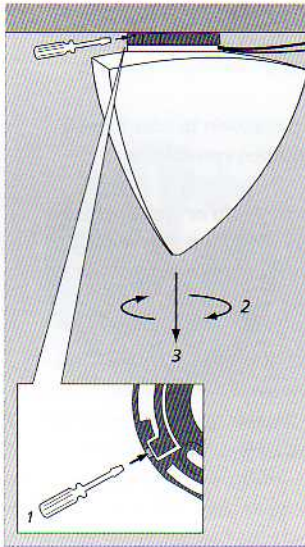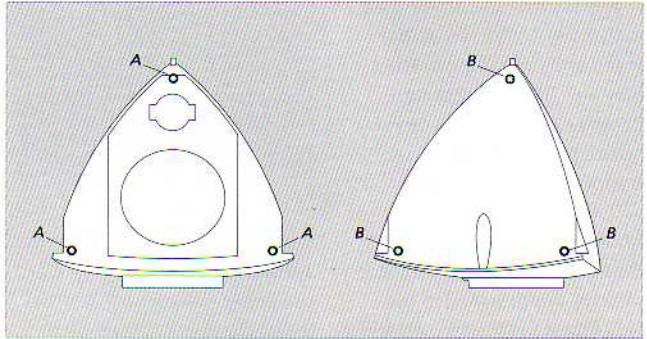

Ceiling Bracket: *This optional accessory has a hidden lock, which must be released before you can detach the loudspeaker from the ceiling.*

Use a small screwdriver, for example, to push the lock inwards, while turning the loudspeaker counter-clockwise until it is free.

