

Bang & Olufsen

Beolink 1000

Owner's manual

This manual was scanned by  
and available FREE at [www.lconic-AV.co.uk](http://www.lconic-AV.co.uk)

# BEOLINK 1000

Beolink 1000 is the key to a universe in which the barriers between sound and picture equipment have been removed so that the products can “talk” to each other and operate together. This is what is known as the Beolink system.

Bang & Olufsen have made this universe of the 90s materialize by developing a universal communication language and building it into their products. This means that both TV/video and music systems can be operated using just one remote control unit – the Beolink 1000.

# BEOLINK PRODUCTS

The following Bang & Olufsen products may be used in a Beolink system:

**Audio system:** Beocenter 9000

or

Beosystem 5500, including  
Beomaster 5500  
Beocord 5500\*  
Beogram 5500\*  
Beogram CD 50 or 5500\*

**Video system:** Beovision LX 2500/2800 or  
LX/L 2502/2802, including  
Beocord VHS 91.2  
Beocord VHS 82/82.2  
Beosat LX (built into TV-set)

\* or any other Beocord or Beogram  
with Datalink

 
The Beovision LX 2500/2800 or LX/L 2502/2802, the Beocenter 9000 and the Beomaster 5500 are so-called Beolink masters, which must be pre-programmed according to which set-up you have chosen for your Beolink system (see the special Beolink setting-up manual).

A Master Control Link 2 system may be added to your Beolink system. This enables you to transfer sound and pictures from the central units in the Beolink system to other rooms that are equipped with a Master Control Link 2 unit and extra speakers or an extra TV-set.


Remote control with the Beolink 1000 takes place via any one of the Beolink masters or a Master Control Link 2 transceiver.

**This manual was scanned by  
and available FREE at [www.lconic-AV.co.uk](http://www.lconic-AV.co.uk)**

There are two different types of Beolink set-up:

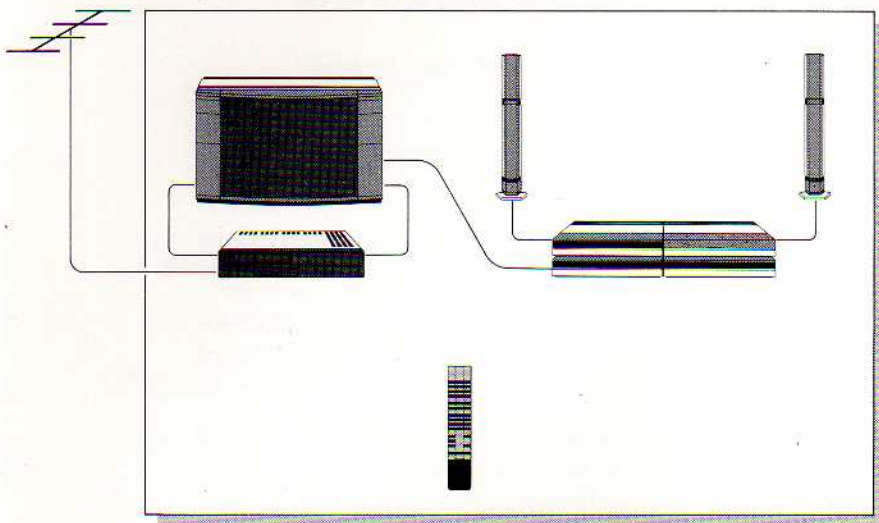

**Situation 1:** *The video and the audio systems placed close together so that the commands from the Beolink 1000 remote control unit can be received by both systems simultaneously.*

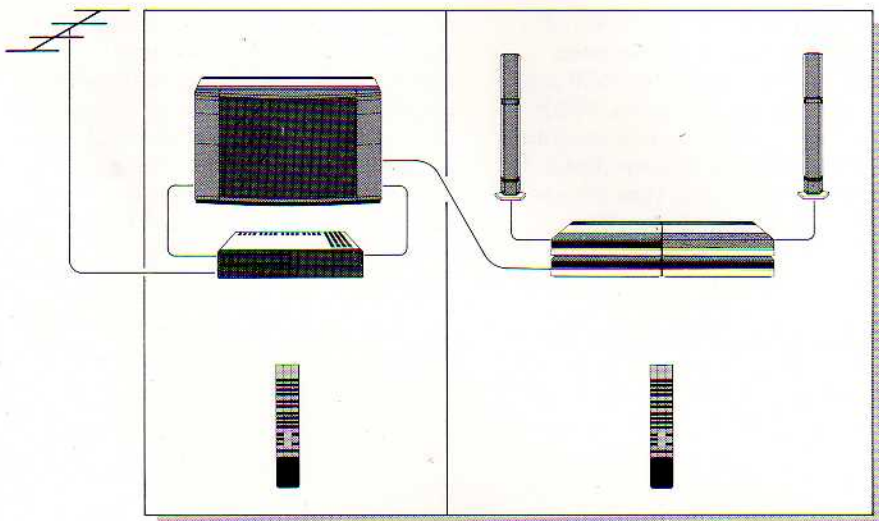 

**Situation 2:** *The video and the audio systems placed far away from each other, e.g. in separate rooms, so that the commands from the Beolink 1000 remote control unit can be received only by either of the systems at a time.*

# PRIMARY FUNCTIONS

---

*This section explains the primary functions which each button on the Beolink 1000 performs in connection with individual Beolink products. For more detailed operation, please refer to the manual supplied with each product.*

**This manual was scanned by  
and available FREE at [www.Iconic-AV.co.uk](http://www.Iconic-AV.co.uk)**

## PRIMARY FUNCTIONS

### VIDEO TAPE RECORDER

Press **V. TAPE** to switch on video tape recorder.  
Press **SHIFT** **V. TAPE** to switch on secondary video tape recorder.

**LINK** For use in a Master Control Link system.

**SHIFT** Press to switch to alternative button functions (see page 11).

**<< >>** Press to rewind and wind.

**PLAY** Press to start playing.

**STOP** Press to stop playing.

**GO TO** Press to key in counter position.

**0 - 9** Press to select preset stations or to key in counter position.

**< >** Press to step through preset stations.

### SATELLITE RECEIVER

Press **SATELLITE** to switch on satellite receiver.

#### Menu operation:

**<< >>** Press to step through menu.

**PLAY** Press to execute.

**STOP** Press to remove menu.

**0 - 9** Press to change menu options.

**< >**

**PICTURE** Press to adjust colour, brilliance and contrast using **△ ▽**.

**AV** Press to switch sound to audio system (cf. »Special Beolink functions«).

**SOUND** Press to adjust bass, balance and treble using **△ ▽**.

**RESET** Press to return to preset picture and sound levels.

**MUTE** Press to mute and recall sound.

**●** Press to switch off.

**This manual was scanned by  
and available FREE at [www.lconic-AV.co.uk](http://www.lconic-AV.co.uk)**

## TELETEXT

---

Press **TEXT** to switch on teletext.

## TELEVISION

---

Press **TV** to switch on TV-set.

---

**STORE** Press to activate memory function.

**RECORD** Press to activate recording function.

---

**<<** Press to enlarge text.

**PLAY** Press to key in time.

**>>** Press to superimpose picture on text.

**STOP** Press to halt page.

**<< >>** Press to search for stations.

**GO TO** Press to key in frequency or to fine tune using **<< >>**.

**PLAY** Press to see current time.

**TURN** Press to switch between language A and language B.

---

**0 - 9** Press to select pages or to key in time.

**< >** Press to step through pages.

---

**0 - 9** Press to select preset stations or to key in frequency.

**< >** Press to step through preset stations.

 
---

**∧** Press to raise volume.

**∨** Press to lower volume.

---

**RESET** Press to return to index page.

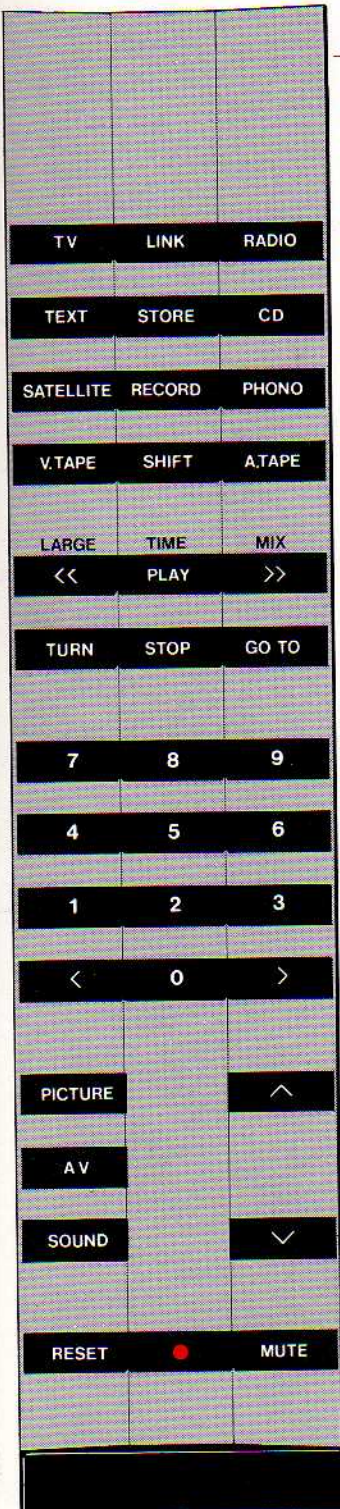

This manual was scanned by  
and available FREE at [www.Iconic-AV.co.uk](http://www.Iconic-AV.co.uk)



## RADIO

---

Press **RADIO** to switch on radio.

**STORE** Press to activate memory function.

**RECORD** Press to activate recording function.

**<< >>** Press to search for stations.

**TURN** Press to switch between FM and AM.

**GO TO** Press to key in frequency or to fine tune using **<< >>**.

**0 - 9** Press to select preset stations or to key in frequency.

**< >** Press to step through preset stations.

**∧** Press to raise volume.

**∨** Press to lower volume.

## COMPACT DISC PLAYER

---

Press **CD** to start playing a CD.

**<< >>** Press to search through CD.

**PLAY** Press to resume playing.

**STOP** Press to stop playing.

**GO TO** Press to select index no.

**0 - 9** Press to select track or index nos.

**< >** Press to step through tracks.

**This manual was scanned by  
and available FREE at [www.lconic-AV.co.uk](http://www.lconic-AV.co.uk)**

**RESET** Press to return to preset sound levels.

**MUTE** Press to mute and recall sound.

**●** Press to switch off.

