

## BeoSound 3000 – the fully integrated music system

Whenever you reach out to operate the BeoSound 3000, the glass doors slide open as if by magic, inviting you in to the music.

The BeoSound 3000 is a fully integrated music system with both radio and CD player. Its compactness facilitates placement next to your favourite listening position.

All the operating buttons are located in one place. They are conveniently grouped according to type of function, so you can easily find your way around the close-up operation panel and operate the system.

# Contents of the Reference Book

To get to know your Bang & Olufsen product two guides are at your disposal.



The Guide provides information on daily use. The Reference book gives a thorough overview of all aspects, installation and in-depth explanation.

To the right, you find the contents of the Reference book, all the chapters of the Guide are listed below:

- Your key to BeoSound 3000, 5
- Operation panel, 5
- Displays, 5
- CD player, 6
- Different ways of playing a CD, 6
- Favourite CD tracks only, 7
- Make series of CD tracks, 7
- Delete series of CD tracks, 7
- Radio, 8
- Volume, 8

## How to set up BeoSound 3000

- 6 Placing your BeoSound 3000

## Connect the cables

- 7 Aerial
- 7 Loudspeakers
- 7 Auxiliary equipment
- 7 BeoLink
- 7 To the mains

## How to assemble BeoSound 3000

- 8 Mount the glass doors
- 8 Mount the cables
- 8 Mount the cable cover

## BeoSound 3000 in an audio/video setup

- 9 BeoSound 3000 – without speakers – with a video system
- 9 BeoSound 3000 – with speakers – with a video system
- 9 BeoSound 3000 in another room

## Adjust and set Sound

- 10 Sound adjustments
- 10 Survey of sound displays

## Set the right time

- 11 Set the built-in clock

## Tune in radio stations

- 12 Tune in stations
- 13 Move radio stations
- 13 Delete radio stations
- 13 Name radio stations

## Make BeoSound 3000 start or stop at a specific time

- 14 Make a Timer to start or stop automatically
- 15 Check the Timers
- 15 Delete a Timer

## Daily use of radio and CD player

- 16 Switch on the radio
- 16 Adjust volume
- 16 Switch on the CD player
- 16 Find tracks on a CD

## BeoSound 3000 display indications

- 17 Understand and change the displays

## Play CDs in different ways

- 18 Play tracks in random order
- 18 Repeat a CD
- 19 Repeat a track on a CD
- 19 Repeat a passage on a CD
- 19 Scan a CD

## Play favourite CD tracks only

- 20 Select and store a series of tracks
- 20 Delete a series of tracks

## Name your CDs

- 21 Name your individual CDs
- 21 See list of CD names
- 21 Delete CD names and series of tracks

## Looking after BeoSound 3000

- 22 Cleaning BeoSound 3000
- 22 Handling your CDs

## Beo4 remote control operation

- 23 Use the Beo4 remote control

## Use with a video system – transfer sound from system to system

- 24 A fully integrated Audio/Video setup
- 24 An Audio/Video integrated setup

This manual was scanned by  
and available FREE at [www.Iconic-AV.co.uk](http://www.Iconic-AV.co.uk)

## Set and enter a PIN code

- 26 Enter a PIN code
- 26 Switch on the PIN code
- 27 Change the PIN code
- 27 Switch off the PIN code
- 27 Using a Master code

## Key to using this guide

Use this Key to identify what a button, source or status display looks like in an instruction sequence.

**RADIO**  
**CD**  
**PLAY**  
**A >>> B**

*Buttons on the BeoSound 3000 close-up operation panel or on the Beo4 remote control*

**CD**  
**EDIT?**

*Lower display on BeoSound 3000*

**RANDOM**  
**REPEAT**

*Displays on Beo4*



## How to set up BeoSound 3000

We recommend that you follow this procedure when you set up your BeoSound 3000:

- 1 Place the BeoSound 3000 where you want to use it.
- 2 Set up your speakers and any auxiliary equipment.
- 3 Connect all cables to their sockets on the rear panel of the BeoSound 3000 – remember not to connect it to the mains yet!
- 4 Arrange the cables in the cable cover grooves and attach the cover to the rear of the BeoSound.
- 5 Mount the glass doors.
- 6 Connect the products to the mains.

### Placing your BeoSound 3000...

- Make sure that the BeoSound 3000 is set up, placed and connected, in accordance with the instructions in this guide.
- Place your BeoSound 3000 on a firm surface, preferably on the table, sideboard or stand where you want it placed permanently.
- The BeoSound 3000 is designed for indoor use in dry, domestic environments only, and for use within a temperature range of 10–40° C (50–105° F).
- Avoid placing the system in direct sunlight, near radiators or other sources of heat.
- Allow a space of at least 5cm above and to each side of the BeoSound 3000 for adequate ventilation. Remember to leave enough space at the sides for the glass doors to open.
- If you want to hang the BeoSound 3000 on a wall, make sure that you use the correct size and type of screws and wall plugs for mounting the wall bracket (optional accessory) and the BeoSound. The type of screws and wall plugs will depend on the material and construction of the wall.
- Do not switch on the mains for any products in your system, until after you have connected all the cables (see opposite page, p. 7).

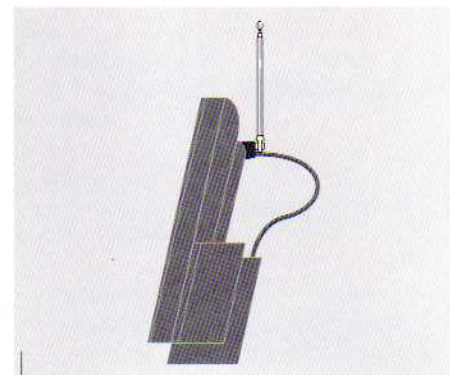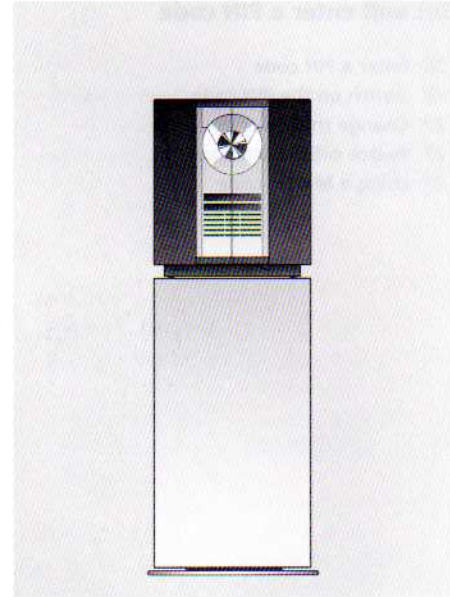

If no permanent FM aerial connection is available, an indoor aerial may be hooked onto the clamp on the back of the BeoSound 3000.

