

To get to know your Bang & Olufsen product, two guides are at your disposal.



The User's guide provides information on daily use. The Reference book gives a thorough overview of all aspects, installation and in-depth explanation.

To the right, you find the contents of this guide, the main chapters of the Reference book are listed below:

- Setting-up, 6
- Connecting, 7
- Assembly, 8
- Audio/video setup, 9
- Sound adjustment, 10
- Built-in clock, 11
- Tuning, 12
- Start and stop at a specific time, 14
- Daily use, 16
- Displays, 17
- Play CDs in different ways, 18
- Favourite CD tracks, 20
- Maintenance, 22
- Remote control, 23
- Use with a video system, 24

Your key to using BeoSound 3000

- 5 Buttons on the close-up operation panel
- 5 What you see in the displays

Note: For a key to identify what a button, source or status display looks like in an instruction sequence, please refer to page 5 in the Reference book.

Using the CD Player

- 6 Play a CD
- 6 Different ways of playing a CD – random and repeat

Play favourite CD tracks only

 
- 7 Make your own series of tracks
- 7 Delete your series of tracks

Using the radio

- 8 Switch on the radio
- 8 Turn the volume up and down


Your key to using BeoSound 3000

Reach out as if to touch the glass doors and the BeoSound 3000 opens automatically, revealing the music system concealed behind the doors.

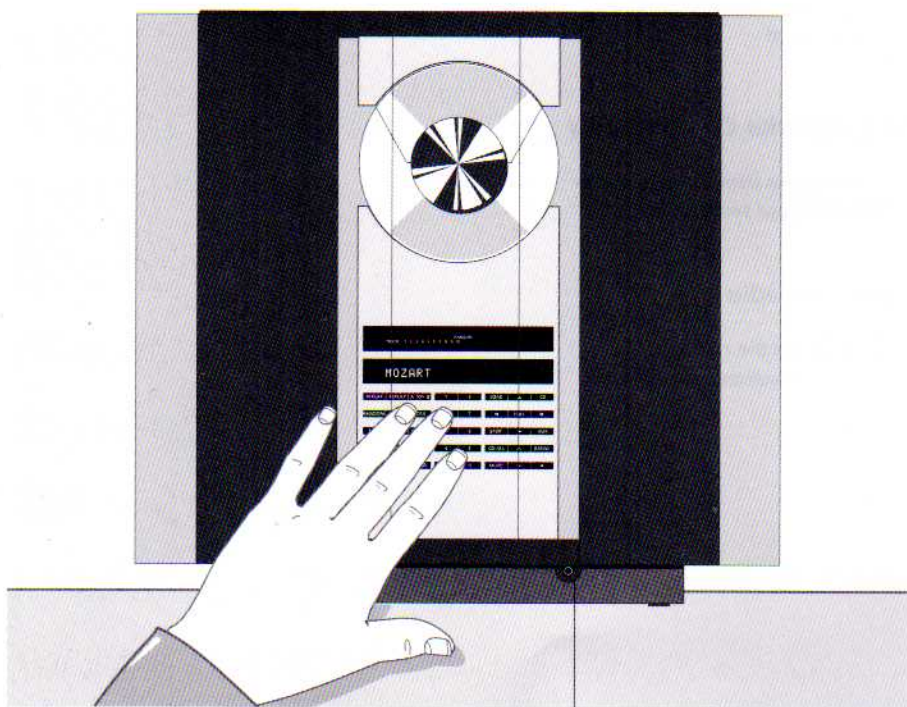

The open doors give you access to the close-up operation panel which gives you complete control of the CD player and the radio.

 Socket for headphones. When the headphones are plugged in, the speakers connected to BeoSound 3000 are muted.

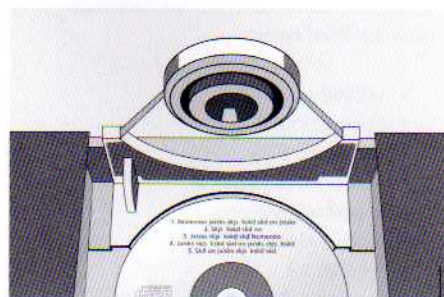

Press the LOAD button in the right-hand section of the operation panel to raise the clamp which holds the CD in place.

You can now remove the CD from the compartment and load the one you want to play. Always load the CD with the label facing you.

Press LOAD again to lower the clamp. If you press CD to start playing CD, the clamp lowers automatically.

 
**This manual was scanned by
and available FREE at www.Iconic-AV.co.uk**

Buttons on the operation panel

All the buttons are located in one place. They are conveniently grouped according to type of function, so you can easily find your way around the panel while operating the system.

Displays

The displays tell you what the system is doing. The cues in the upper display relate to functions in the CD player, e.g. track number. The lower display shows the name of the current radio station, or it tells you which CD is playing, if you have named it.

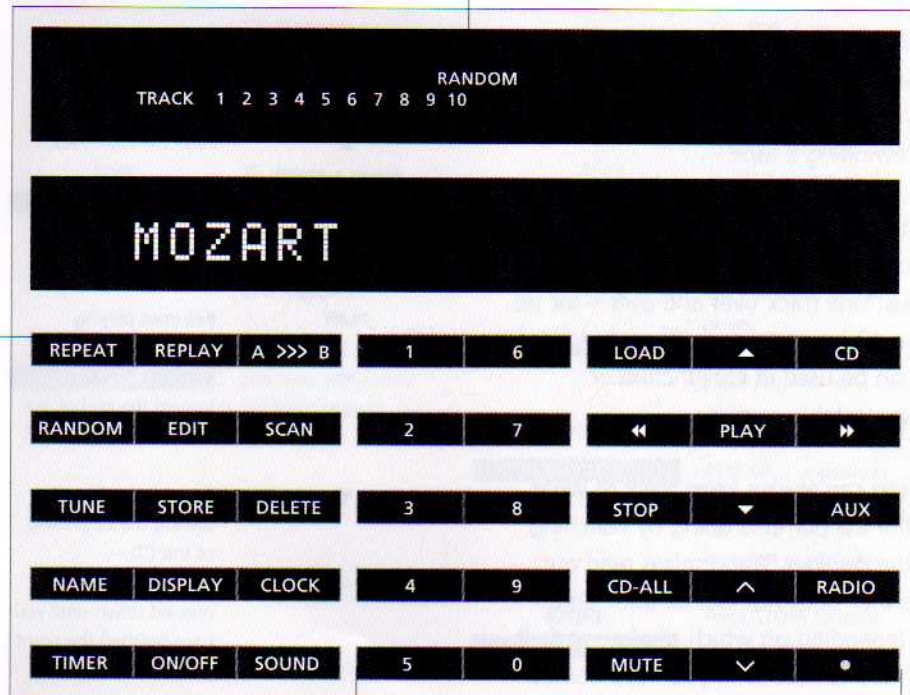

Secondary functions

This group of buttons gives access to all the secondary functions used e.g. for tuning in radio stations or programming, see page 11 in the Reference book for further instructions.

Number buttons

The number buttons enable you to select other program numbers, or select tracks on a CD.

Primary functions

The buttons on the right-hand side of the panel gives you access to all primary functions; switching the system on and off, adjusting volume and operating the radio and CD player.

This manual was scanned by
and available FREE at www.iconic-AV.co.uk

Using the CD player

When you press the CD button to play the CD you have loaded, all information on the CD, for example the number of tracks will first be registered. Then the CD will start playing from the beginning. Playing will continue until the whole CD has been played, BeoSound 3000 then automatically switches to standby after 30 minutes, if you do not operate it.

You can step to other tracks or search through the CD – just as if you were fast forwarding or rewinding a tape.

It is also possible to play a CD in random order, and repeat a CD or just one track over and over – for up to 12 hours on end. These functions can be used in conjunction or separately.

You can always keep track of what the CD player is doing by watching the displays. The displays read out either track number or track time, depending on which display mode it has been set to. If you have named the CD, the name will also be shown in the display*.

Play a CD

When you play a CD, you can stop it at any time. If you select another source, the CD stops automatically. When you search through a CD, searching will continue for as long as you keep your finger on the button. When you lift your finger off the button, the CD resumes playing.

CD	Plays the CD you have loaded
0 - 9	Plays specific track numbers
▲	Plays the next track
▼	Plays the previous track
STOP	Pauses playing
PLAY	Resumes playing
▶▶	Searches forward toward the end of the CD
◀◀	Searches backward toward the beginning of the CD – Keep the button pressed down until you have reached the point you want

Different ways of playing a CD

The random play function plays all the tracks on the CD in random order. The repeat function, repeats the CD for up to 12 hours, and the replay function plays the specific track over and over. The functions are cancelled by pressing the RANDOM, REPEAT or REPLAY button again.

RANDOM

ON

While the CD is playing, press RANDOM. ON appears – and RANDOM is shown in the upper display

REPEAT

ON

While the CD is playing, press REPEAT. ON appears – and REPEAT is shown in the upper display

REPLAY

ON

When you hear the track you want repeated, press REPLAY. ON appears – and REPEAT is shown in the upper display

Note: If you cancel the random play function while the CD is playing, all tracks beyond the current track number will be played in chronological order, even if they have already been played while the random play function was activated.

This manual was scanned by
and available FREE at www.iconic-AV.co.uk

*NOTE! If the display has been set to show the name of the CD, only the name will appear in the display and you cannot follow the elapsed time process. See page 17 in the Reference book for details of the various display modes.

