

The BeoSound 9000 is an extraordinary CD player with a built-in radio.

BeoSound 9000 gives you perfect sound reproduction and changes tracks and CDs at a formidable pace. You will experience six Compact Discs as one piece of music – virtually one CD.

The system can be placed anywhere you want music – in traditional placements; on a table, hanging on a wall, or on the specially designed, vertical stand. The choice is yours.

The BeoSound 9000 represents a new and visual way of experiencing music.

To get to know your Bang & Olufsen product, two guides are at your disposal.

The Guide  *The Reference book* 

The *Guide* provides information on daily use. The *Reference book* gives a thorough overview of all aspects.

To the right, you find the contents of this Reference book, the main chapters of the Guide are listed below:

- Your key to using BeoSound 9000, 4
- Using the CD player, 6
- Using the radio, 9
- Adjust the volume, 10

Before you start...

- 6 Cautions

How to set up BeoSound 9000

- 7 Placing your BeoSound 9000
- 9 Centering the CD drive mechanism
- 33 Option programming

Connect the cables

- 10 Aerial
- 10 Loudspeakers
- 10 Extra equipment
- 10 Master Link
- 11 Digital output
- 11 To the mains

Getting started

- 12 Close-up operation panel

Set the time

- 13 Using the built-in clock

Make BeoSound 9000 start or stop at a specific time

- 14 Set a Timer
- 15 Set a Timer for single date
- 15 Set a weekly Timer
- 16 Checking or clearing Timers
- 17 Switching the Timer function on or off
- 17 Choose location for the Timer function

Playing CDs

- 18 Loading CDs
- 19 CD playback

Playing CDs in different ways

- 20 Choosing a sequence of discs
- 20 Playing CDs and tracks in random order

Playing favourite CD tracks

- 21 Select and store a series of tracks
- 21 Enable or disable playback of a track series

Name your CDs

- 22 Name a CD
- 22 See the list of CD names

Positioning CDs

- 23 Load and adjust a CD manually
- 23 Clear the positioning

Display CD information

- 24 Switching between displays

Playing other sources

- 25 Listen to external sources

This manual was scanned by
and available FREE at www.Iconic-AV.co.uk

Using the radio

- 26 Presetting radio stations
- 26 Clearing presets

Optimise radio sound

- 27 Fine tuning a radio station
- 27 Mono/stereo reception

Name radio stations

- 28 Naming radio stations
- 28 Clear a name

Play your radio stations

- 29 Playing radio
- 29 Switching between displays

Adjust and store sound settings

- 30 Sound adjustments

Using the Beo4 remote control

- 31 Beo4 remote control operation

Use BeoSound 9000 with a video system

- 32 A fully integrated setup
- 32 An AV integrated setup
- 33 Option programming

Looking after BeoSound 9000

- 34 Cleaning BeoSound 9000
- 35 Handling your CDs

The PIN-code system

- 36 Activate the PIN-code system
- 36 Change or delete a PIN-code
- 37 Using your PIN-code
- 37 Did you forget your PIN-code?

Key to using this guide

Use this key to identify what a button, source or status display looks like in an instruction sequence.

| | |
|--------------|--|
| RADIO | Buttons on the BeoSound 9000 |
| CD | close-up operation panel or on the Beo4 remote control |
| PLAY | |

| | |
|---------------|-------------------------------|
| CD | Displays on the BeoSound 9000 |
| EDIT ? | |

| | |
|---------------|-------------------------------------|
| CD | Displays on the Beo4 remote control |
| RANDOM | |

Before you start...

We recommend that you follow this procedure when you set up your BeoSound 9000:

- Place the BeoSound 9000 where you want to use it.
- If you wish to mount BeoSound 9000 on a wall bracket or floor stand accessory, then assemble the accessory according to the folder enclosed with it.
- Set up your loudspeakers (or, if the BeoSound 9000 is to be used in a Bang & Olufsen AV system, set up this system) following the procedures described in the guides enclosed with these products.
- Connect all cables to their sockets on the rear panel of the BeoSound 9000 – remember not to connect it to the mains yet!
- Arrange the cables in the cable cover grooves and attach the cover to the rear of the BeoSound.
- Connect BeoSound 9000 to the mains.

Cautions

- Make sure that the BeoSound 9000 is set up, placed and connected, in accordance with the instructions in this guide.
- The BeoSound 9000 is designed for indoor use in dry, domestic environments only, and for use within a temperature range of 10–40° C (50–105° F).
- Avoid placing the BeoSound 9000 in direct sunlight or direct artificial light (e.g. a spotlight), or near objects generating electrical noise (e.g. dimmers), as this will reduce the sensitivity of the remote control receiver.
- Place the BeoSound 9000 so that ventilation will not be impeded, and remember to leave enough space above or in front of the BeoSound 9000 for the glass door to open, and to facilitate close-up operation.
- If you are going to hang the BeoSound 9000 on the wall, always use the correct size and type of screws and wall plugs to support the weight of the BeoSound 9000 (depending on the material and the construction of the wall). If in doubt, consult your Bang & Olufsen retailer.
- Light partition walls are often constructed of gypsum panels – known as drywall or wall board – secured to vertical studs. Gypsum is not a satisfactory material to support the weight of the BeoSound 9000!
- If you wish to hang your BeoSound 9000 on a gypsum wall, using one of the brackets, we recommend that at least one mounting screw be a lag screw, which is screwed securely into a vertical wall stud.
- If you wish to hang BeoSound 9000 on the wall we recommend that you conceal the cables using the optional Cable Covers, as shown on the opposite page.
- When you are lifting the BeoSound 9000 out of the box we recommend that you, in order to avoid fingermarks on the surfaces, use the two foam packing shells placed at each end of the BeoSound 9000.

