

 
BANG & OLUFSEN

BEOSOUND CENTURY

This manual was scanned by  
and available FREE at [www.lconic-AV.co.uk](http://www.lconic-AV.co.uk)



**CAUTION**  
RISK OF ELECTRIC SHOCK  
DO NOT OPEN



**CAUTION: To reduce the risk of electric shock, do not remove cover (or back). No User-serviceable parts inside. Refer servicing to qualified service personnel.**

**WARNING:** To prevent fire or electric shock, do not expose this appliance to rain or moisture.



This symbol indicates that a dangerous voltage constituting a risk of electric shock is present within this unit.




This symbol indicates that there are important operating and maintenance instructions in the literature accompanying this unit.

**For the North American market only:**

NOTE: This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

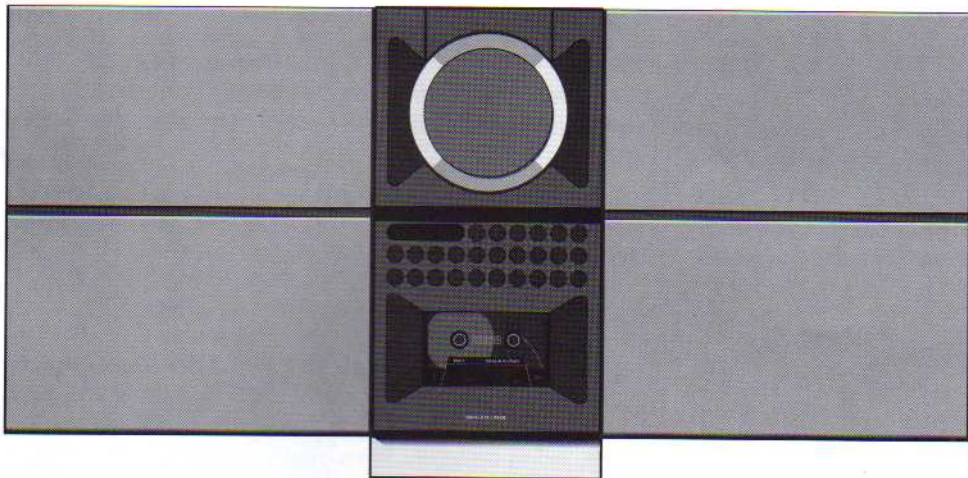

*This setting-up guide explains how to assemble your BeoSound Century music system and make it ready for use. It also explains the correct use and assembly of two optional accessories: the active FM antenna and the wall bracket.*

*We recommend that you follow the instructions in this guide carefully.*

*See the BeoSound Century User's guide (also enclosed) for detailed operating instructions.*


## **Contents**

- 4 Assembling
- 5 Placement
- 6 Connections
- 7 Ready for Use...
- 8 Optional Accessories
- 10 Maintenance
- 12 International Guarantee

**This manual was scanned by  
and available FREE at [www.lconic-AV.co.uk](http://www.lconic-AV.co.uk)**

### **NOTE!**

*Do not connect the BeoSound Century system to the mains until you have finished the setting-up procedure as described in this guide.*

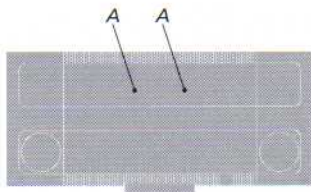

The two transport protection screws are located on the rear panel of the BeoSound Century.

### Transport protection

**IMPORTANT!** Before using your BeoSound Century the transport protection screws for the CD drive mechanism must be loosened. Otherwise, you may cause damage to the CD mechanism.


Using a small screwdriver, loosen the two screws (A) by turning them counter-clockwise (12—15 turns) until the CD mechanism feels springy.

### Glass door

Fasten the glass door by inserting its metal bracket into the corresponding slot on the front of the BeoSound Century. The bracket must be inserted with the imprinted mark "UP" facing upwards. Press gently on the glass door until it is properly seated.

When properly assembled, the edges of the door will be aligned with the edges of the centre part of the BeoSound Century.

*Treat the glass door with great care! If it crack or chip, or if it is damaged in any other way, it must be replaced immediately as it could otherwise cause bodily harm. You can order a replacement door through your Bang & Olufsen dealer.*

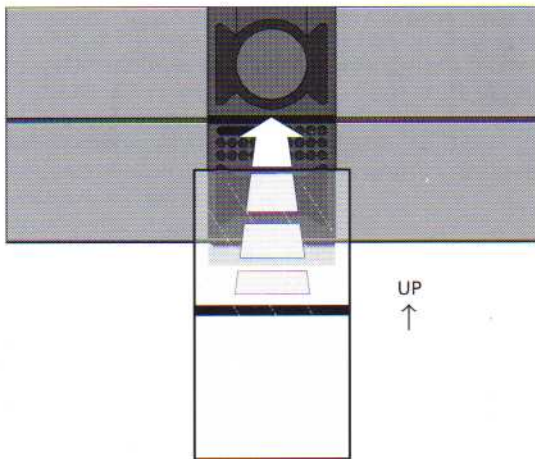


Your BeoSound Century can be placed standing in its base on the floor, or on a shelf or a table - or, hanging on the wall, using the wall bracket (optional accessory - type no. 2088). See the section "Optional Accessories" on how to install the wall bracket.


The slim cabinet allows placement in confined spaces. Avoid placing your system in direct sunlight, near radiators or other sources of heat. Place the system so that ventilation will not be impeded.

### Base

The base supplied is designed, and must be used, to support the BeoSound Century when it is placed standing up. *Standing without its base, your BeoSound Century will not be stable enough to secure safe operation!*

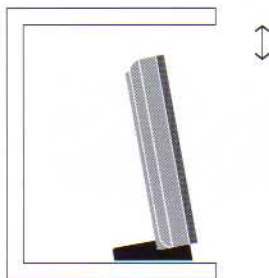

*Leave a space of 5 cm (2") above or to the sides of the system in order to allow sufficient ventilation.*

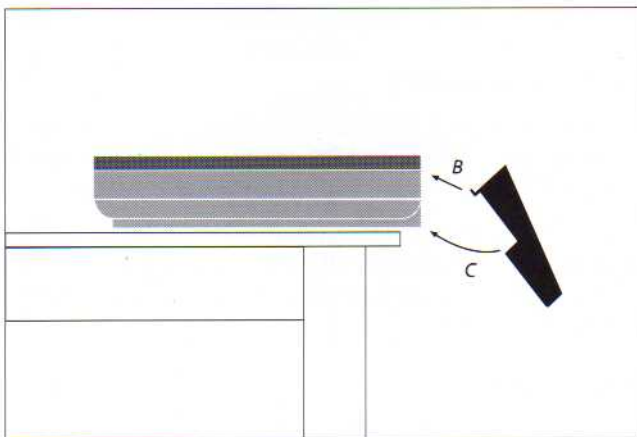

*To attach the base:*

Place the BeoSound Century music system lying on its rear side on e.g. a table, and then:

- B Insert the two front pegs on the base into the corresponding holes in the bottom plate of the system.
- C Move the rear part of the base towards the system, so that the rear pegs engage the notches in the rear edge of the bottom plate.

