 


BANG & OLUFSEN

BEOSOUND OVERTURE

This manual was scanned by  
and available FREE at [www.lconic-AV.co.uk](http://www.lconic-AV.co.uk)

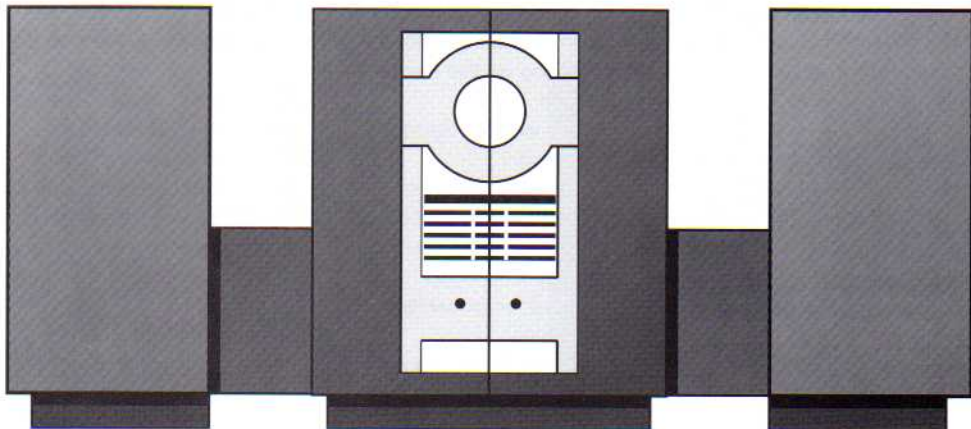

*This Setting-up guide explains how to assemble your BeoSound Overture and make it ready for use. It describes how to set up the system with a pair of matching Beolab 2500 speakers or, as an alternative, with a pair of active Bang & Olufsen loudspeakers.*

*The BeoSound Overture may also be used in a fully integrated Bang & Olufsen AV system (see the section "Ready for use...").*

*We recommend that you follow the instructions in this guide carefully.*

*Please refer to the BeoSound Overture User's guide (also enclosed) for detailed operating instructions.*



#### **Contents**

  - 4 Before you start...
- 5 Placement
- 6 Connections
- 9 Assembling
- 10 Ready for use...
- 12 Maintenance
- 14 International guarantee

**This manual was scanned by  
and available FREE at [www.iconic-AV.co.uk](http://www.iconic-AV.co.uk)**

**Setting-up guide**

*NOTE: Do not connect the BeoSound Overture to the mains before you have finished the setting-up procedure!*

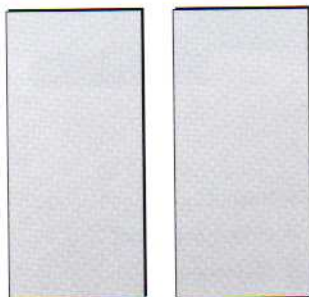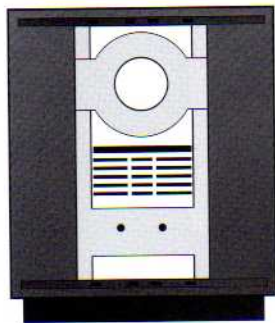


Make sure that the following parts are available before you start setting up the BeoSound Overture:

- one set of glass doors (left and right).
- one cable cover, for concealing and holding the cables on the rear of the BeoSound Overture.
- one lead for connection to the mains.
- a pair of active Bang & Olufsen speakers with connectors.

When you set up your system, we suggest you use the following sequence:

- 1 Place the BeoSound Overture where you want to use it.
- 2 Set up your speakers and any auxiliary equipment.
- 3 Connect all cables to their sockets on the rear panel of the BeoSound Overture (only, remember not to connect the system to the mains yet!).
- 4 Arrange the cables in the cable cover grooves, and attach the cover to the rear of the BeoSound Overture.
- 5 Attach the glass doors.
- 6 Connect the system to the mains.

 
Complete the setting-up procedure as described in the section *Ready for use...* and make your presettings of sound levels, favourite radio stations, etc. as described in the BeoSound Overture User's guide.

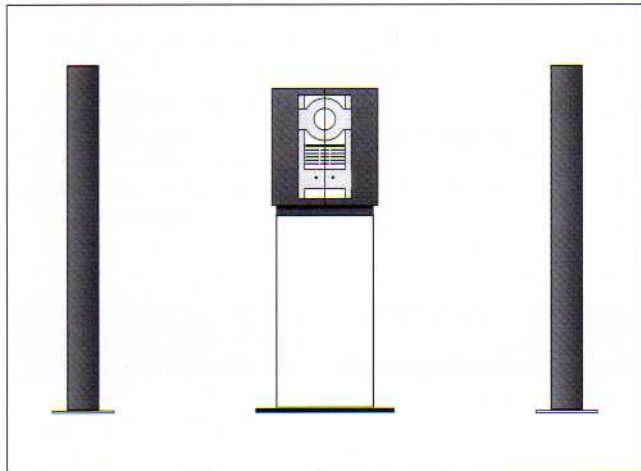

*The BeoSound Overture is placed on the optional stand (with an alternative pair of active loudspeakers). The stand accommodates compact discs and tape cassettes.*

Your BeoSound Overture is designed for a variety of placements. Its compactness facilitates placement next to your favourite listening position, which is also optimal for close-up operation of the system. It can be placed on a special stand, on a shelf or a table – or hanging off the wall (using the optional wall bracket). Please contact your Bang & Olufsen dealer for further information about optional accessories.

 The BeoSound Overture is designed for use in dry environments only. Avoid placing the system in direct sunlight, near radiators or other sources of heat. Place the BeoSound Overture so that ventilation will not be impeded – and, in case you set up your system with alternative active speakers, remember to leave enough space at the sides of the BeoSound Overture for the glass doors to open and close.

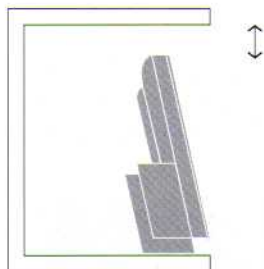


*The slim cabinet allow placement in confined places. However, don't forget to leave enough space above and to the sides of the BeoSound Overture to provide sufficient ventilation.*



If no permanent FM aerial connection is available, an indoor aerial may be hooked onto the clamp on the back of the BeoSound Overture.

 When using an AM loop aerial, tune in to the radio station you want and then turn the aerial horizontally until optimum signal is received.

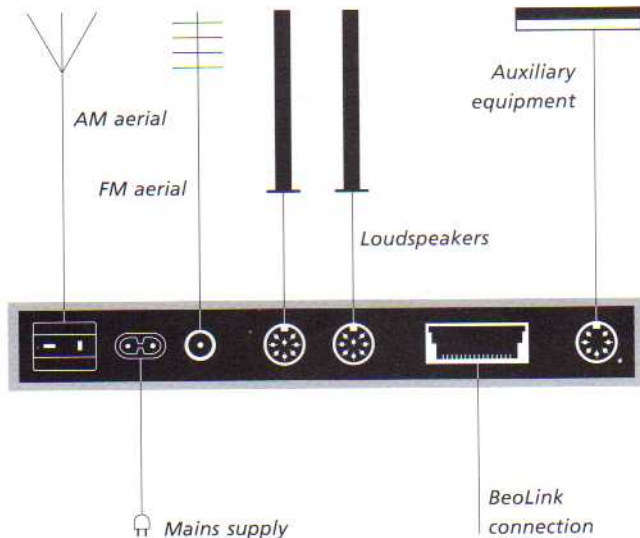

The socket panel on the rear of the BeoSound Overture is equipped with the following sockets:

- Two sockets for aerial connections.
- One socket for mains supply.
- Two sockets for the connection of active loudspeakers.
- One socket for BeoLink connections.
- One socket for the connection of auxiliary equipment.

#### Aerial

Connect your FM aerial to the socket marked FM and your AM aerial to the socket marked AM.

#### Loudspeakers

Connect your active Bang & Olufsen loudspeakers to the sockets marked POWER LINK. If you use a pair of alternative active speakers, arrange the connector cables in the cable

cover as shown on the next page (if BeoLab 2500 speakers, please refer to page 8 for further info).

Remember to set the L • R • LINE switch on your active speakers to L and R (left and right channel), respectively.

#### Auxiliary equipment

Connect your auxiliary equipment to the socket marked AUX.

This socket enables you to use compatible Bang & Olufsen equipment, e.g. a second tape recorder or a record player (with built-in preamplifier). The socket may also accommodate equipment of other makes. Consult your Bang & Olufsen dealer for details.

### BeoLink connection

The socket marked MASTER LINK should be used when you interconnect your BeoSound Overture and a compatible Bang & Olufsen video system. Using a BeoLink cable, connect one plug to the socket on the BeoSound Overture and the other end to the corresponding socket on the BeoVision TV. The socket may also be used for BeoLink distribution. The BeoLink system enables you to set up extra speakers throughout your house, and there listen to the BeoSound Overture in any room you like (please contact your Bang & Olufsen dealer).

### Mains supply

Plug the mains lead into the socket marked ~, but do not switch on at the mains outlet yet.

Fasten the cable cover to the grill on the BeoSound Overture rear panel:

- a Insert the bottom row of pegs into the grill.
- b Push the top row of pegs into the grill.
- c Pull the cable cover upwards until the pegs mesh properly with the grill.

