


BEOSYSTEM 10



This manual was scanned by
and available FREE at www.Iconic-AV.co.uk

Bang & Olufsen

WB 10

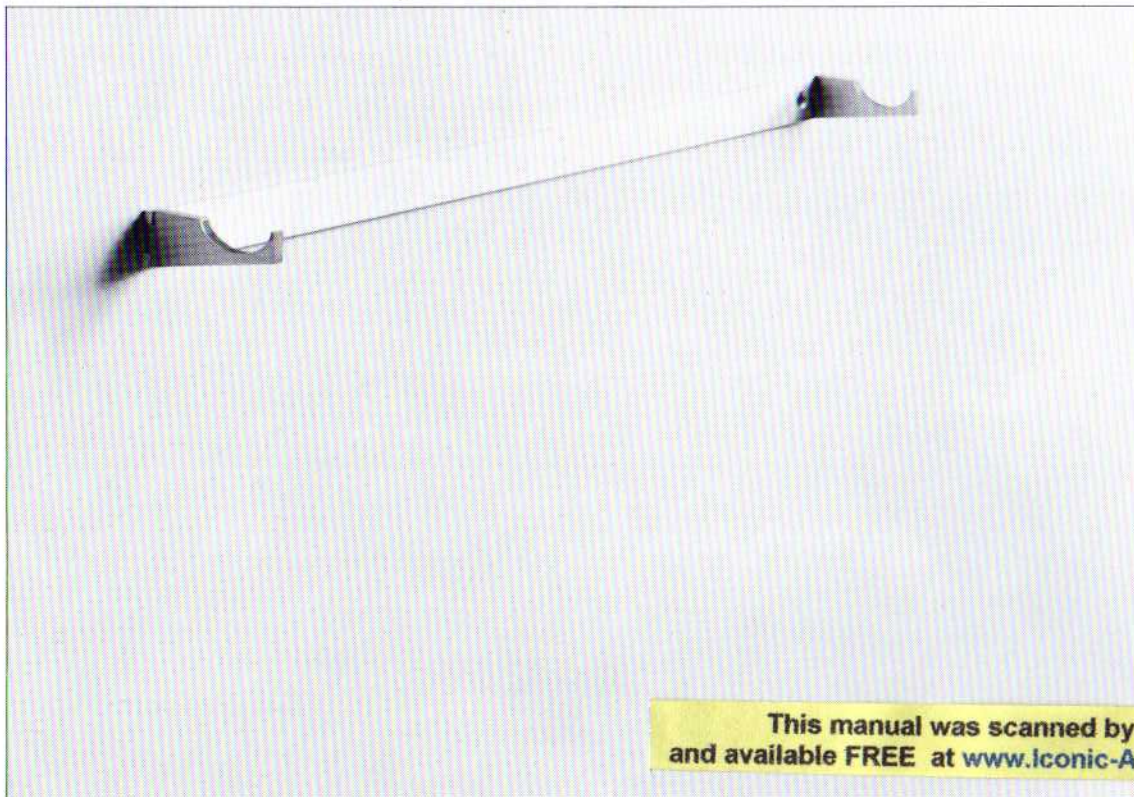

This manual was scanned by
and available FREE at www.Iconic-AV.co.uk

TABLE OF CONTENTS

SETTING UP

AC power supply	4
Batteries	4
Boat, car or caravan batteries	4
Antennas	4
Volume	4

RADIO

AM (LW/MW)	5
FM	5
Presetting FM stations	5
Switching off	5

TAPE RECORDER

Inserting or removing tapes ..	6
Playing a tape	6
Recording	6
- From radio	6
- From external tape recorder or record player	6
- Through microphone	7
Cueing/Reviewing	7
Switching off the tape recorder	7
Safeguarding recordings	7

SPECIAL FUNCTIONS

Acoustic Mode (bass/treble) ..	8
Balance	8
Mono/Stereo switch	8
AFC	8
Wide stereo	9
Tape switch	9

OPTIONAL CONNECTIONS

Extra tape recorder or record player	10
External loudspeakers	10
Headphones	10

CLEANING

Tape heads	11
Product surfaces	11

GUARANTEE

TECHNICAL SPECIFICATIONS

Beosystem 10 is designed to cater for your needs for music or sound reproduction in any place you like. It lays no restrictions on your mobility - you can take it with you wherever you go without worrying about power supply.

And you can still assign it its own place on the wall in any room or in your boat or caravan, for that matter. The wall bracket WB 10 (optional accessory) keeps it secure and stable and comfortably out of the way.


In short, Beosystem 10 unites flexibility, high-quality sound reproduction and simplicity of operation. Try out the Beosystem and see for yourself - the Beosystem 10 has only straight-forward push-buttons and no complex electronic functions.

We suggest you let this operation manual guide you along. Look up the function you want to play in the Table of Contents, or play

your way through the Beosystem 10 right from the start. The operation manual is composed to suit both temperaments.

This manual was scanned by
and available FREE at www.iconic-AV.co.uk

This manual was scanned by
and available FREE at www.lconic-AV.co.uk

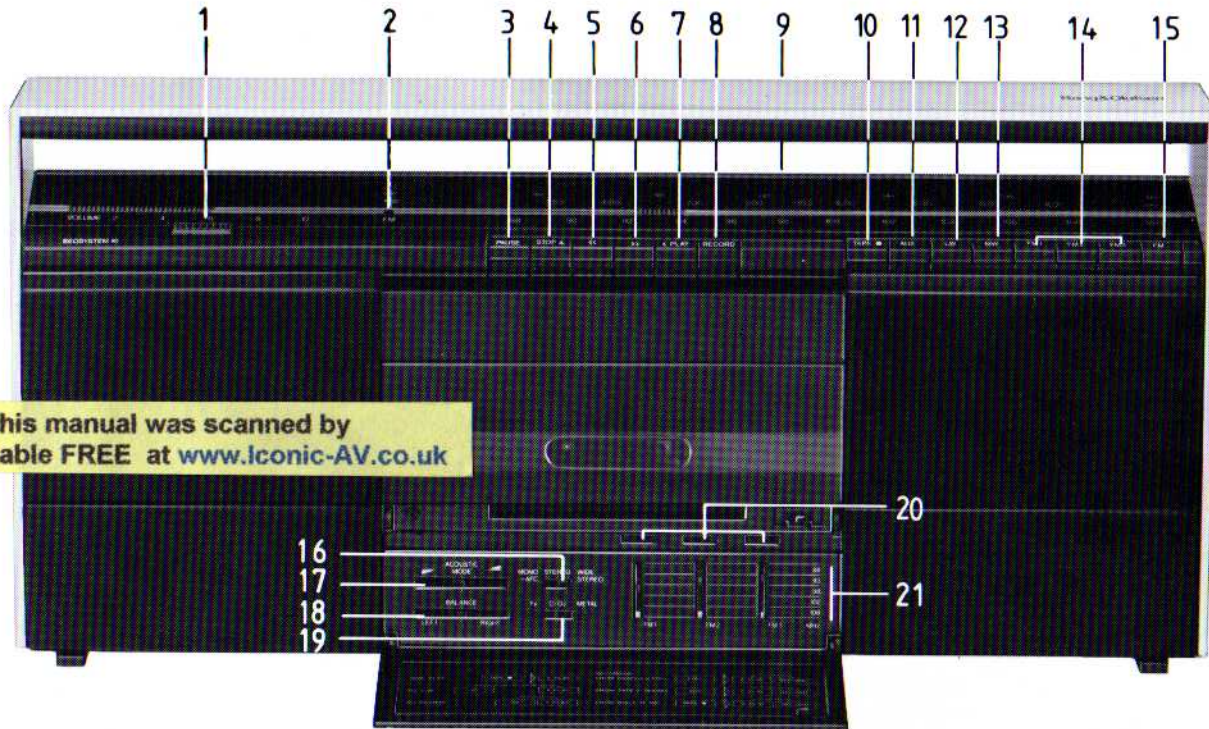

1. Volume knob
2. Stereo indicator (radio)

TAPE RECORDER

3. Temporary tape transport stop
4. Tape recorder stop, opens cassette holder
5. Fast forward
6. Rewind
7. Tape playback
8. Recording mode
10. Tape recorder on/radio off

RADIO

9. FM/LW/MW dial knob
10. Radio off/tape recorder on
11. Selects extra tape recorder or record player as input
12. Access to LW stations
13. Access to MW stations
14. Access to FM presets
15. Access to FM stations (horizontal dial)

SPECIAL FUNCTIONS

16. MONO/STEREO/AFC switch
17. Bass/treble adjustment
18. Loudspeaker balance
19. Tape switch
20. Thumbwheels for FM presets
21. Dials for FM presets

