

Bang & Olufsen

This manual was scanned by
and available FREE at www.Iconic-AV.co.uk

B E O S Y S T E M 2 5 0 0

This guide explains how to assemble the Beosystem 2500 and make it ready for use. We recommend that you follow these instructions carefully.

See the Beosystem 2500 user's guide (also enclosed) for detailed operating instructions.

Do not connect the Beosystem 2500 to the mains until you have finished the setting-up procedure and connected all the cables.

The following parts are included in the box and required to set up the Beosystem 2500 ready for use:

- Two glass doors
- Cable cover + two screws
- FM indoor antenna
- Mains lead
- Centre unit
- Two loudspeakers

Before you start...

We recommend that you assemble the system in the following sequence:

 
- 1 *Fasten the cable cover to the back of the centre unit*
- 2 *Place speakers on each side of the centre unit*
- 3 *Interconnect speakers and centre unit*
- 4 *Connect the FM antenna and the AM antenna, if any, to the centre unit*
- 5 *Connect any auxiliary equipment*
- 6 *Loosen the transport screw for the CD drive mechanism*
- 7 *Fasten the glass doors to the front of the centre unit*
- 8 *Connect the system to the mains... and it is ready for use*

**This manual was scanned by
and available FREE at www.lconic-AV.co.uk**

Centre unit (1)

Place the centre unit on a firm surface, preferably the table or sideboard where you want to place the Beosystem 2500 permanently.


Fasten the cable cover to the rear of the centre unit using the two screws provided. Make sure that the 5 dowels on the cable cover mesh properly with the grilles on the centre unit.

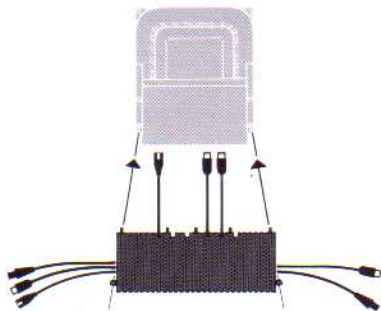

Note: Additional cables, for example from auxiliary equipment, may also be run behind the cable cover, together with the existing cables. If you want to do so, you must connect the equipment to the Beosystem 2500 before you fasten the cable cover to the centre unit.

Loudspeakers (2)

 Place the loudspeakers on each side of the centre unit. Make sure the centre unit and the loudspeakers are flush with each other.

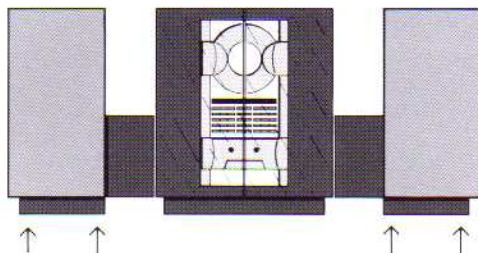


Note: If necessary, the loudspeakers can be made to tilt more or less until they are flush with the centre unit. To do so, turn the two adjustment screws on the base of each loudspeaker (in the recess in the rubber feet) until the speakers tilt as required.

**This manual was scanned by
and available FREE at www.iconic-AV.co.uk**

Cable connections (3)

 Interconnect the centre unit and the loudspeakers by means of the cables coming out from the cable cover.

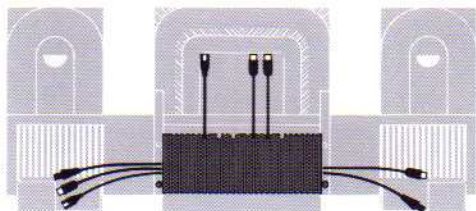

The cables coming out to the left are for the right-hand speaker:

- One 5-pin DIN speaker plug to 8-pin DIN socket
- One male power plug to female power socket
- One female power plug to male power socket

The cables coming out to the right are for the left-hand speaker:

- One 5-pin DIN speaker plug to 8-pin DIN socket
- One male power plug to female socket

Note: The remaining male socket on the left-hand speaker is for connection to the mains.

The cables coming out at the top of the cable cover are for the centre unit:

 
- One female power plug to male power socket
- Two 5-pin DIN speaker plugs to 8-pin sockets marked POWER LINK (left and right)

Antenna (4)

Connect the FM antenna to the socket marked FM and the AM antenna, if any, to the socket marked AM.

The enclosed indoor FM antenna can be hooked on to the holder on the back of the centre unit.

Note: Only Beosystems with the type numbers 2706, 2707, 2708, 2709, and 2710 are equipped to receive stations in the AM band.

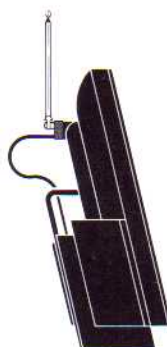

Auxiliary equipment (5)

The socket marked AUX enables you to connect compatible Bang & Olufsen equipment, for example a second audio tape recorder, a record player, or a Beovision TV.

Consult your Bang & Olufsen dealer for details of compatible products.

The AUX socket can also accommodate auxiliary equipment of other makes.

 
**This manual was scanned by
and available FREE at www.iconic-AV.co.uk**

Loosening transport screw (6)

The transport screw for the CD drive mechanism is located under the CD clamp. Lift the CD clamp to gain access to the screw.

Loosen the screw by turning it anti-clockwise until the mechanism feels springy.

Lower the CD clamp again.

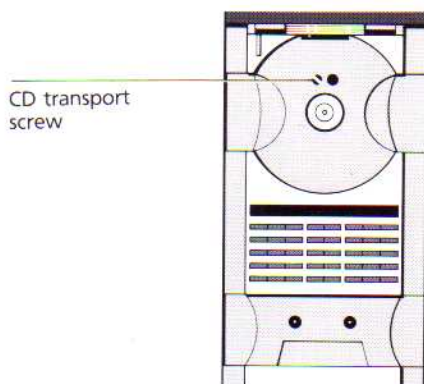


Glass doors (7)

Fasten the two glass doors to the front of the centre unit by pressing their fastening points to the corresponding fastening points on the centre unit.

Note: The labels on the back of the glass doors indicate which end must point up, and which side must point to the centre.

 Press gently on each of the four fastening points afterwards until you hear a click. The click indicates that the glass doors are properly seated.

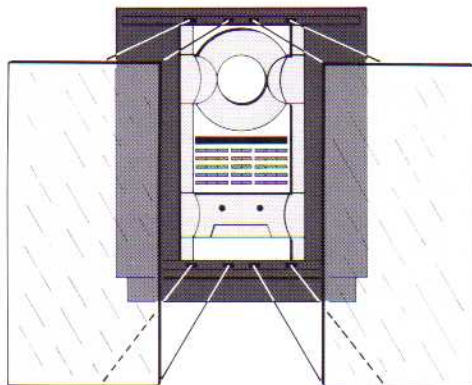

Note: Treat the glass doors with care! If they crack or chip or if they are damaged in any other way, they should be replaced immediately as they could otherwise cause bodily harm. You can order replacement doors through your Bang & Olufsen dealer.

This manual was scanned by
and available FREE at www.iconic-AV.co.uk

