

Your Beosystem 9500 is easy and very convenient to use. If you like, you can in fact operate the whole system without leaving your chair.

The Beocenter 9500 has an FM/AM receiver, a tape recorder and a compact disc player. The matching Beogram 9500 record player is data-linked to the Beocenter for unified operation.

The system can be operated close-up, but it can also be operated from a distance using the Beolink 5000 remote control terminal or, alternatively, the Beolink 1000 terminal (optional extras).

**This manual was scanned by
and available FREE at www.iconic-AV.co.uk**

User's guide

Note: Complete setting up and maintenance instructions for each unit are found with the unit itself.

Basic operations can also be carried out directly on the Beogram 9500, and close operating instructions are included in the setting up guide.

Be sure to keep the setting up guides. You will need them for cleaning and maintenance instructions, and for when you move or rearrange your Beosystem 9500 in the future.

**This manual was scanned by
and available FREE at www.lconic-AV.co.uk**

- 4 *Principles of operation*
- 6 **Daily operations:**
 - Switching on to a source*
 - Switching off*
 - Adjusting volume*
 - Muting the system*
 - Loading a tape or CD*
 - Remote control*
- 11 *Adjusting and setting sound levels*
- 13 *Using the radio*
- 17 *Using the compact disc player*
- 21 *Using the tape recorder*
- 31 *Using the record player*
- 35 *Time programming*
- 40 *Displayed cues and symbols*
- 42 *Beolink 5000/1000*

**This manual was scanned by
and available FREE at www.lconic-AV.co.uk**

*Note: Detailed contents are found at
the start of each major section.*

Display Panel

The upper or Display Panel will tell you what is going on when you use the Beosystem. It will show you which source is playing and give you the exact operational status of the Beosystem.

Loading Area


Tape cassettes are loaded on the left. Compact discs are loaded on the right.

To open the lid, press Load tape or Load CD. The lid will slide in under the centre panel.

Operation Panel

The lower or Operation Panel comprises all the controls required to operate the Beosystem. They need only a very light touch to be activated.

However, you will find that not all the controls are visible or accessible at any one time, but only appear when they are appropriate to the source you are playing.

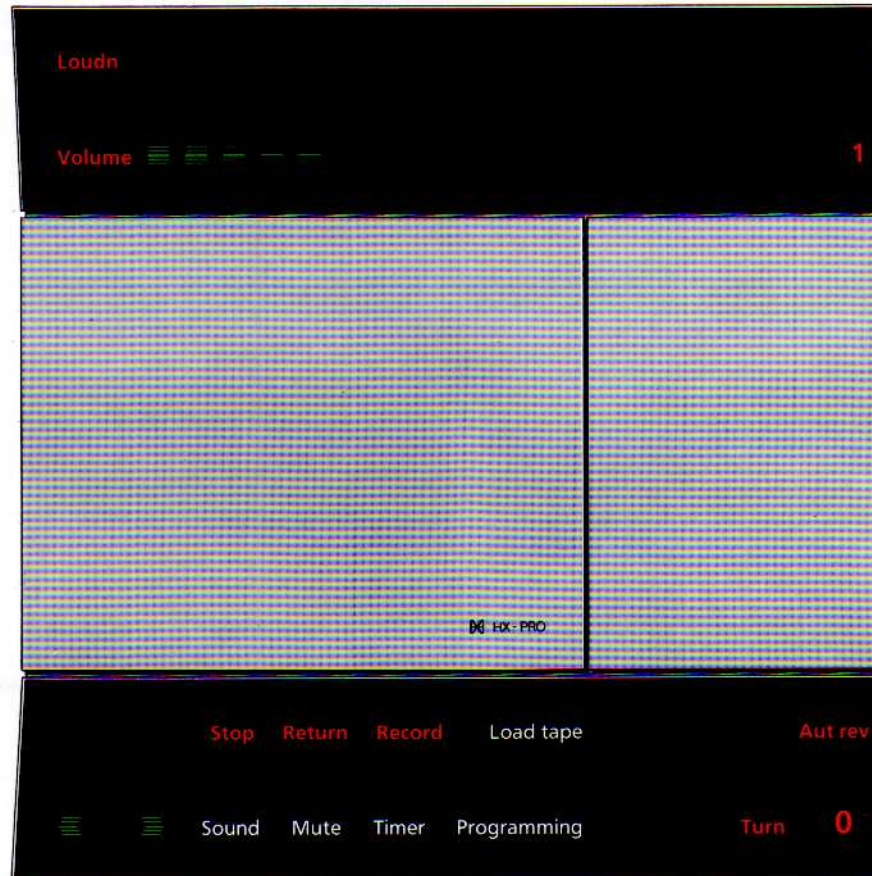

The first group or level of controls are accessible at all times. They are identified by light grey print and are for selecting source, adjusting sound levels and programming.

First level controls are pictured here in white.

**This manual was scanned by
and available FREE at www.lconic-AV.co.uk**

