

Guide

This manual was scanned by  
and available FREE at [www.lconic-AV.co.uk](http://www.lconic-AV.co.uk)



### The Guide and the Reference Book

This Guide contains information about the daily use of your Bang & Olufsen product. The Reference book contains information about more advanced operation as well as connecting and operating external equipment, it also provides you with an overview of on-screen menus.

We expect your Bang & Olufsen retailer to deliver, install and set up your products. However, the information required to install and set them up is included in the Reference book. This is useful if you move your products or expand your system at a later date.

#### Index ...

The Reference book also contains an index which refers to this Guide and the Reference book. It can help you find the specific subject you want to know more about.

#### An explanation of symbols in the Guide and Reference book

Buttons on the Beo4 remote control	TV LIST ▲ ▼
Display on the Beo4 remote control	FORMAT

**Introducing your Bang & Olufsen television, 4**

Find out how to use the Beo4 remote control and bring up the menus on the screen.

**Watch TV, 6**

Find out how to operate the daily functions of your television for watching television.

**Adjust sound, 8**

How to adjust volume and change sound mode.

**See two sources at the same time, 9**

Find out how to use the dual-screen function of your television.

**Surround sound and Home cinema, 10**

How to turn your system into a Home cinema for watching movies.

**Teletext, 12**

How to use the teletext functions of your television, for example MEMO pages.

**Use Groups, 14**

How to use the Groups function in your television and create groups of favourite programs.

**Use the DVD player, 16**

How to operate the daily functions of the DVD player and call up on-screen menus.

**The pincode system, 22**

 
How to utilise the pincode system of your television.

**Maintenance, 24**

How to clean your television and change batteries in the Beo4 remote control.

The Beo4 remote control gives you access to all functions. When a function is in use, you are informed via displays on Beo4 or on the television:

- Switch on the television
- Switch on digital satellite TV, if your television is equipped with a digital satellite module, or switch on a connected set-top box
- Switch on DVD and play a loaded disc
- Select programs, teletext pages, track numbers and DVD chapters. Enter data in on-screen menus
- Enter information in on-screen menus. Press ◀ or ▶ while TV is on to select a program Group you have created. Cue back and forth during playback of a DVD
- Accept and store instructions or settings. Press GO and hold to call up a program list. Start disc playback
- Step up or down through programs or menu items. Step between chapters or tracks on a disc
- Reveal additional functions in the Beo4 display, such as FORMAT

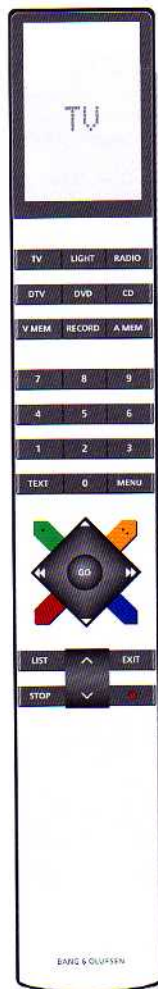

For information about how to operate connected equipment, refer to the Guide enclosed with it. For information on how to add extra functions to those shown in the Beo4 display, refer to the chapter 'Customise Beo4' in the Reference Book.



- TV** The Beo4 display shows the source you have selected, or extra functions available when you press the LIST button
- FORMAT**
- MENU** Bring up the main menu
- TEXT** Switch on teletext
- GO** Bring up the subtitle language menu for DVD\*
- UP** Use with number buttons to bring up DVD menus when watching a DVD. Also used to switch between "play mode" operation and "menu mode" operation with certain DVDs
- DOWN** Bring up the audio language menu for DVD\*
- LEFT** Bring up the DVD disc menu when watching a DVD
- STOP** Stop playback of a disc, step back in menus
- UP** Adjust sound volume: press in the middle to mute the sound
- DOWN**
- EXIT** Exit all on-screen menus
- RED DOT** Switch the television to standby

This manual was scanned by  
and available FREE at [www.Iconic-AV.co.uk](http://www.Iconic-AV.co.uk)

\*NOTE! Alternative subtitle and audio languages are only available on some discs. Functions not available on a loaded disc will not be highlighted in on-screen menus.

## Displayed information and menus

  Information about the selected source is shown in the display. On-screen menus allow you to adjust settings.

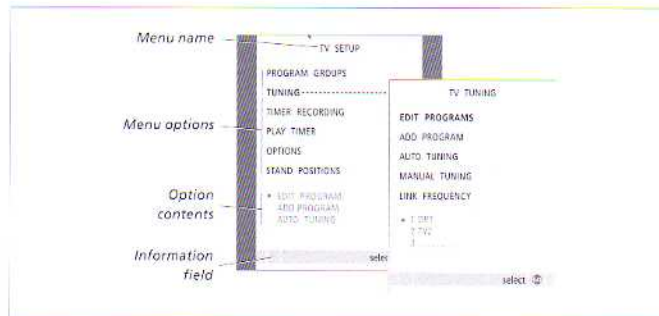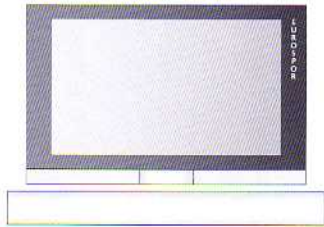

### How to use on-screen menus ...

- |                                                           |             |
|-----------------------------------------------------------|-------------|
| Press to switch on the television                         | <b>TV</b>   |
| Press to bring up the TV SETUP menu                       | <b>MENU</b> |
| Press to move between the different menu options          | ▲<br>▼      |
| Press to reveal different settings                        | ◀ ▶         |
| Press to bring up a menu or store a setting you have made | <b>GO</b>   |
| Press to step back through previous menus                 | <b>STOP</b> |
| Press to exit all menus                                   | <b>EXIT</b> |

*Examples of on-screen menus. As you highlight menu options, the contents of each option appear in grey below the options.*

This manual was scanned by  
and available FREE at [www.lconic-AV.co.uk](http://www.lconic-AV.co.uk)

This chapter describes daily use of your television: how to switch the television on, choose a program and switch the television off.

In addition, it describes two functions that make watching TV easier and more enjoyable:

- The TV list gives you an overview of all your programs, and you can also view a list of programs you have placed in a Group;
- If your television is equipped with an optional motorised stand, you can turn the television.

For further information about Groups, refer to the chapter 'Use Groups' on page 14.

### Select a TV program

When you switch the television on, the last program viewed appears on the screen.

Press to switch on the television: **TV**

Press a program number to go directly to that program: **0-9**

 
Press to change programs one by one: **▲ ▼**

Press to switch the television to standby: **•**

Pressing **0** swaps between the current TV program and previous TV program.

### Bring up a program list

All your TV programs appear on a list, which you can bring up on the screen. The list contains program numbers and names, and can contain up to 99 TV programs. You can also bring up a program list for Groups of programs.

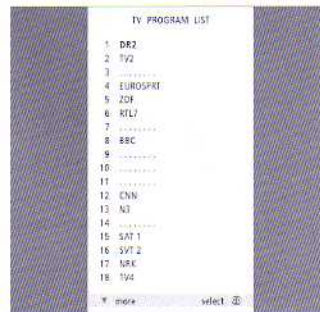

The program list for TV is now called up. It provides you with an overview of all your available TV programs.



Group list ... TV programs selected for a Group also appear in the program lists for all tuned TV programs.

**This manual was scanned by  
and available FREE at [www.Iconic-AV.co.uk](http://www.Iconic-AV.co.uk)**

NOTE! If the screen is overheated, black spots may appear in the picture. These spots disappear again, once the television cools down to normal temperature.

## Turn the television

If you have a motorised stand, you can turn the television using your Beo4 remote control.

Press to switch on the television **TV**

Press and hold to bring up a program list on the screen **GO**

Press **◀ ▶** to step between 'pages' in the program list: **◀ ▶**

To select a program, enter the program number, or ... **0 - 9**

... press until the desired program is highlighted: **▲ ▼**

Press to switch on the chosen program, or ... **GO**

... press to leave the menu **EXIT**

### Bring up the program list for a specific Group ...

 
Press to switch on the television **TV**

Press **◀ ▶** repeatedly to step through your Groups: **◀ ▶**

Press to bring up the chosen Group **GO**

Press and hold to bring up the program list for this Group **GO**


Press **◀ ▶** to see the program lists for the other Groups: **◀ ▶**

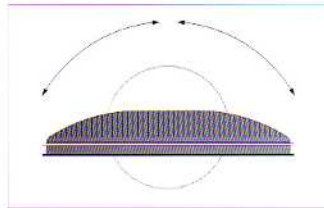

Press repeatedly to display **LIST**  
STAND on Beo4 **STAND**

Press to turn the television to the left or the right, or ... **◀ ▶**

 ... press the number buttons to choose a pre-defined position; 1 represents the far left position, 9 represents the far right position **1 - 9**

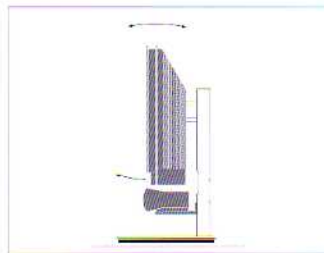

If your television is equipped with a stand with motorised tilt function, press to tilt the television up or down: **▲ ▼**

*For further information about how to preset positions for TV viewing, refer to the chapter: 'Set positions for the television to turn to' on page 22 in the Reference book.*

## Adjust sound

Several sound adjustment possibilities are available in your television.

You can adjust the volume or mute the sound completely at any time.

If programs are broadcasted with different sound types or languages, you can choose between the sound types or languages.

### Adjust volume or mute the sound

You can adjust volume or mute the sound at any time.

Press either end of the button to adjust the volume up or down

Press in the middle of the button to mute the sound

Press either end of the button to bring the sound back

*Prolonged listening at high volume levels can cause hearing damage!*

### Sound type or language

While you are watching TV, you can switch between the types of sound that are available.

Press repeatedly to display SOUND\* on Beo4

Press to bring up the current sound type in the display

Press GO repeatedly to switch to another sound type or language in a multi-language programme

Press to leave the SOUND function

*You can store your favourite sound type when tuning in your TV channels. For further information, refer to the chapter 'Edit tuned programs' on page 16 in the Reference book.*

This manual was scanned by  
and available FREE at [www.lconic-AV.co.uk](http://www.lconic-AV.co.uk)

\*NOTE! In order to display SOUND on Beo4, you must first add it to the Beo4 list of functions. Refer to the chapter 'Customise Beo4' on page 58 in the Reference book.

