

Reference book

This manual was scanned by  
and available FREE at [www.Iconic-AV.co.uk](http://www.Iconic-AV.co.uk)

BANG & OLUFSEN 

### **Tables of contents in the Reference book**

The contents of this Reference book is divided into sections. Each particular section starts with its own detailed table of contents provided with page references. Texts in black refers to the current section, whereas the remaining sections are described in general terms and written in grey.

**The main sections are:**

- Advanced operation
- Tuning and preference settings
- Placement, sockets and connections
- BeoLink system
- On-screen menus
- Index

This chapter tells you how to operate your television beyond daily use.

It also tells you how to operate a connected set-top box and other connected video equipment.

### **Advanced operation, 3**

- Set the television to switch itself on and off, 4
- Wake-up Timer, 6
- Use your television as a computer monitor, 7
- Set-top box operation, 8
- If you have a BeoCord V 8000 ...., 10

### **Tuning and preference settings, 13**

Find out how to set up your television for the first time and tune in programs. This chapter also contains information about settings for time, date, stand positions, picture and sound.

### **Placement, sockets and connections, 27**

Find out how to handle and place your television and where the sockets are placed. Find out how to connect a decoder, set-top box or BeoCord V 8000 video tape recorder to your television and how to register extra equipment. How to connect speakers and how to turn your television into a surround sound system or Home cinema, including how to choose speaker combinations.

### **BeoLink system, 49**

Find out how to connect an audio system to your television and operate an integrated audio/video system. Find out how to make link connections, operate a link system and set up your television in a link room. How to customise Beo4 to your system.

### **On-screen menus, 60**

Overview of the on-screen menus.

### **Index, 75**

# Set the television to switch itself on and off

You can make your television switch itself on and off automatically via the timed play and timed standby functions, for example, if there is a programme you do not want to miss.

Enter as many as six Timer settings, and bring up an on-screen list of the Timer settings you have entered. From this list, you can edit or delete your Timer settings.

If your television is integrated with a Bang & Olufsen audio or video system with a Master Link cable, these systems can perform the timed play or timed standby functions as well.

For your timed settings to be executed correctly, ensure that the built-in clock is set to the correct time. For further information, refer to the chapter 'Set the time and date' on page 23.

## Before you start ...

If you connect a Bang & Olufsen audio or video product to your television with a Master Link cable, you can exclude or include it in timed functions via the *Play Timer* menu. For example, set the television's Play Timer to ON and an audio system's Play Timer to OFF if you wish timed functions to apply only to the television.


### To switch on the Play Timer ...

- > Press **MENU** to bring up the TV SETUP menu and press **▼** to highlight PLAY TIMER.
- > Press **GO** to bring up the PLAY TIMER menu, and press **▼** or **▲** to highlight TIMER ON/OFF.
- > Press **GO** to bring up the TIMER ON/OFF menu.
- > Press **◀** or **▶** to reveal ON.
- > Press **GO** to store the setting.

For further information about how to switch the Play Timer on or off for a connected Bang & Olufsen audio or video product, refer to the Guide enclosed with the product.

## Timed play and timed standby

You can preset your television to start and stop automatically at the same time and day every week.

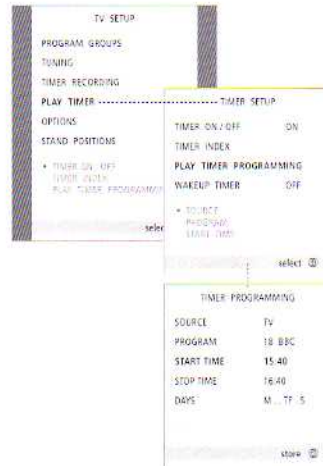

### Abbreviations for days of the week:

- M ... Monday
- T ... Tuesday
- W ... Wednesday
- T ... Thursday
- F ... Friday
- S ... Saturday
- S ... Sunday

This manual was scanned by and available FREE at [www.Iconic-AV.co.uk](http://www.Iconic-AV.co.uk)

NOTE! If your television is set up in a link room, Timer programming must be carried out on your main room system.

## View, edit or delete a Timer

Bring up an on-screen list of the settings you have entered. From this list, you can edit or delete your Timer settings.

### To enter settings for timed play or timed standby ...

- > Press **MENU** to bring up the TV SETUP menu and press **▼** to highlight **PLAY TIMER**.
- > Press **GO** to bring up the **PLAY TIMER** menu and press **▼** to highlight **PLAY TIMER PROGRAMMING**.
- > Press **GO** to bring up the **PLAY TIMER PROGRAMMING** menu.
- > Press **▲** or **▼** to move through the menu items.
- > Use the number buttons to enter information or press **◀** or **▶** to view your choices for each item. When **DAYS** is highlighted, press **▶** once to be able to move through the days, and press **▲** or **▼** to remove a day you do not want. Press **▶** to move to the next day, and press **◀** to move back to a previous day. When the weekday(s) you want are displayed, press **GO** to accept the day(s).
- > When you have filled in the required information, press **GO** to store your Timer settings.
- > Press **EXIT** to exit all menus.



### To view, edit or delete your Timer settings ...

- > Select **TIMER INDEX** from the **TIMER SETUP** menu to bring up your list of Timer settings. The first Timer setting in the list is already highlighted.
- > Press **▲** or **▼** to move the cursor to a Timer setting you wish to edit.
- > To edit a setting, press **GO** and follow the procedure described to the left.
- > To be able to delete a selected setting, press the yellow button.
- > If you change your mind, press **◀** to move the setting back into the list. You can also press **EXIT** to exit all menus.
- > Press the yellow button a second time to delete the setting.

You can make the television wake you up in the morning.

The Wake-up Timer is a once-only Timer, it lasts for one hour. Like an alarm clock it is disabled once it has been executed. It applies only to the television it has been programmed on.

Once you have made one Wake-up Timer, the television automatically suggests the time you entered for the latest Wake-up Timer when you enter a new one.

Wake-up Timers can of course also be disabled again.

When you have programmed a Wake-up Timer, the television cannot be part of an ordinary Play Timer or Standby Timer until the Wake-up Timer has been carried out or disabled.

### Enter a Wake-up Timer

You must choose the source and program number of your Wake-up Timer as well as the start time.



#### To enter settings for a Wake-up Timer ...

- > Press **MENU** to bring up the TV SETUP menu and press **▼** to highlight PLAY TIMER.
- > Press **GO** to bring up the PLAY TIMER menu and press **▼** to highlight WAKE UP TIMER.
- > Press **GO** to bring up the WAKE UP TIMER menu.
- > Press **▲** or **▼** to move through the menu items.
- > Use the number buttons to enter information or press **◀** or **▶** to view your choices for each item.
- > When you have filled in the required information, press **GO** to store your Wake-up Timer.
- > Press **EXIT** to exit all menus.

### Check or delete a Wake-up Timer

You can call up the settings for the Wake-up Timer to check the time or to disable the Wake-up Timer by setting it to OFF.



#### To change settings for a Wake-up Timer or delete it ...

- > Press **MENU** to bring up the TV SETUP menu and press **▼** to highlight PLAY TIMER.
- > Press **GO** to bring up the PLAY TIMER menu and press **▼** to highlight WAKE UP TIMER.
- > Press **GO** to bring up the WAKE UP TIMER menu.
- > Press **▲** or **▼** to move through the menu items.
- > Use **◀** or **▶** to change settings or enter a new time with the number buttons. Change the ON/OFF setting to OFF if you wish to delete the Wake-up Timer.
- > When you have made your changes, press **GO** to store them.
- > Press **EXIT** to exit all menus.

If you connect your television to a computer, as described on page 33, you can use it as a monitor.

Remember to register your computer in the CONNECTIONS menu. For further information about how to register the computer as a source, refer to the AV4 menu in the chapter 'On-screen menus' on page 67.

**IMPORTANT!** If you wish to connect a computer to the television and use the television as a monitor, make sure that you disconnect the television, the computer, and all equipment connected to the computer from the mains before you connect the computer and the television to each other.

When in use, the computer must be connected to a grounded wall outlet as specified in the computer's setting-up instructions.

### Bring up the computer image on the screen

To see the computer picture on the television screen, you must bring it up with Beo4.

*To bring up the computer picture ...*

Press repeatedly until PC appears in the Beo4 display **LIST** PC

Press to bring up the picture **GO**

*You can then operate the computer as you normally would.*

### Picture and sound adjustments

When you have the computer picture on the screen, you must call up the HDTV SETUP menu to make adjustments to brightness, contrast, colour and sound volume.

HDTV SETUP	
BRIGHTNESS	31
CONTRAST	31
COLOUR	31
VOLUME	40

- > Press **MENU** to bring up the HDTV SETUP menu.
- > Press **▲** or **▼** to move between the menu options.
- > Press **◀** or **▶** to adjust settings.
- > Press **GO** to store your settings and exit the menu.

*The settings you make in this menu only apply to the HDTV setup. Temporary volume adjustments can be made as usual.*

## Set-top box operation

The built-in Set-top Box Controller acts as an interpreter between a set-top box of your choice and the Beo4 remote control. When a set-top box is connected, you can use the Beo4 remote control to gain access to the programs and functions offered by your set-top box.

Some functions are immediately available via Beo4 when you switch on the set-top box. Additional functions are available through a Set-top Box Controller menu that you bring up on the screen.


### Set-top Box Controller menu

Some of the buttons on your set-top box remote control are not immediately available on Beo4. To find out which Beo4 buttons activate specific services or functions in your set-top box, bring up the Set-top Box Controller menu on the screen.

Press to switch on the set-top box **DTV**

Press to bring up the Set-top Box Controller menu **MENU**

Press the number button that activates the function you want, or ... **1 – 9**

... press one of the coloured buttons to activate a function 

*When set-top box is selected as source, press MENU twice to bring up the television's main menu.*



*Example of a Set-top Box Controller menu – The Beo4 buttons are shown to the left on the menu and the set-top box buttons are shown to the right.*

This manual was scanned by  
and available FREE at [www.Iconic-AV.co.uk](http://www.Iconic-AV.co.uk)

**NOTE!** Your set-top box can be registered as STB(DTV) or STB(V.AUX) in the CONNECTIONS menu. This determines which button activates the set-top box, DTV or V.AUX.

**NOTE!** If your set-top box is connected to the HDTV sockets, no Set-top Box Controller menu can be shown on the screen.

