

 
## Contents

- 3 Removing the transport screws
- 4 Placement
- 5 Connections

The Beogram CD 4500 is provided with screws on the base to protect the suspension during transport. These transport screws must be removed before you can operate the CD player.

Tilt the CD player to an upright position while holding it firmly.

Remove the two red screws and place them in the storage holes.

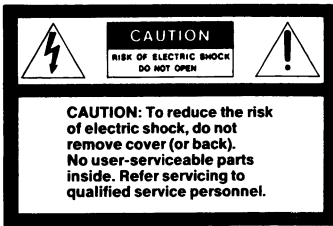


**WARNING:** To prevent fire or electric shock, do not expose this appliance to rain or moisture.



This symbol indicates that a dangerous voltage constituting a risk of electric shock is present within this unit.



 This symbol indicates that there are important operating and maintenance instructions in the literature accompanying this unit.

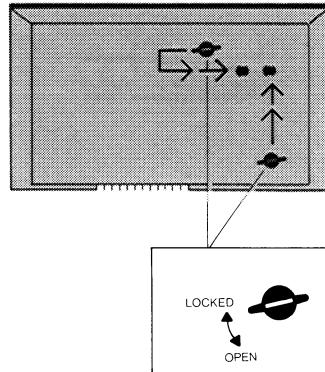


*Note: If you ever have to transport the CD player, we strongly recommend that you reinsert the transport screws beforehand.*

See the Beosystem 4500 user's guide for detailed operating instructions.

## Placement

 The Beogram CD 4500 must be placed so that ventilation is not impeded. Avoid placing it in direct sunlight, near radiators or other sources of heat.

Leave a space of at least 15 cm above the the CD player to allow the lid to open freely.

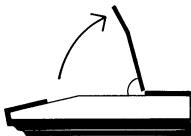

The plastic feet supplied with the Beogram CD 4500 (and also with the Beomaster 4500 and the Beocord 4500) enable you to place the products in a slightly tilted position on a stable surface. Insert the feet in the holes provided on the base.




Alternatively, the Beogram CD 4500 (and also the Beomaster 4500 and the Beocord 4500) can be hung on a wall. The WB 4500 wall bracket, type no. 2030, is specially designed for this purpose. One wall bracket is required for each of these products.

## Connections

Once connected to the Beomaster 4500 and to the mains, the Beogram CD 4500 is in stand-by mode and ready to be operated. The CD player is designed to be left in stand-by mode when not in use.


*Note: If the CD player has been exposed to low temperatures during transport and is then placed in a warm room, condensation can form within the mechanism. If this happens, the CD player cannot function until the humidity drops to an acceptable level. Therefore, allow it to adjust to room temperature for at least an hour or two before use.*

 Beomaster 4500

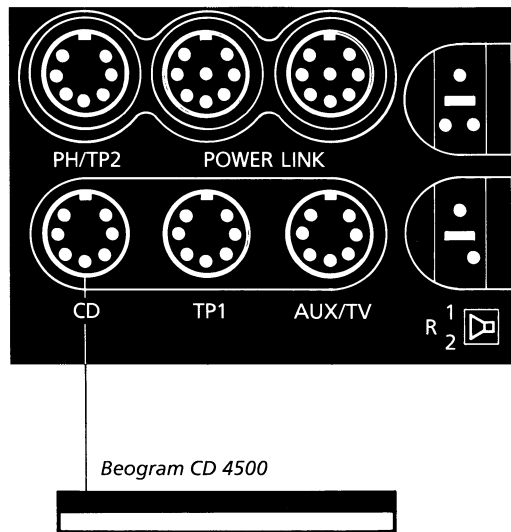

*Note: The socket on the rear panel of the Beogram CD 4500 is a digital output intended for possible future digital equipment.*
 
> Connections

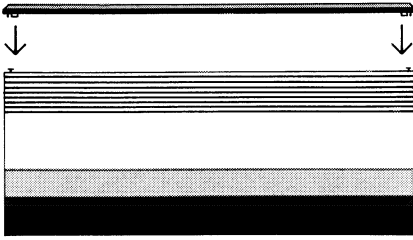

*The metal bar supplied with the Beogram CD 4500 is for concealing cables. When you have made the necessary connections, insert the bar in the holes provided on the rear panel and press downwards.*

## Caution

*The use of any controls, adjustments or procedures other than those specified herein may result in hazardous radiation exposure.*



*The black and yellow label on the compact disc player serves as a warning that the apparatus contains a laser system and is classified as a class 1 laser product. In case of any trouble with the compact disc player, please contact your Bang & Olufsen dealer. The apparatus must be opened by qualified servicemen only.*

*This Beogram CD fulfils the conditions stated in the EEC directive 82/499 concerning radio frequency interference.*

## Special note for the US market

*This equipment generates and uses radio frequency energy and if not installed and used properly, that is, in strict accordance with the manufacturer's instructions, may cause interference to radio and television reception. It has been type tested and found to comply with the limits for a Class B computing device in accordance with the specifications in Subpart J of Part 15 of FCC Rules, which are designed to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:*

- Reorient the receiving antenna*
- Relocate the computer with respect to the receiver*
- Move the computer away from the receiver*
- Plug the computer into a different outlet so that computer and receiver are on different branch circuits.*

*If necessary, the user should consult the dealer or an experienced radio/television technician for additional suggestions. The user may find the following booklet prepared by the Federal Communications Commission helpful:*

*“How to Identify and Resolve Radio-TV Interference Problems”.*

*This booklet is available from the U.S. Government Printing Office, Washington, DC 20402, Stock No. 004-00345-4.*

## Special note for the UK market

### **IMPORTANT**

*The wires in the mains lead supplied with this apparatus are coloured in accordance with the following code:*

*Blue: Neutral*

*Brown: Live*

*As the colours of the wires in the mains lead may not correspond with the coloured markings identifying the terminals in your unit, proceed as follows:*

*The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black.*

*The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.*

*Ensure that your equipment is connected correctly. If you are in any doubt, consult a qualified electrician.*

## **International guarantee**

This Bang & Olufsen product carries a guarantee against defects in workmanship and materials. The terms of the guarantee apply to the country of purchase but will be met by authorized Bang & Olufsen dealers in other countries. The guarantee period applying to the country of purchase takes priority over guarantee periods applying in other countries, even where differences exist.

In order to obtain service under this guarantee, a certificate stating the following information is required:

- Name of product and type number*
- Serial number*
- Date of purchase*
- Guarantee period*
- Dealer's or supplier's signature*