

 
## Contents

- 3 *Removing the transport screws*
- 3 *Adjustment to room temperature*
- 4 *Placement*
- 5 *Connections*
- 6 *Removing the disc tray protection*
- 7 *Displayed cues and symbols*
- 8 *Using the controls*
- 10 *Maintenance*

Before using the compact disc player you must remove the two transport screws underneath it.

To gain access to the screws, carefully turn the Beogram CD upside down. Remove the two screws with a screwdriver and place them in their storage holes as indicated by the drawing on the base.

*If you ever have to transport the Beogram CD, we strongly recommend that you reinsert the transport screws in the transport holes.*

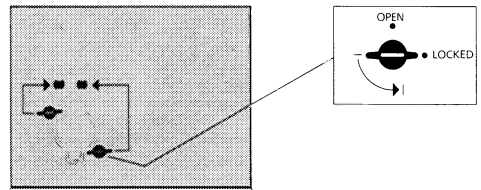

## Adjustment to room temperature

If the compact disc player is exposed to low temperatures, for instance during transport, and is then placed in a warm room, condensation can occur within the mechanism.

If this happens, it will not play until the humidity falls to an acceptable level. Therefore, allow the compact disc player to acclimatise to normal room temperature for at least an hour or two before use.

 
*See Beosystem 7000 user's guide for remote control operations.*

## Placement

The compact disc player must be placed horizontally on a stable surface.

Make sure to put it in a place where ventilation cannot be impeded.

Leave a space of approximately 15 cm in the front of the compact disc player so that the disc compartment can open freely.




## Connections


Once connected to the mains, the compact disc player will be in the stand-by mode and ready for operation.

*The stand-by mode is indicated by a tiny red light on the front panel.*
 
### Beomaster 7000

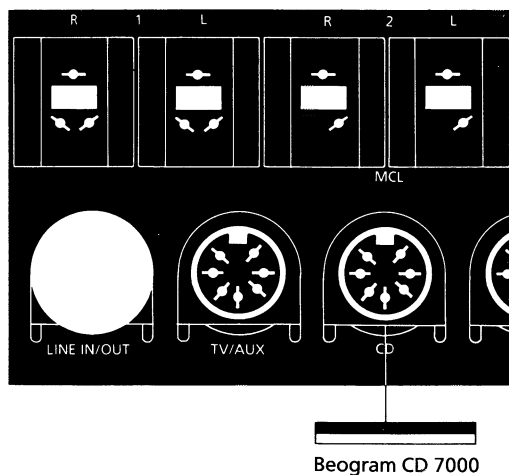


 The digital output on the rear panel is intended for possible future digital equipment.

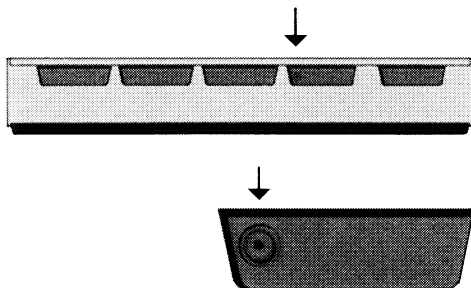

## Removing the disc tray protection

 Press the left-hand side of the metal front panel to open the disc tray, then remove the cardboard. Keep the cardboard in a safe place for later use.

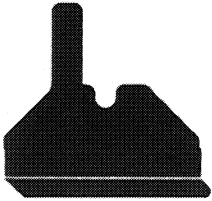

*If you ever have to transport the compact disc player, we strongly recommend that you reinsert both the cardboard protecting the disc tray and the two transport screws.*

### Displayed cues and symbols

 
*The cues and symbols shown will not be displayed at the same time*

Track numbers  
Current track blinks  
'+' indicates any  
number beyond 14

Compact disc player  
pausing

Space function cut in

Scanning in progress

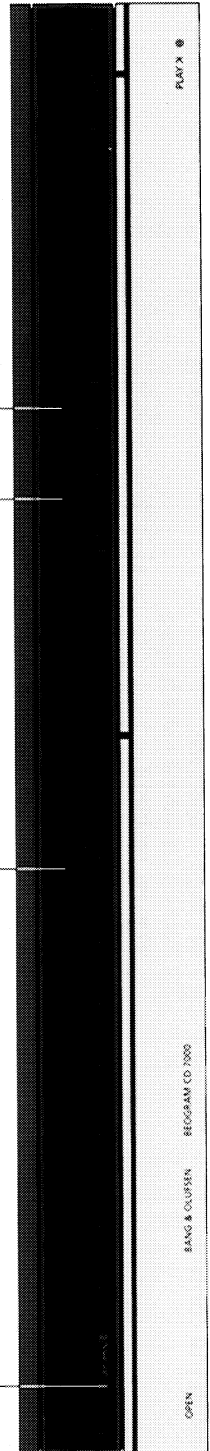


## Using the controls



Press the left-hand side of the metal front panel to open the disc tray

*Press again to close the disc tray*

 **Loading a compact disc**  
Place the CD with the text side facing up so you can read it

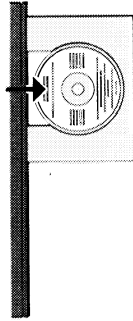

**Unloading a compact disc!**

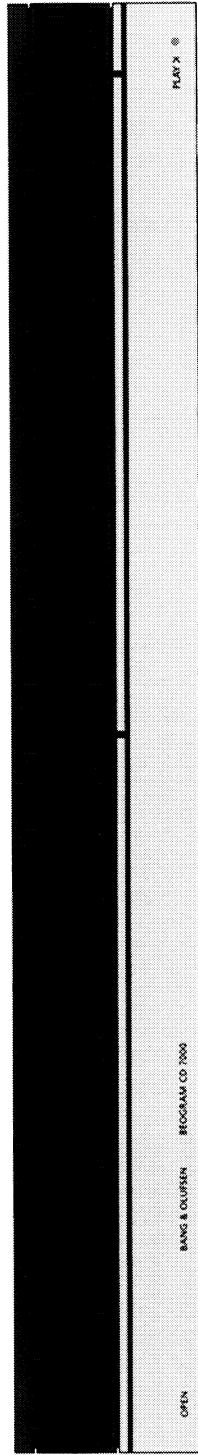  

You can also close the compartment and start playing directly by gently pressing the front edge of the disc tray or the right-hand side of the metal front panel

*If left open for more than 3 minutes, the disc compartment will close automatically*

### Playing a compact disc

Gently tap the right-hand side of the metal front panel

The compact disc player will register all the tracks on the compact disc and playing will begin almost immediately

*Press a second, third etc. time to step to the next tracks, or to step through all the tracks back to the first track*

### Switching off

Keep the right-hand side of the front panel depressed for 2 seconds. Playing will stop and the compact disc player will return to the stand-by mode

*At the end of a compact disc, playing will stop automatically and the compact disc player will then revert to the stand-by mode*

## Maintenance

 
Use a soft, dry cloth to wipe dust off the compact disc player. Any dust in the disc compartment should be carefully removed.

Do not push down on the disc tray.

**Do not use alcohol or other solvents to clean any part of the Beogram CD 7000 or other units in your Beosystem 7000.**

## Caution

*The use of any controls, adjustments or procedures other than those specified herein may result in hazardous radiation exposure.*



**COMPACT  
disc  
DIGITAL AUDIO**

*The black and yellow label on the compact disc player serves as a warning that the apparatus contains a laser system and is classified as a class 1 laser product. In case of any trouble with the compact disc player, please contact your Bang & Olufsen dealer. The apparatus must be opened by qualified servicemen only.*

*This Beogram CD fulfils the conditions stated in the EEC directive 82/499 concerning radio frequency interference.*

## International guarantee

This Bang & Olufsen product carries a guarantee against defects in workmanship and materials. The terms of the guarantee apply to the country of purchase but will be met by authorized Bang & Olufsen dealers in other countries. The guarantee period applying to the country of purchase takes priority over guarantee periods applying in other countries, even where differences exist.

In order to obtain service under this guarantee, a certificate stating the following information is required:

- Name of product and type number
- Serial number
- Date of purchase
- Guarantee period
- Dealer's or supplier's signature

## Special note for the UK market

### IMPORTANT

*The wires in the mains lead supplied with this apparatus are coloured in accordance with the following code:*

*Blue: Neutral*

*Brown: Live*

*As the colours of the wires in the mains lead may not correspond with the coloured markings identifying the terminals in your unit, proceed as follows:*

*The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black.*

*The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.*

*Ensure that your equipment is connected correctly. If you are in any doubt, consult a qualified electrician.*