



Should you lose or damage the BeoVision MX 8000 CD-rom, the information can also be found on the Bang & Olufsen web-site; www.bang-olufsen.com or you can contact your retailer.

An explanation of symbols in the guides

The illustration below shows what a button, source or status display looks like in the instruction sequences used in the guides.

TV LIST Buttons on the Beo4 remote control



STORE Display on the Beo4 remote control

TV 12 Display on the BeoVision MX 8000

The User's guides

This **Guide** contains information about daily use, more advanced operations as well as basic setup and maintenance of your product.

The **CD-rom Reference book** contains information about connecting loudspeakers, adjusting loudspeaker setup, connecting external equipment, connecting an audio system and setting up and operating a BeoLink® system. It also contains an overview of on-screen menus.

Both guides contain an index which can help you find the specific subject, you want to know more about.

We expect that your Bang & Olufsen retailer delivers the product to your home, installs it and makes all necessary connections as well as the initial setting-up. However, the information required to install and set up the product is included in the guides in case you need it at a later date if for example you move your products or expand your system.

The Reference book is a file in PDF-format on the enclosed CD-rom. To read this PDF-file, the Acrobat Reader program must be installed on your computer. If you do not have the program, it can be installed from the CD-rom. Then select the file with the language you want, and the Reference book opens.

