

Serene

Guide

**This manual was scanned by
and available FREE at www.Iconic-AV.co.uk**

BANG & OLUFSEN



Important safety precautions

Note: Failure to comply with the following precautions may be dangerous or illegal.

Drive safely at all times

Do not use the phone while driving. Park the vehicle first.

Switch off the phone when refuelling

Do not use the phone at a refuelling point (service station) or near fuels or chemicals.

Switch off in an aircraft

Wireless phones can cause interference. Using them in an aircraft is both illegal and dangerous.

Switch off the phone near all medical equipment

Hospitals or health care facilities may be using equipment that could be sensitive to external radio frequency energy. Follow any regulations or rules in force.

Interference

All wireless phones may be subject to interference, which could affect their performance.

Be aware of special regulations

Meet any special regulations in force in any area and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger.

Water resistance

Your phone is not water-resistant. Keep it dry.

Emergency calls

Key in the emergency number for your present location, then press **SEND**.

Keep your phone away from small children

Keep the phone and all its parts, including accessories, out of the reach of small children.

Accessories and batteries

Use only Samsung and Bang & Olufsen-approved accessories and batteries. Use of any unauthorised accessories could damage your phone and may be dangerous.

Notes:

- The phone could explode if the battery is replaced with an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions.

Qualified service

Only qualified service personnel may repair your phone.

For more detailed safety information, see "Health and safety information" on page 60.

**This manual was scanned by
and available FREE at www.lconic-AV.co.uk**

About this Guide

This Guide provides you with information about how to use your phone. To quickly learn the basics for your phone, please refer to "Get started" and "Step outside the phone."

In this guide, the following visual features appear:

- Note** Indicates that you need to pay careful attention to the subsequent information regarding safety or phone features.
- ▶ Indicates that you can get more information on the referenced page.
- Indicates that you need to press the Navigation keys to scroll to the specified option and then select it.
- BOLD** Indicates a key on the phone. For example, **OK**

Special features



Bluetooth

Transfer media files and personal data and connect to other devices using free, wireless Bluetooth technology.



Camera

Use the camera in your phone to take a photo.



Web browser

Access the wireless web for various services and current information.



Get personal with photo caller ID

See who is calling you with their very own photo displays.



Name card

Create name cards with your number and profile.

Multimedia Message Service (MMS)

Send and receive MMS messages with a combination of text, images, and audio.

Email

Send and receive emails with images and audio attachments.



Organiser

Keep track of your daily, weekly, and monthly schedule.



Voice recorder

Record memos or sounds.

**This manual was scanned by
and available FREE at www.Iconic-AV.co.uk**

Contents

Your phone, 5

Get started, 6

Install and charge phone 6

Power on or off 8

Keys 8

Display 9

Access menu options 10

Customise your phone 10

Make/Answer calls 11

Step outside the phone, 12

Use the camera 12

Browse the web 12

Use the Phonebook 13

Send messages 13

View messages 14

Use Bluetooth 15

Enter text, 16

Call functions, 18

Messages, 21

Camera, 31

WAP browser, 34

Organiser, 36

Library, 39

Phonebook, 41

Call log, 44

Applications, 45

Settings, 48

SIM services, 57

Solve problems, 58

Health and safety information, 60

Index, 67

Conditions of the guarantee, 70

Waste Electrical and Electronic Equipment (WEEE), 71

**This manual was scanned by
and available FREE at www.iconic-AV.co.uk**

To access Menu mode, press **OK** while the phone is in Idle mode.

1 Messages ▶ p. 21

- 1 Create ▶ p. 21
- 2 Inbox ▶ p. 23
- 3 Outbox ▶ p. 25
- 4 Drafts ▶ p. 25
- 5 Sent ▶ p. 25
- 6 Email box ▶ p. 25
- 7 My folders ▶ p. 26
- 8 Text templates ▶ p. 27
- 9 Settings ▶ p. 27
- 0 Memory status ▶ p. 30

2 Camera ▶ p. 31

- 1 Single shot ▶ p. 31
- 2 Multi shot ▶ p. 31
- 3 Night shot ▶ p. 32
- 4 Go to photos ▶ p. 33
- 5 Effects ▶ p. 33
- 6 Settings ▶ p. 33

3 WAP browser ▶ p. 34

- 1 Home ▶ p. 34
- 2 Bookmarks ▶ p. 35
- 3 Enter URL ▶ p. 35
- 4 WAP profile ▶ p. 35
- 5 Clear cache ▶ p. 35

4 Organiser ▶ p. 36

- 1 Month view ▶ p. 36
- 2 Week view ▶ p. 38
- 3 Day view ▶ p. 38
- 4 Appointments ▶ p. 38
- 5 Anniversary ▶ p. 38
- 6 To do ▶ p. 38
- 7 Memo ▶ p. 38
- 8 Delete all ▶ p. 38
- 9 Missed events ▶ p. 38
- 0 Memory status ▶ p. 38

5 Library ▶ p. 39

- 1 Images ▶ p. 39
- 2 Sounds ▶ p. 39
- 3 Other files ▶ p. 40
- 4 Memory status ▶ p. 40

6 Phonebook ▶ p. 41

- 1 Contacts list ▶ p. 41
- 2 Add new contact ▶ p. 41
- 3 Group ▶ p. 42
- 4 Speed dial ▶ p. 42
- 5 My business card ▶ p. 42
- 6 Own number ▶ p. 43
- 7 Settings ▶ p. 43
- 8 Copy to SIM ▶ p. 43
- 9 Delete all ▶ p. 43
- 0 Memory status ▶ p. 43
- * Service Numbers* ▶ p. 43

7 Call log ▶ p. 44

- 1 Recent calls ▶ p. 44
- 2 Missed calls ▶ p. 44
- 3 Dialed calls ▶ p. 44
- 4 Received calls ▶ p. 44
- 5 Delete all ▶ p. 44
- 6 Call time ▶ p. 44

8 Applications ▶ p. 45

- 1 Voice memo ▶ p. 45
- 2 World clock ▶ p. 46
- 3 Alarm ▶ p. 46
- 4 Calculator ▶ p. 46
- 5 Currency converter ▶ p. 47
- 6 PIM sync ▶ p. 47

9 Settings ▶ p. 48

- 1 Time & Date ▶ p. 48
- 2 Phone settings ▶ p. 48
- 3 Display settings ▶ p. 48
- 4 Sound settings ▶ p. 49
- 5 Network services ▶ p. 49
- 6 Bluetooth ▶ p. 51
- 7 Security ▶ p. 54
- 8 Connection settings ▶ p. 55
- 9 Docking station** ▶ p. 56
- 0 Reset settings ▶ p. 56

0 SIM services ▶ p. 57

* Shows only if supported by your SIM card.

**Shows only if the phone is connected to a Docking station.

**This manual was scanned by
and available FREE at www.lconic-AV.co.uk**

Your phone

You can obtain various accessories from your local Samsung and Bang & Olufsen retailer.

Note: The items supplied with your phone and the accessories available at your Samsung and Bang & Olufsen retailer may vary, depending on your country or service provider.

Unpack



Phone



Battery



User's Guide



Travel Adapter



Docking station



Screwdriver

Using the phone

Hold the phone with the display down.

 
If you want to use the phone with the display up, press and hold **C** in Idle mode to rotate the display orientation 180 degrees.

Service light

The service light indicates the following status:

When	Service light
out of service area,	blinks red slowly.
a call or message comes in,	blinks green fast.
the time for an alarm arrives,	blinks green fast.
a popup message appears in Idle mode,	blinks green slowly until you confirm the popup.


Phone

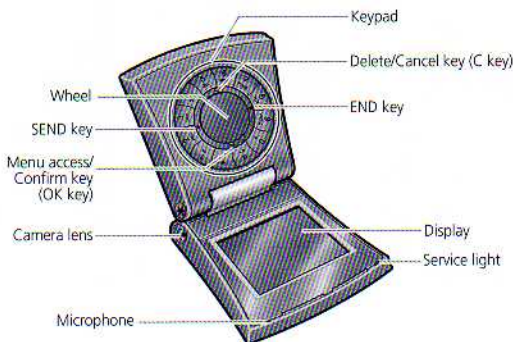

This manual was scanned by
and available FREE at www.Iconic-AV.co.uk

Install and charge phone

 
1. If the phone is already on, first turn it off by pressing and holding **END**.
2. Loosen the screws on the sides using the supplied screwdriver.

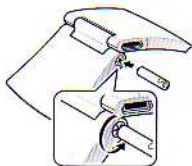

3. Lift the battery cover away, as shown.




 4. Insert the SIM card.

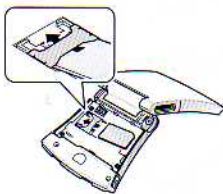

Note: Make sure that the gold-coloured contacts on the card face down into the phone.

 5. Install the battery.

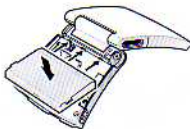


SIM card information

When you subscribe to a cellular network, you receive a plug-in SIM (Subscriber Identity Module) card loaded with your subscription details, such as your PIN code and available optional services.

Removing the battery

 Lift the battery away, as shown.

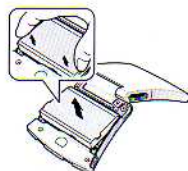

This manual was scanned by
and available FREE at www.lconic-AV.co.uk