 
 


BeoMaster 5

Guide

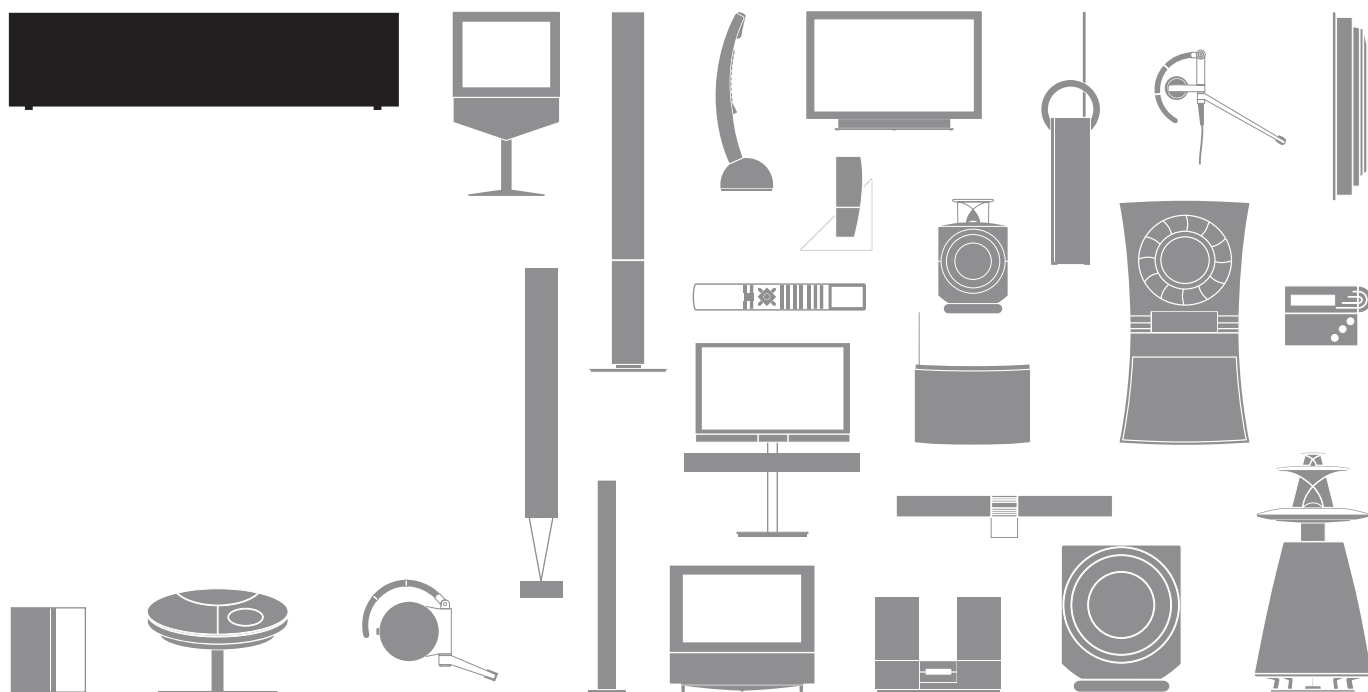

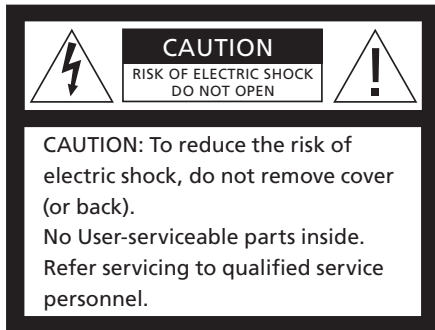

WARNING: To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture. Do not expose this equipment to dripping or splashing and ensure that no objects filled with liquids, such as vases, are placed on the equipment. To completely disconnect this equipment from the AC Mains, disconnect the mains plug from the wall socket. The disconnect device shall remain readily operable.



The lightning flash with arrowhead symbol within an equilateral triangle, is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

For the US-market only!

NOTE: This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the retailer or an experienced radio/TV technician for help.

For the Canadian market only!

This class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Important!

- Avoid placing the product in direct sunlight or direct artificial light, such as a spotlight.
- Make sure that the product is set up, placed and connected in accordance with the instructions.
- Place your product on a firm surface or stand where you want it placed permanently. Use Bang & Olufsen approved stands and wall brackets only!
- Do not place any items on top of your product.
- Do not subject the product to high humidity, rain or sources of heat.
- The product is developed for indoor use in dry, domestic environments only. Use within a temperature range of 10–40°C (50–105°F).
- Leave enough space around the product for adequate ventilation.
- Do not connect any of the products in your system to the mains, until you have connected all the cables.
- Do not attempt to open the product. Leave such operations to qualified service personnel.
- In case your product starts making excessive noise, you should hand it in for service immediately.
- The product can only be switched off completely by disconnecting it from the wall socket.



Dear Customer

This Guide contains information you need to know about the daily use of your Bang & Olufsen product. Your retailer must deliver, install and set up your product.

In order to use BeoMaster 5, it must be connected to your computer. How to use the dedicated software is described in the Guide in pdf format supplied with the BeoPlayer software for your computer.

The needs of the user are considered carefully when designing and developing Bang & Olufsen products. Therefore, please take the time to tell us about your experience with your product.

To contact us, visit our website on ...

www.bang-olufsen.com

or write to: Bang & Olufsen a/s
BeoCare
Peter Bangs Vej 15
DK-7600 Struer

or fax: Bang & Olufsen
BeoCare
+45 9785 3911 (fax)

Technical specifications, features and the use thereof are subject to change without notice

3509898 0807

Introduction

 
The BeoMaster makes it possible for you to enjoy the digital sources via the Bang & Olufsen products already present in your home. Listen to digital music and Internet radio, view digital photos and video clips and visit websites.

Before you start

Refer to the Guide installed with the BeoPlayer on your computer for more information.*1

Rip CDs, create groups, enter favourite websites on your computer


Transfer your digital content from your computer to your BeoMaster

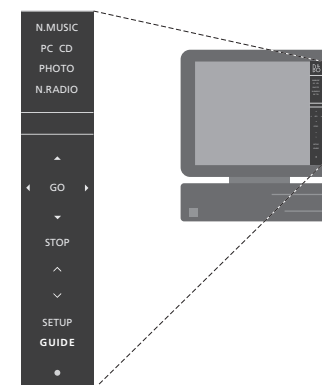

BeoMaster Sources

Once the BeoMaster starts up, you can activate the sources from the source selection menu.

 PC Select source Activate source

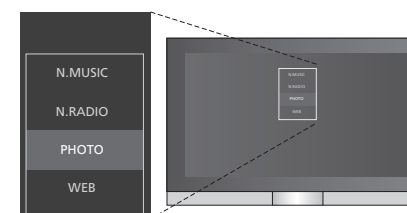

Important

*1 **BeoPlayer or BeoPort** If you have a BeoPort box, the BeoPlayer software is called BeoPort. In this Guide we refer to the dedicated software as BeoPlayer.

How to use your remote control

This describes how you use the basic functions on the BeoMaster with Beo5 and Beo4.

The diagram illustrates the BeoMaster interface and two remote controls. The BeoMaster display shows a 'Living Room' menu with options: N.MUSIC, N.RADIO, PC, V.MEM, DTV, A.MEM, TV, DVD, CD. The circular BeoMaster control has buttons for STOP, PLAY, and a central wheel. The Beo5 remote has a screen showing 'PC' and buttons for TV, LIGHT, RADIO, DTV, DVD, CD, V.MEM, RECORD, A.MEM, a numeric keypad (0-9), TEXT, 0, MENU, and a central GO button. The Beo4 remote has a screen showing 'PC' and buttons for LIST, EXIT, and STOP.

BeoMaster Functions:

- PC** (Light grey): Activate BeoMaster (soft button)*¹
- Back** (Dark grey): Back up through Beo5 displays
- Scene** (Dark grey): Bring up scene buttons. Press again to return
- +** (Dark grey): Select numbered track, station or option. Press again to return
- STOP** (Dark grey): Press once to pause. Go back one level
- PLAY** (Dark grey): Start playback
- Coloured buttons** (Dark grey): Press to play content of coloured list*². Press and hold to add or remove from coloured list*³
- Volume** (Dark grey): Turn to adjust volume. To mute, turn quickly counter-clockwise
- GO** (Dark grey): Play highlighted track, station, etc. Accept/store settings. Hold to add item to group/list
- Left/Right** (Dark grey): Browse groups/lists. Expand or collapse group/list
- Up/Down** (Dark grey): Step through groups, lists, tracks, stations, etc.
- BACK** (Dark grey): Remove menu overlay. Press again to toggle
- Standby** (Dark grey): Standby

Beo5 Remote Functions:

- PC** (Light grey): Press LIST to display PC. Press GO to activate source
- 0-9** (Dark grey): Select numbered track, station or option
- MENU** (Dark grey): Bring up menu overlay
- STOP** (Dark grey): Press once to pause. Go back one level
- Coloured buttons** (Dark grey): Press to play content of coloured list. Press and hold to add or remove from coloured list
- GO** (Dark grey): Play highlighted track, station, etc. Accept/store settings. Hold to add item to group/list
- Volume** (Dark grey): Press to adjust volume. To mute, press the middle of the button
- LIST** (Dark grey): Display extra 'buttons' on Beo4. Press repeatedly to change 'buttons'
- Left/Right** (Dark grey): Browse groups/lists. Expand or collapse group/list
- Up/Down** (Dark grey): Step through groups, lists, tracks, stations, etc.
- EXIT** (Dark grey): Remove menu overlay. Press again to toggle
- Standby** (Dark grey): Standby

Beo4 Remote Functions:

- PC** (Light grey): Press LIST to display PC. Press GO to activate source
- 0-9** (Dark grey): Select numbered track, station or option
- MENU** (Dark grey): Bring up menu overlay
- STOP** (Dark grey): Press once to pause. Go back one level
- Coloured buttons** (Dark grey): Press to play content of coloured list. Press and hold to add or remove from coloured list
- GO** (Dark grey): Play highlighted track, station, etc. Accept/store settings. Hold to add item to group/list
- Volume** (Dark grey): Press to adjust volume. To mute, press the middle of the button
- LIST** (Dark grey): Display extra 'buttons' on Beo4. Press repeatedly to change 'buttons'
- Left/Right** (Dark grey): Browse groups/lists. Expand or collapse group/list
- Up/Down** (Dark grey): Step through groups, lists, tracks, stations, etc.
- EXIT** (Dark grey): Remove menu overlay. Press again to toggle
- Standby** (Dark grey): Standby

Useful hints

***¹ About buttons** Light grey buttons indicate that you have to press a text in the display. Dark grey buttons indicate that you have to press a hard button.

***² Coloured buttons** Press the wheel nearby to activate a coloured button.


***³ NOTE!** All views but playlist view.

4	Operate sources
4	Use menu overlays
4	Use lists
8	N.MUSIC
9	N.RADIO
10	PHOTO
11	WEB
12	Use from a link room
16	Set up your system
20	Menus and symbols

Operate sources

Bring up and operate your sources. The basic principles of operation are the same for each source. Find additional functions in the menu overlays.

 Activate a source to use these functions

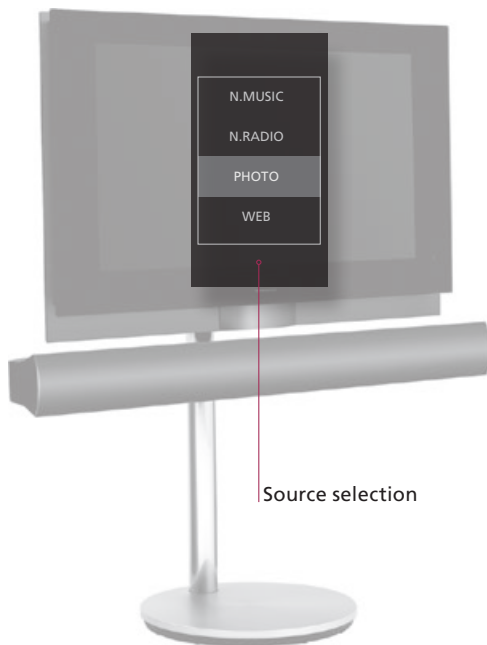

Source selection

Beo5 Operation



Start source

Activate the BeoMaster and select source.

Change source

Bring up the source selection menu to change source.*1

Bring up menu overlay and change view

Step between groups.

Browse groups/lists

View groups, select specific track, station, photo or website.*2

Add to list

Add item to list.

Remove from list

Remove content from list.*3

Add to/remove from coloured list

If the item is already present, this removes the item from the coloured list.

Glossary

- N.MUSIC** Digital music files made available through your Bang & Olufsen system.
- N.RADIO** Radio stations available from the Internet.
- PHOTO** Digital photos and video clips shown on your television screen.
- WEB** Selected websites displayed on your television.
- Item** An item is a track, a photo, a station, a list, or an album.
- Group** A group consists of minimum one item.
- List** Refers to a playlist and a coloured list.

Beo4 Operation



PC	◀▶	GO	Press	Select source and confirm		
MENU	GO	◀▶	GO	Bring up menu overlay Bring up source selection menu Select source and confirm		
MENU	+	5	then	◀▶	GO	Bring up menu overlay Press Select view and confirm
◀▶	or	GO	◀▶	◀▶▶▶	Step between groups/lists Expand group/list Step in a group/list Collapse group/list	
GO	then	◀▶	GO	Press and hold Select list and confirm		
MENU	+	8	Bring up menu overlay Press	Follow the on-screen information		
<p>Press and hold All views but playlist view</p>						

PC	GO	◀▶	GO	Select and confirm Select source and confirm	
MENU	GO	◀▶	GO	Bring up menu overlay Select source and confirm	
MENU	5	◀▶	GO	Bring up menu overlay Select view and confirm	
◀▶	or	GO	◀▶	◀▶▶▶	Step between groups/lists Expand group/list Step in or collapse group/list
GO	then	◀▶	GO	Press and hold Select list and confirm	
MENU	8	Bring up menu overlay Press	Follow the on-screen information		
<p>Press and hold</p>					

Useful hints

 
- *1 **Activate a source** You can use the number buttons 1–4 to select a source.
- *2 **Skip groups/lists** Press left/right on your remote control to skip groups/lists.
- *3 **Remove content from list or group** You can remove contents from lists and coloured lists. In all other views the function deletes the content. The function also deletes lists.

NOTE! When you switch on the BeoMaster, the start up time may be up to 30 seconds.



Contents

- 8 N.MUSIC
- 9 N.RADIO
- 10 PHOTO
- 11 WEB
- 12 Use from a link room

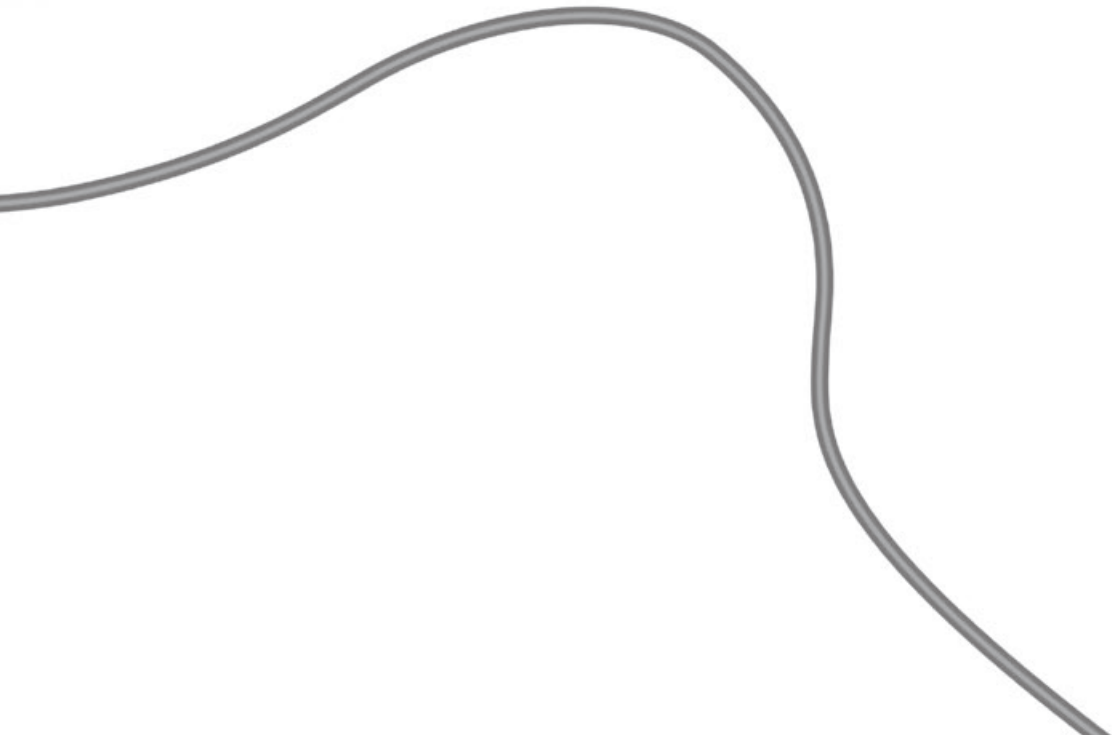

You can hide away all your CDs and still have access to the music through your BeoMaster. When you have copied your music to your BeoMaster, you can browse by genre, artist, album, title, or folder.

Bring cursor to current track

Move the cursor to the track being played.

Bring up menu overlay

→ Press 1 for 'Home/Return'

Switch random on/off

Play tracks in the selected group in random order.

Bring up menu overlay

→ Press 3 for 'Random on/off'

Show/hide information

Bring up track information.

Bring up menu overlay

→ Press 4 for 'Show info/Hide info'

Show views

Show the views available for N.MUSIC.

Bring up menu overlay

→ Press 5 for 'List root'

Play all/play group

Set the music system to play the entire music collection or group/list.

Bring up menu overlay

→ Press 6 for 'Play all/Play group'

Cover/track information

Show full size cover or track information on the screen.

Bring up menu overlay

→ Press 7 for 'Full Size cover/Track info view'

Delete content

Select the content you wish to delete.

Select track/album/group/list

→ Bring up menu overlay

→ Press 8 for 'Delete' → Follow the on-screen instructions

Useful hints

- Group Guide** A group is for example a list, a CD or a photo album. To learn more about the dedicated software and the BeoMaster, see the Guide in BeoPlayer on your computer.
- Edit lists** We recommend that you create and edit lists on your computer. See the BeoPlayer Guide.

NOTE! For all sources, you can press MENU followed quickly by a number button to select an option from the menu overlay.

Access Internet radio stations worldwide. Sort the radio stations by country, language, genre and title and make your own lists with your favourite stations.

Bring cursor to current station

Move the cursor to the station being played.

Bring up menu overlay

→ Press 1 for 'Home/Return'

Show views

Show the views available for N.RADIO.

Bring up menu overlay

→ Press 5 for 'List root'

Delete content

Select the content you wish to delete.

Select station/group/list

→ Bring up menu overlay

→ Press 8 for 'Delete'

→ Follow the on-screen instructions

Configure N.RADIO

Change settings for N.RADIO.

Bring up menu overlay

→ Press 9 for 'Configuration'

 Change setting

 Store setting and leave the menu

Edit lists We recommend that you create and edit lists on your computer. See the BeoPlayer Guide.

Coloured lists Each coloured lists for N.MUSIC can contain up to 9 items. Each coloured list for N.RADIO can contain up to 99 stations. To change these settings, see the BeoPlayer Guide.

Use the dedicated software on your computer to organise photos and video clips. Enjoy digital photos and video clips on your television.

Bring cursor to photo/clip

Move the cursor to the photo/video clip being viewed.

Bring up menu overlay

→ Press 1 for 'Home/Return'

Start slideshow

Watch photos/clips in the selected group or all groups.*1

Bring up menu overlay

→ Press 3 for 'Slideshow'

→ Press STOP to pause

Show/hide information

Bring up photo/clip information.

Bring up menu overlay

→ Press 4 for 'Show info/Hide info'

Watch a video clip

While watching a video clip and no list is shown on the screen.

Hide menu overlay



Rotate/zoom photo

Rotate and zoom in on a photo on the screen.

Bring up menu overlay

→ Press 6 for 'Rotate right' and 7 for 'Zoom/Zoom off'

→ Press GO/STOP to zoom in/zoom out

→ Press left/right to pan

Delete content

Select the content you wish to delete.

Select photo/clip/group/list

→ Bring up menu overlay

→ Press 8 for 'Delete'

→ Follow the on-screen instructions

Configure PHOTO

Change settings for PHOTO.

Bring up menu overlay

→ Press 9 for 'Configuration'




Useful hints

Edit lists We recommend that you create and edit lists on your computer. See the BeoPlayer Guide.

*1 According to your settings in the 'Configuration' menu.

Visit your favourite websites via your television. Switch between websites and navigate on the television screen by means of the remote control.

Scroll →  → Scroll on the website
 Scroll on a website when no list is shown.

Navigate → Hide list →  → Change to cursor →  → Move cursor to a link →  → Bring up new page →  → Change to scroll mode
 Move to a link and bring up the new website.

Add bookmark → Select bookmark →  → Press and hold →  → Select group →  → Confirm
 Add the highlighted bookmark to a group.

Bring cursor to website → Bring up menu overlay → Press 1 for 'Home/Return'
 Move the cursor to the website being viewed.

View popups → Bring up menu overlay → Press 3 for 'Popup list'
 View a list of popups from the menu overlay.

View next/previous → Bring up menu overlay → Press 4 for 'Previous' and 6 for 'Next' website
 Step between websites.*2

Configure WEB → Bring up menu overlay → Press 9 for 'Configuration' →  → Change settings →  → Store setting and leave the menu
 Change settings for WEB.

- Organise bookmarks and folders** Add the websites you want to view on your television screen in Internet Explorer on your computer. See the BeoPlayer Guide.
- Delete bookmarks** Bring up the menu overlay, then press 8 and follow the on-screen instructions.
- *2 Popups** Use 4 and 6 to view the popups shown on the television screen.

Use from a link room

If you have BeoLink installed in your home, you can use the following functions from a link room.

Switch on N.MUSIC

Switch on N.MUSIC from a link room.

N.MUSIC

Press

Switch on N.RADIO

Switch on N.RADIO from a link room.

N.RADIO

Press

Play coloured lists

Play coloured lists from a link room.



Press to play a coloured list



Step in a coloured list

Play specific track/station

Press a digit within two seconds.



Press to play a specific track or station



0-9

Add to coloured list

Quickly add track or station to a coloured list.
If a track or station is already in a list it cannot be added.

 


Press and hold





- 16 Set up your system
- 20 Menus and symbols

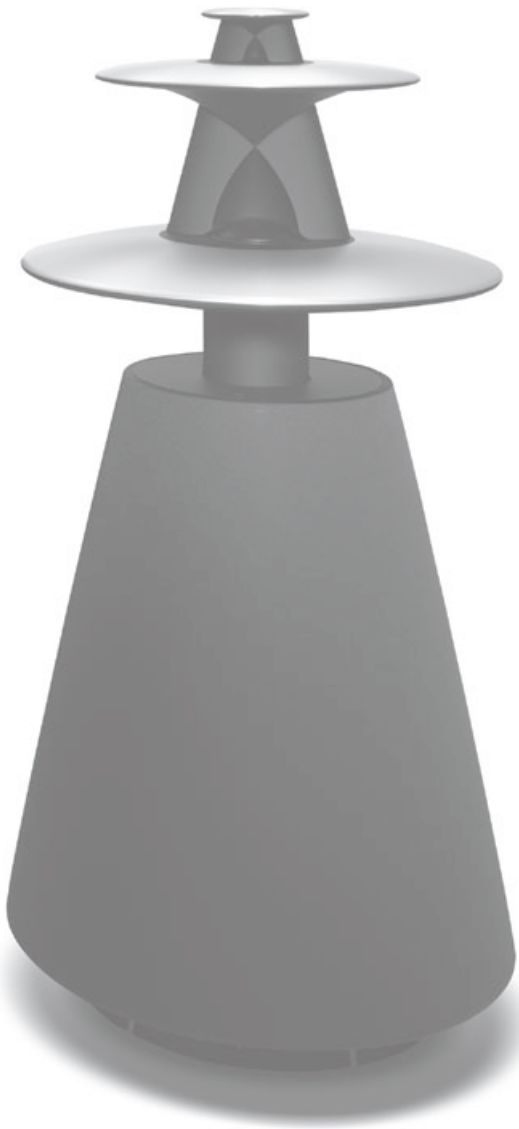


Set up your system

The BeoMaster may be set up in different ways – depending on your other Bang & Olufsen products. Contact your retailer if you need to make changes to your setup.

BeoSound 5 setup

 
When the BeoMaster is set up with BeoSound 5, operation of Music and Radio takes place via BeoSound 5.

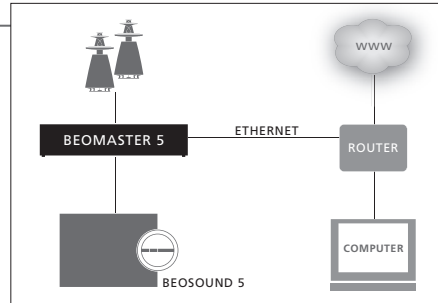

For information on BeoSound 5 operation, see the BeoSound 5 Guide.

Audio/video system setup

 The BeoMaster is set up with your audio/video system in your home.


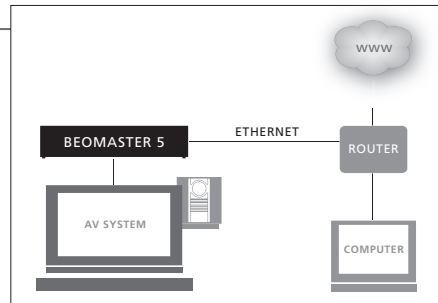


For information on how to set up connected products, see the Guides enclosed with the products.

Important

To ensure proper ventilation, allow at least 5 cm (2") of space at the sides of the product and 10 cm (4") above it.

  For safety reasons, the mains cord from the wall outlet *must be* secured to the product. Use the enclosed cable clamp and screw.

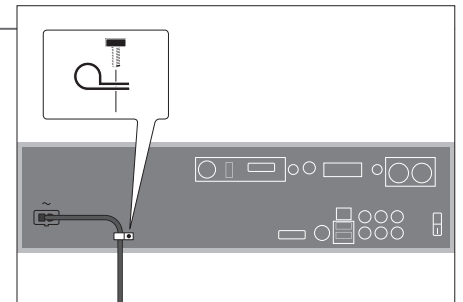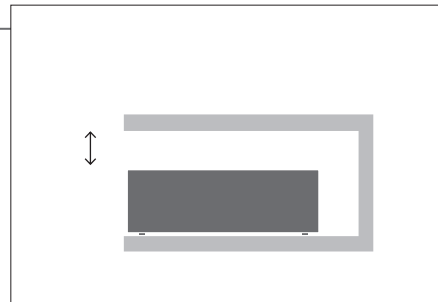


Information

Cleaning Wipe dust off the surfaces using a dry, soft cloth. To remove stains or dirt, use a soft, damp cloth and a solution of water and mild detergent, such as washing-up liquid.

The BeoMaster can only be switched off completely by disconnecting it from the wall socket.

 Do not connect any of the products in your system to the mains supply, until you have made all the connections.

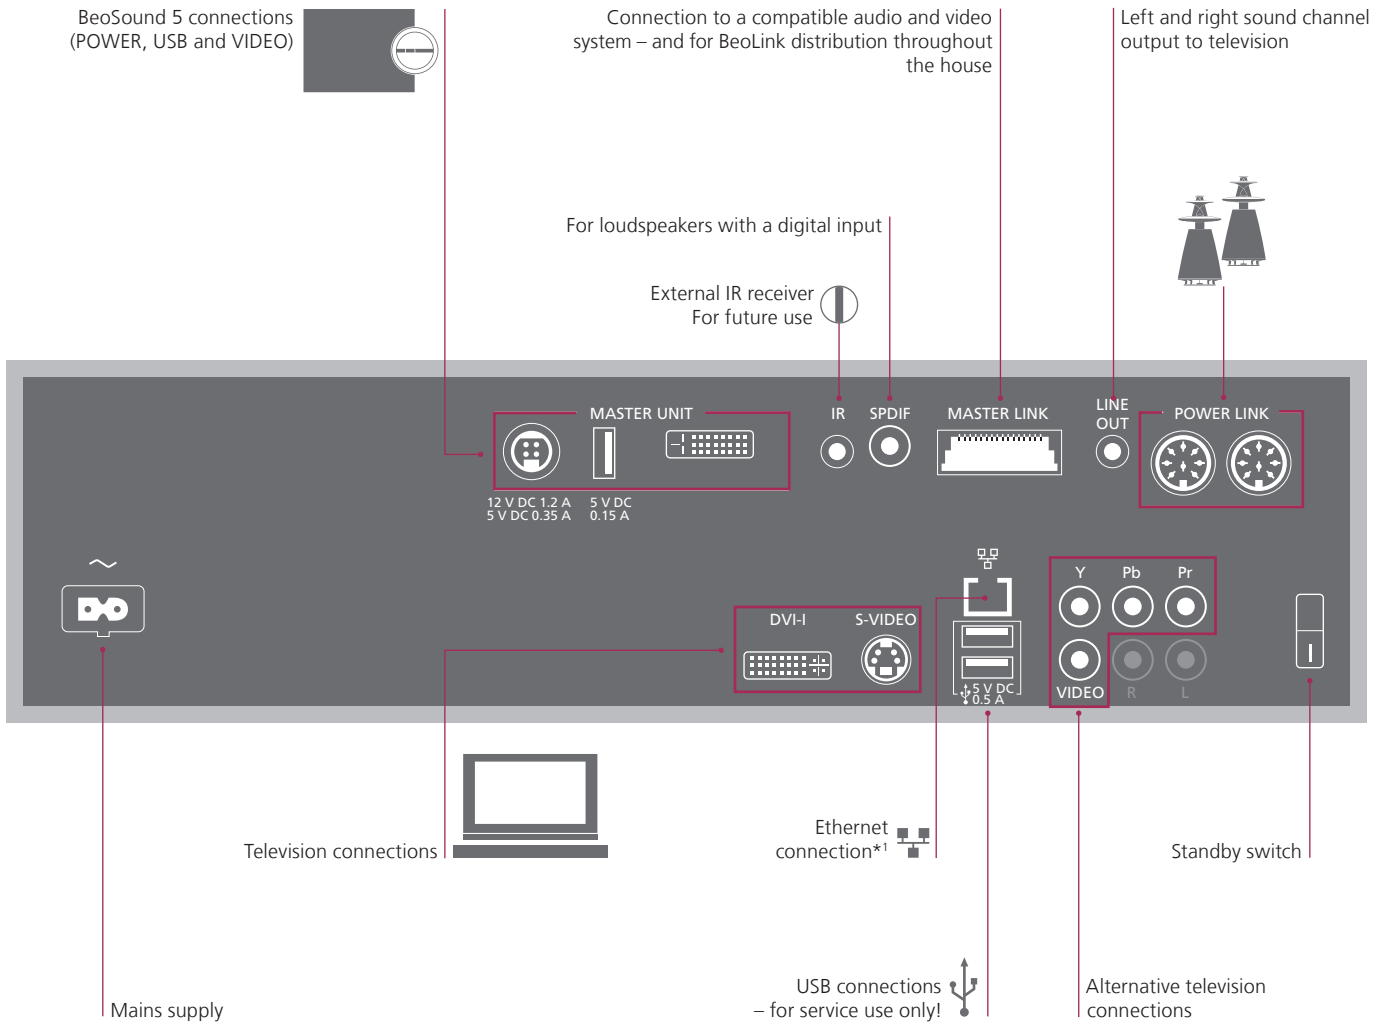

Loudspeakers The Power Link connections are used in BeoSound 5 setups only. In audio/video setups the loudspeakers are connected to the audio or video system.

*¹ NOTE! Only connect to a local area network (LAN) that does not exit your flat, house, or building.

End User Licence Agreement – EULA

On the BeoMaster is an embedded limited edition of Windows XP®. To use this edition, you must read the EULA terms below.

Note that the EULA terms are in English only. No legally correct translation is currently available.

EULA Terms

You have acquired a device, BeoMaster 5, that includes software licensed by AmiTech from Microsoft Licensing, GP or its affiliates. Those installed software products of MS origin, as well as associated media, printed materials, and online or electronic documentation, are protected by international intellectual property laws and treaties. The SOFTWARE is licensed, not sold. All rights reserved.

IF YOU DO NOT AGREE TO THIS END USER LICENSE AGREEMENT EULA, DO NOT USE THE DEVICE OR COPY THE SOFTWARE. INSTEAD, PROMPTLY CONTACT AMITECH FOR INSTRUCTIONS ON RETURN OF THE UNUSED DEVICE; FOR A REFUND. ANY USE OF THE SOFTWARE, INCLUDING BUT NOT LIMITED TO USE ON THE DEVICE, WILL CONSTITUTE YOUR AGREEMENT TO THIS EULA (OR RATIFICATION OF ANY PREVIOUS CONSENT).

GRANT OF SOFTWARE LICENSE. This EULA grants you the following license: You may use the SOFTWARE only on the DEVICE.

NOT FAULT TOLERANT. THE SOFTWARE IS NOT FAULT TOLERANT. AMITECH HAS INDEPENDENTLY DETERMINED HOW TO USE THE SOFTWARE IN THE DEVICE, AND MS HAS RELIED UPON AMITECH TO CONDUCT SUFFICIENT TESTING TO DETERMINE THAT THE SOFTWARE IS SUITABLE FOR SUCH USE.

NO WARRANTIES FOR THE SOFTWARE. THE SOFTWARE is provided AS IS and with all faults. THE ENTIRE RISK AS TO SATISFACTORY QUALITY, PERFORMANCE, ACCURACY, AND EFFORT (INCLUDING LACK OF NEGLIGENCE) IS WITH YOU. ALSO, THERE IS NO WARRANTY AGAINST INTERFERENCE WITH YOUR ENJOYMENT OF THE SOFTWARE OR AGAINST INFRINGEMENT. IF YOU HAVE RECEIVED ANY WARRANTIES REGARDING THE DEVICE OR THE SOFTWARE, THOSE WARRANTIES DO NOT ORIGINATE FROM, AND ARE NOT BINDING ON, MS. No Liability for Certain Damages. EXCEPT AS PROHIBITED BY LAW, MS SHALL HAVE NO LIABILITY FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL OR INCIDENTAL DAMAGES ARISING FROM OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THE SOFTWARE. THIS LIMITATION SHALL APPLY EVEN IF ANY REMEDY FAILS OF ITS ESSENTIAL PURPOSE. IN NO EVENT SHALL MS BE LIABLE FOR ANY AMOUNT IN EXCESS OF U.S. TWO HUNDRED FIFTY DOLLARS (U.S. \$250.00)

Limitations on Reverse Engineering, Decompilation, and Disassembly. You may not reverse engineer, decompile, or disassemble the SOFTWARE, except and only to the extent that such activity is expressly permitted by applicable law notwithstanding this limitation.

SOFTWARE TRANSFER ALLOWED BUT WITH RESTRICTIONS. You may permanently transfer rights under this EULA only as part of a permanent sale or transfer of the Device, and only if the recipient agrees to this EULA. If the SOFTWARE is an upgrade, any transfer must also include all prior versions of the SOFTWARE.

EXPORT RESTRICTIONS. You acknowledge that SOFTWARE is subject to U.S. export jurisdiction. You agree to comply with all applicable international and national laws that apply to the SOFTWARE, including the U.S. Export Administration Regulations, as well as end-user, end-use and destination restrictions issued by U.S. and other governments. For additional information see <http://www.microsoft.com/exporting/>

Always keep copies of your data to ensure that your photos, music files, etc. are not lost in the event of a system or program failure. BeoMaster 5 features an anti-virus program that blocks the most common computer viruses.

Safety copy

It is the responsibility of the user to regularly make safety copies of the data, including but not limited to files, photos, music, etc. It is the responsibility of the user to ensure that this data is available on media which can be immediately transferred back to the BeoMaster or in the event that the BeoMaster is replaced, to the new BeoMaster, and it is the responsibility of the user to reinstall these safety copies when necessary.

A safety copy may be placed on your office computer or any other external devices, such as a portable hard disk, or the data may be copied to CD-roms or DVD discs.

Data must also be safety copied when handing in the BeoMaster for service. Often it will be necessary to format data media as part of the repair and such formatting with the consequential loss of data will take place without notice. Bang & Olufsen cannot be held liable for any loss of data.

Re-installation of data

In case you need to re-install your media collection on the BeoMaster, you must use BeoPlayer, BeoPort or BeoConnect (for MAC users only) software to transfer your collection to the BeoMaster. This ensures that you will not lose the associated tag information.

Anti-virus program







A virus attack can result in system breakdown and loss of important data. In serious cases the BeoMaster may have to be handed in for service. A repair caused by a virus attack is NOT covered by guarantee. The BeoMaster features an anti-virus program. The program protects against the most commonly used hacker programs. The program is automatically updated for a least five years via the Internet provided that the BeoMaster is constantly connected to the Internet. The program is installed to instantly and without notification remove all files containing a virus. Files transferred to the BeoMaster may be deleted as a result.

Bang & Olufsen cannot be held liable for an loss as a consequence of virus attack.

Menus and Symbols

N.MUSIC and views

GO	Source selection
EXIT	Leave mode
GO	Add to playlist
1	Home/Return
2	.
3	Random on/off
4	Show info/Hide info
5	List root
6	Play all/Play group
7	Full Size cover/Track info view
8	Delete
.	
0	Rename

	Playlists
	Genre
	Artists
	Albums
	Titles
	Folders

N.RADIO and views

GO	Source selection
EXIT	Leave mode
GO	Add to playlist
1	Home/Return
2	.
3	.
4	.
5	List root
6	.
7	.
8	Delete
9	Configuration
0	Rename









	Playlists
	Genre
	Language
	Country
	Titles




PHOTO and views

GO	Source selection
EXIT	Leave mode
GO	Add to playlist
1	Home/Return
2	.
3	Slideshow
4	Show info/Hide info
5	List root
6	Rotate right
7	Zoom/Zoom off
8	Delete
9	Configuration
0	Rename

	Playlists
	Dates
	Folders

WEB and views

GO	Source selection
EXIT	Leave mode
GO	Add to bookmark
1	Home/Return
2	.
3	Popup list
4	Previous
5	List root
6	Next
7	.
8	Delete
9	Configuration
0	Rename

	Bookmarks
	History
	Popups

Waste Electrical and Electronic Equipment (WEEE) – Environmental protection



The European Parliament and the Council of the European Union have issued the Waste Electrical and Electronic Equipment Directive. The purpose of the Directive is the prevention of waste of electrical and electronic equipment, and to promote the reuse and recycling and other forms of recovery of such waste. As such the Directive concerns producers, distributors and consumers. The WEEE directive requires that both manufacturers and end-consumers dispose of electrical and electronic equipment and parts in an environmentally safe manner, and that equipment and waste are reused or recovered for their materials or energy. Electrical and electronic equipment and parts must not be disposed of with ordinary household refuse; all electrical and electronic equipment and parts must be collected and disposed of separately. Products and equipment which must be collected for reuse, recycling and other forms of recovery are marked with the pictogram shown.

When disposing of electrical and electronic equipment by use of the collection systems available in your country, you protect the environment, human health and contribute to the prudent and rational use of natural resources. Collecting electrical and electronic equipment and waste prevents the potential contamination of nature with the hazardous substances which may be present in electrical and electronic products and equipment. Your Bang & Olufsen retailer will assist with and advise you of the correct way of disposal in your country.



This product is in conformity with the provisions of the Directives 1999/5/EC and 2006/95/EC.

Acknowledgements and liability



Product names mentioned in this guide may be trademarks or registered trademarks of other companies. Portions utilize Microsoft Windows Media Technologies. Copyright © 1999–2002 Microsoft Corporation. All rights reserved. Microsoft, Windows Media and the Windows Logo are registered trademarks of Microsoft Corporation in the United States and/or other countries.

Please note that Bang & Olufsen will, in no event, be liable for any consequential, incidental or indirect damages arising out of the use or inability to use the software.

