

BeoSound Century is a fascinatingly small yet amazingly powerful music system with built-in speakers and three integrated audio sources: CD player, radio and tape recorder.

BeoSound Century unites it all in a very elegant and individualistic design, which makes the system easy to fit in wherever you want music - either standing in its base, or hanging on the wall in the specially designed wall bracket.

The magic glass door, which slides open whenever you approach the system, combined with easy and convenient operation of the music sources, makes the BeoSound Century music system a pleasure to operate and great fun to play.

**This manual was scanned by
and available FREE at www.lconic-AV.co.uk**

User's guide

This user's guide explains the functions offered by the BeoSound Century music system, and how they are operated on the system.

Remote operation using the Beolink 1000 terminal is also possible. See how on pages 26 - 27.

Complete setting-up and maintenance instructions are found in the separate setting-up guide, which is also enclosed with the system.

Note: The Beolink 1000 terminal, a wall bracket for hanging your BeoSound Century on the wall, and a carrying handle which doubles as an active FM antenna for the system are all available as optional extras at your Bang & Olufsen dealer.

- 4 An invitation to play**
- 6 Principles of operation**
- 8 Buttons and display
- 10 Using the radio**
- 11 Tuning in to radio stations
- 12 Storing your radio programs
- 14 Using the CD player**
- 15 Switching displays
 - Playing tracks in random order
- 16 Using the tape recorder**
- 17 Finding tracks or counter positions
 - Noise reduction
- 18 Instant recording on tape
- 19 Recording a specific track on a CD
 - Cancelling your recording
- 20 Automatic tape reverse function
- 21 Using auxiliary sources**
- 22 Sound adjustment**
- 24 BeoSound Century displays**
- 26 Remote control**

Whenever you approach the BeoSound Century, the glass door slides open, and all the relevant buttons light up in red. You are invited in to play!

Pressing a red button makes the system respond – either by carrying out your instruction, or by making another set of buttons available to you – or both.

In this way, the BeoSound Century engages you in a playful conversation about its music sources: the CD player, the radio, or the tape recorder.

Note: The next page shows the four operational stages in which you may find your BeoSound Century music system.



This manual was scanned by
and available FREE at www.lconic-AV.co.uk

