

BeoVision 8

New software – Supplement

On-screen menus

Your television has been equipped with new software and possibly hardware. This results in new functions and features which are described in this supplement. The supplement only describes major differences compared to the Guide you originally received with your television.

The main changes in your television are in the on-screen menus and menu layout.


| | |
|--------------------|----------------------|
| TUNING | SOUND |
| EDIT CHANNELS | ADJUSTMENT |
| ADD CHANNELS | SPEAKER TYPES |
| AUTO TUNING | SPEAKER DISTANCE |
| MANUAL TUNING | SPEAKER LEVEL |
| FREQUENCY | SOUND SYSTEM |
| CHANNEL NO | PICTURE |
| NAME | BRIGHTNESS |
| FINE TUNE | CONTRAST |
| DECODER | COLOUR |
| TV SYSTEM | TINT |
| SOUND | SIZE |
| SLEEP TIMER | HOR. SIZE |
| PLAY TIMER | VERT. SIZE |
| TIMER ON/OFF | HOR. POSITION |
| CONNECTIONS | VERT. POSITION |
| AV1-AV4 | MENU LANGUAGE |
| HDMI EXPANDER | DANSK |
| LINK TUNING | DEUTSCH |
| FREQUENCY | ENGLISH |
| TV SYSTEM | ESPAÑOL |
| MODULATOR | FRANÇAIS |
| TUNER SETUP | ITALIANO |
| TV TUNER | NEDERLANDS |
| DVB-HD | SVENSKA |

The extended on-screen menu system for the television. The greyed menu items indicate optional extras which may or may not be present in your system.

Your television has been updated with new features.

For general information about remote control operation, refer to the Guide enclosed with your remote control.

Black menus

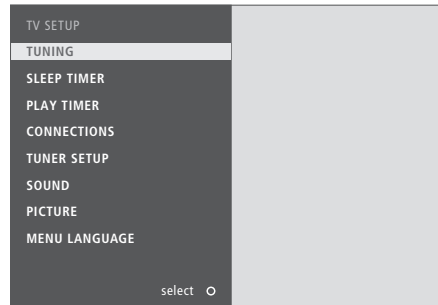

The menus in your television have changed colour and position. The menu background colour is black and the menus have moved from the centre to the left side of the screen.

Instead of black bars on each side of the menu, the television picture is shown to the right.

Sleep Timer

You can set a Sleep Timer which will switch off your TV after a specific period of time.

To activate a Sleep Timer using Beo4 ...

- > Press **LIST** repeatedly to bring up **SLEEP**.^{*1}
- > Press **GO** repeatedly to make your selection.

To deactivate a Sleep Timer using Beo4 ...

- > Press **LIST** repeatedly to bring up **SLEEP**.^{*1}
- > Press **GO** repeatedly until **OFF** is displayed on the screen.

To activate a Sleep Timer using the TV menu ...


- > Press **MENU** to bring up **TV SETUP** menu and press **▼** to highlight **SLEEP TIMER**
- > Press **GO** to bring up the **SLEEP TIMER** menu.
- > Press **GO** repeatedly to make your selection.

To deactivate a Sleep Timer using the TV menu ...

- > Press **MENU** to bring up **TV SETUP** menu and press **▼** to highlight **SLEEP TIMER**
- > Press **GO** to bring up the **SLEEP TIMER** menu.
- > Press **GO** until **OFF** is displayed on the screen.

^{*1}In order to display **SLEEP** on Beo4, you must first add it to the Beo4 list of functions. If **SLEEP** is not available on your Beo4, use the TV menu.

HDMI Expander

| CONNECTIONS | |
|-----------------------------------------------------------------------------------------|-------|
| AV1 | V.MEM |
| AV2 | NONE |
| AV3 | NONE |
| AV4 | NONE |
| HDMI EXPANDER | NO |
| LINK TUNING | |
| store  | |

You have the possibility of adding additional HDMI sources. You can at any time enable or disable an HDMI Expander connected to the HDMI-B socket.

If you set the HDMI EXPANDER in the CONNECTIONS menu to YES, the HDMI-B option in the AV menus is replaced with B1, B2, B3, and B4.

AV1–4 sources

The sources in the AV1–4 menus have changed.

SOURCE ... Select the source you have connected.

The option you select indicates which remote control button switches on the source. For example, a source registered as V.MEM is switched on when you press the VMEM button.

V.MEM ... If you have connected a Bang & Olufsen video recorder or any other video recorder.

DVD ... If you have connected a DVD player or recorder.

DVD2 ... If you have connected a DVD player or recorder.

TV ... If you have connected a set-top box registered as TV.

DTV ... If you have connected a set-top box registered as DTV.

DTV2 (V.AUX) ... If you have connected a set-top box or other equipment registered as DTV2.

V.AUX2 ... If you have connected a video game console.

DECODER ... If you have connected a decoder.

PC ... If you have connected a PC.

NONE ... If no equipment is connected.

If you have a Bang & Olufsen recorder it must be connected to the AV4 socket.

Refer to chapter 'Tuner setup' in the Guide enclosed with your BeoVision for further information.

Register additional equipment

If you connect additional equipment to your television, you must register the equipment in the **CONNECTIONS** menu.

- > Press **MENU** to bring up the **TV SETUP** menu.
- > Press **▼** to highlight **CONNECTIONS**.
- > Press **GO** to bring up the **CONNECTIONS** menu.
- > Press **▲** or **▼** to step between the different socket groups: AV1, AV2, AV3 and AV4.
- > Press **GO** to be able to register a connected product to the highlighted socket group.
- > Press **▲** or **▼** to move between sockets in the group.
- > Press **◀** or **▶** to register what you have connected to the highlighted socket and press **GO**.
- > Press **▲** or **▼** to step between different models.
- > Press **◀** or **▶** to step between different equipment types.
- > Press **GO** to store the selection. **STANDBY OPTIONS** appear if a set-top box is selected.

Press **STOP** to back up through previous menus or press **EXIT** to exit all menus directly.

| SET-TOP BOX | |
|------------------|---------|
| NOKIA 98005/025 | 1 |
| NOKIA D-BOX II | 2 |
| PACE DTR 739-IM | 3 |
| PHILIPS DTX627x | 4 |
| PACE DSR600 | 5 |
| SKY DIGITAL | 6 |
| CANALdig DK/S/N | 7 |
| CANALdigital I | 8 |
| CANALdigital | 9 |
| CANALdigital E | 10 |
| CANALdigital B+ | 11 |
| LYON 1250/97 | 12 |
| TRIAx DV8655 | 13 |
| HUMAX VACI 28349 | 14 |
| SAGEM D-BOX | 15 |
| KATHREIN 515/30 | 16 |
| THOMSON DTI35x | 17 |
| ASTON XENA 1600 | 18 |
| < other | dvd > |
| | store ○ |

| DVD PLAYER/RECORDER | |
|---------------------|---------|
| PANASONIC DVD+R | 1 |
| PANASONIC DVD-R | 2 |
| SAMSUNG D-647R | 3 |
| SONY M358-2R | 4 |
| SONY M400-RX | 5 |
| < stb | vmem > |
| | store ○ |

To switch between sources press **◀** or **▶**.

