

BeoVision Avant – your own Home Theatre

Press just one button on the Beo4 remote control.

The BeoVision Avant video system turns toward you. The curtains slide open, revealing the picture on the screen.

The built-in video tape recorder currently playing your favourite film is placed discreetly inside the chassis. After all, it's what's on the tape that's interesting.

With BeoVision Avant, you have the theatre experience without leaving your living room, much less your home. Add four Bang & Olufsen BeoLab speakers and a BeoLab 2 subwoofer for genuine surround sound.

Contents of the Reference book

To get to know your Bang & Olufsen product, two guides are at your disposal.



To the right, you find the contents of the Reference book. The main chapters of the User's guide are listed below:

- Introducing BeoVision Avant and Beo4, 4
- Watch television, 6
- Turn the TV or adjust sound volume, 7
- Look up Teletext information, 8
- Get access to your favourite Teletext pages, 9
- Load and play a videotape, 10
- Record a programme, 12
- Home Theatre viewing with Avant, 14

Setting up your BeoVision Avant

- 6 Handling your BeoVision Avant
- 6 Placing your TV in your home
- 7 Mounting the base plate
- 7 Overview of displays, close-up operation and connection panels
- 7 Running the cables
- 8 Aerial and mains connections

Loudspeaker connections – surround sound

- 9 Placing loudspeakers
- 10 Connect external speakers
- 11 Set up speaker distance
- 12 Calibrate the sound levels

Connect a set-top box

- 13 AV connection
- 13 IR transmitter

Connect a decoder

- 14 Connect an AV or RF decoder
- 14 Connect two decoders

Connect other equipment

- 15 Extra audio or video equipment

Connect audio and video systems

- 16 Connect your audio system to Avant
- 16 Choose settings

Distribute sound and pictures with BeoLink

- 17 Link systems throughout your home
- 17 The system modulator

Set up BeoVision Avant in a link room

- 18 Before you start...
- 19 Connections
- 19 Link frequency

Register extra equipment

- 20 Equipment connected permanently

Tune in TV or Satellite* channels

- 22 Find available channels

Add new TV or Satellite channels

- 23 Add a new channel

Edit tuned TV or Satellite channels

- 24 Adjust tuned TV channels
- 26 Adjust tuned Satellite channels
- 28 Move tuned channels
- 28 Name tuned channels
- 29 Delete tuned channels

Set the time and date

- 30 Enter settings for the built-in clock

Set positions for viewing and standby

- 31 Preset positions for the TV to turn to

Set your video tape recorder preferences

- 32 Preset recording speed, tape length and track markers

Adjust picture and sound settings

- 34 Change brilliance, colour or contrast
- 35 Change volume, bass, treble or balance

Daily operations

- 36 Select a TV or Satellite channel
- 36 See a channel list
- 37 Adjust viewing position
- 37 Adjust or mute sound volume
- 37 Change sound type or language

