

This guide explains how to make your Bang & Olufsen Set-top Box Controller ready for use and how to operate it in connection with your chosen set-top-box.

The Set-top Box Controller acts as an interpreter between the set-top box of your choice and the Beo4 remote control.

This means that not only can all daily functions of the set-top box be operated by the Beo4 remote control, but you can also place the box out of sight.

The Set-top Box Controller is not dependent on one single programme provider, you can choose between a number of set-top boxes.

In a BeoLink® system, one single set-top box will serve several television sets.


For further information about the Set-top Box Controller, please refer to the following pages...

Contents

- 4 Connecting
- 5 Selecting a set-top box
- 6 Universal Beo4 operation
- 8 Set-top Box Controller menu
- 10 Using Set-top Box Controller in Link room

The Set-top Box Controller is built into your Bang & Olufsen TV set. The external set-top box must be set up according to the documentation enclosed with your set-top box.

Connections between your TV and the set-top box must be made as described on this page.

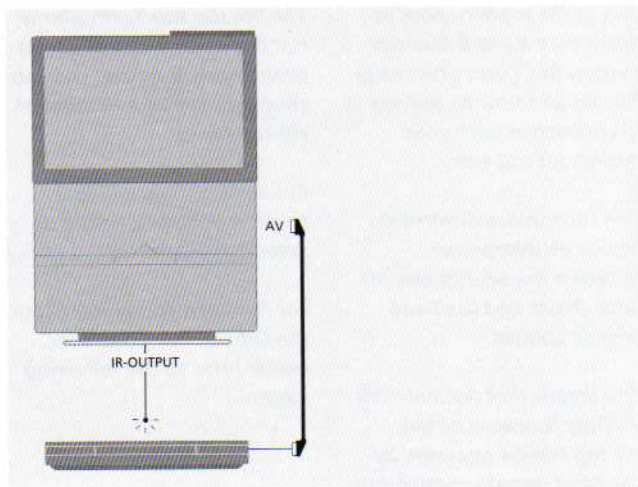

AV connection

Use a 21-pin AV cable to connect the set-top box to your TV. Connect one end to the AV socket on your TV, and the other end to the set-top box.

Note: In some BeoVision Avant TVs, you can connect the set-top box to the DECODER socket, if the AV socket is occupied by other equipment. On a BeoVision Avant without a built-in Video tape recorder, you can use the V.TAPE socket or the DECODER socket if the AV socket is occupied.

IR transmitter

In order to enable remote control operation of your set-top box with the Beo4 you must connect the enclosed low power IR transmitter:

- Connect the IR transmitter to the IR OUTPUT socket on your TV.
- Fasten the IR transmitter to the IR receiver of the set-top box.

When installing the IR transmitter please follow the enclosed instructions.

NOTE! To be able to use the remote control delivered with your set-top box, do not cover its IR receiver entirely.

- 1 CANALdigital DK
- 2 CANAL+Sat TS1
- 3 Lyon 1250/97
- 4 Nokia D-Box
- 5 Nokia 9602S
- 6 Pace DTR730-IM
- 7 Philips DTX6370
- 8 Sky Digital
- 9 Selector
- 10 TPS 96 573DP

Example of a set-top box selection menu. Long set-top box names may be truncated. If the list of set-top boxes covers more than one menu 'page', then press ► to see the next page.

Once the set-top box is connected, you must activate the Set-top Box Controller. Select the set-top box from the set-top box selection menu via your television.

On BeoVision Avant...

Call up the *Setup* menu and find the *Sources* menu. The option *Set-top box* only appears on the menu if a Set-top Box Controller is built into your Avant TV.

On BeoCenter AV5...

Call up the *SETUP* menu and find the *AV SOCKET* menu.

Note: If you wish to use your Set-top Box Controller on your BeoCenter AV5 in a link room, please contact your Bang & Olufsen dealer for specific information about how to activate the set-top box.

How to select a set-top box on BeoVision Avant...

TV Press TV to switch on your TV

MENU Press MENU to call up the main menu

▼ Press until *Setup* is highlighted
then

GO Press GO to call up the *Setup* menu

▼ Press until *Sources* is highlighted
then

GO Press GO to call up the *Sources* menu

▼ Press until *Set-top box* is highlighted
then

GO Press GO to call up the *Set-top box* menu

The Set-top box menu appears...

▲ Press until your set-top box is highlighted
▼ highlighted
then

GO Press GO to store your set-top box

EXIT Press EXIT to leave the menus



Universal Beo4 set-top box operations

You can use the Beo4 buttons shown below to operate functions for all or some of the compatible set-top boxes without calling the Set-top Box Controller menu up on the screen:

0 – 9 Selects program numbers or makes selections in menus

▲ Moves cursor up or
▼ Moves cursor down or activates a 'Now/Next' banner

◀ ▶ Moves cursor

GO Selects and activates a function

STOP Exits or returns to a previous menu or backs up

EXIT Exits menus, enters or exits different modes e.g. radio

Use the coloured buttons as indicated in the menus of your set-top box

- Switch off the set-top box

General set-top box functions

If you know the Beo4 button that activates the function you want, you can call up the function without activating the Set-top Box Controller menu (shown on the next page) first.

Just press GO and the number of the function you want.

Also some functions are always accessible once the set-top box is switched on...


Please note that the Set-top Box controller has a built-in time delay of about two seconds before executing a GO command. In normal use, this is meant to give you adequate time to press number keys or coloured keys. In situations where you are only required to press GO to activate a function, you can avoid the time delay by pressing GO twice in rapid succession instead.

GO Press GO and then
▲ ▲ or ▼ to step up or
▼ down through
programs directly

GO Press GO and then
◀ ▶ ◀ or ▶ while the
set-top box menu is
shown on the screen
to step e.g. between
menu pages or in
program lists

GO Press and hold GO to
bring up the Program
Guide or the Now-
next banner on the
screen depending on
your set-top box

NOTE! In order to make Timer recordings for programmes broadcast via your set-top box, use the Timer recording menu for your video tape recorder, please refer to the User's guide for your video tape recorder for further instructions.

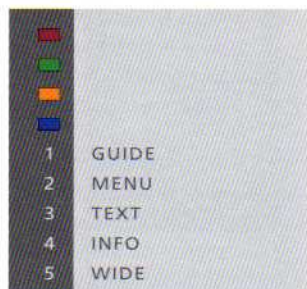

Example of a Set-top Box Controller menu – the menu on your TV screen corresponds to the set-top box you have connected.

Operating Set-top Box Controller

Instead of using the remote control enclosed with your set-top box, you can use your Beo4 remote control.

However, some of the buttons on your set-top box remote control are not immediately available on Beo4. To find out which Beo4 buttons activate specific services or functions in your set-top box, call up the Set-top Box Controller menu on the screen.

The Beo4 buttons are shown to the left on the Set-top Box Controller menu, and the set-top box buttons are shown to the right.

To call up the Set-top Box Controller menu...

SAT Press SAT to switch on the set-top box

MENU Press MENU to call up the Set-top Box Controller menu

If you have a built-in satellite receiver...



LIST Press LIST until ∇ .AUX is displayed

GO Press GO to switch on the set-top box

MENU Press MENU to call up the Set-top Box Controller menu

The Set-top box Controller menu appears...

1 – 9 Press the numerical button which activates the function you want...

  Or, press one of the coloured buttons

NOTE! When the Set-top Box Controller is built into your TV, then press MENU twice to call up your TV main menu.

