


Guide

This manual was scanned by
and available FREE at www.Iconic-AV.co.uk


BANG & OLUFSEN



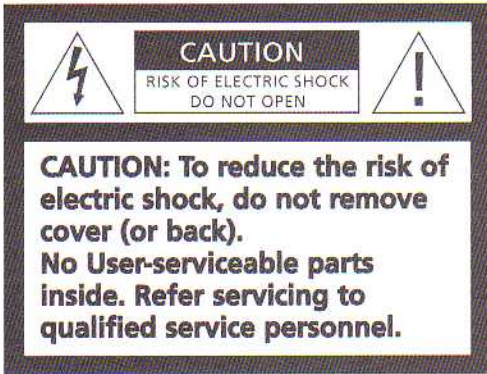


DOLBY, DOLBY DIGITAL, PRO LOGIC
are trademarks of Dolby Laboratories
Licensing Corporation.

WARNING: To prevent fire or electric shock, do not expose this appliance to rain or moisture.

 This symbol indicates that a dangerous voltage constituting a risk of electric shock is present within this unit.

 This symbol indicates that there are important operating and maintenance instructions in the literature accompanying this unit.

This Guide describes how to connect the BeoLab 2 subwoofer, and adapt it so that it functions optimally in your speaker setup.

Likewise, the Guide provides guidelines for how to place the BeoLab 2.

Before you start...

- 4 Cautions
 - NOTE! Read this before you start setting up your BeoLab 2.

Connect your speaker system

- 6 Speaker connections
- 6 Connection to the mains
- 7 Setup examples
 - Dolby Digital system
 - Dolby Pro Logic system
 - Stereo system

Adapt BeoLab 2 to your setup

- 8 Setting the SETUP switch
- 8 Placement guidelines
- 9 Setting the POSITION switch

Daily use

- 10 Switching on and off – indicator
- 10 Loudspeaker protection
- 10 Cleaning BeoLab 2

Before you start...


We recommend that you follow this procedure when setting up the BeoLab 2 subwoofer:

- Read and abide by the cautions on these two pages.
- Disconnect your system from the mains.
- Connect your speaker system as described in *Connect your speaker system*.
- Set the SETUP switch and the POSITION switch to the correct settings as described in *Adapt BeoLab 2 to your setup*.
- Place BeoLab 2 according to the guidelines in *Adapt BeoLab 2 to your setup*.
- Finally, connect your system to the mains.


To make a neat cable installation, we suggest that you run the cables through the enclosed cable cover.

Cautions

- The BeoLab 2 subwoofer is intended for use with Bang & Olufsen active (*Power Link*) loudspeaker systems only – it cannot be used with other speakers.
- Make sure that the BeoLab 2 is placed and connected in accordance with the instructions in this Guide.
- Do not in any way block the free movement of the BeoLab 2 speaker units, and do not apply any force to them, as this may result in permanent damage!
- Place your BeoLab 2 on the floor on its black rubber foot.
- The BeoLab 2 is designed for indoor use in dry, domestic environments only, and for use within a temperature range of 10–40° C (50–105° F).
- Remember that all speakers in a setup must be connected to a mains outlet, and that they are designed to be connected to the mains at all times, as this allows them to switch on automatically.

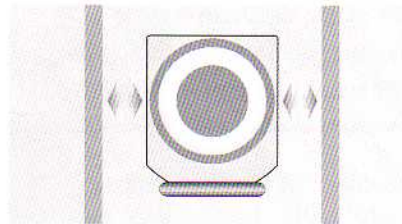


Leave enough space for the speaker units to move – both in front and to the sides of BeoLab 2.

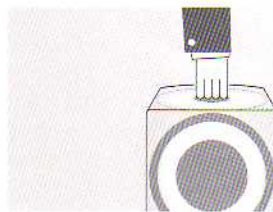

Use the top hole as a carrying 'handle' when you lift BeoLab 2.

Take care not to damage the speaker units, and never lift BeoLab 2 by gripping its sides!

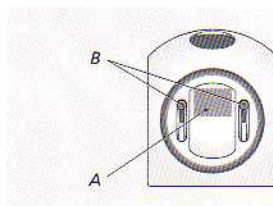

Bottom view of BeoLab 2 showing the location of the product identification label (A).

If you wish to adjust the black rubber foot, place BeoLab 2 upside down and use the two adjustment screws (B).

**This manual was scanned by
and available FREE at www.iconic-AV.co.uk**

